

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029XTF
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: MAINTENANCE: GENERAL MAINTENANCE: UNDER HOOD; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

UNDER HOOD

GENERAL NOTES

- Maintenance requirements vary depending on country.
- Check the maintenance schedule in the owner's manual.
- Following the maintenance schedule is mandatory.
- Determine the appropriate time to service the vehicle using either miles driven or time (months) elapsed, whichever reaches the specification first.
- Maintain similar intervals between periodic maintenance unless noted.
- Failing to check each vehicle part could lead to poor engine performance and increased exhaust emissions.

WINDSHIELD WASHER FLUID

- (a) Check that there is sufficient fluid in the tank.

ENGINE COOLANT LEVEL

- (a) Check that the coolant level is between the "FULL" and "LOW" lines on the see-through reservoir.

INVERTER COOLANT LEVEL

- (a) Check that there is sufficient fluid in the tank.

RADIATOR AND HOSES

- (a) Check that the front of the radiator is clean and not blocked by leaves, dirt or insects.
 (b) Check the radiator and hoses for:

- Damage
- Cracks
- Kinks
- Corrosion
- Rot
- Clogging
- Leaks

AUXILIARY BATTERY ELECTROLYTE LEVEL

- (a) Check that the electrolyte level of all the auxiliary battery cells is between the upper and lower level lines on the case.

HINT:

If the electrolyte level is difficult to see, lightly shake the vehicle.

BRAKE FLUID LEVEL

- (a) Check that the brake fluid level is near the upper level line on the see-through reservoir.

ENGINE OIL LEVEL

- (a) Check that the engine oil level is between the full level and low level marks on the dipstick with the ignition switch off.

HYBRID TRANSAXLE FLUID LEVEL

(a) Check the level of the hybrid transaxle fluid.

for PA10/PB10/PB12: Click here [INFO](#)

for Q810: Click here [INFO](#)

EXHAUST SYSTEM

(a) Visually inspect for severe corrosion, cracks, holes or loose supports.

HINT:

If any change in the sound of the exhaust or smell of the exhaust fumes is noticed, inspect and repair the exhaust system.

