

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002A34R
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> MAINTENANCE: REAR BRAKE FLEXIBLE HOSE: INSTALLATION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSTALLATION

### CAUTION / NOTICE / HINT

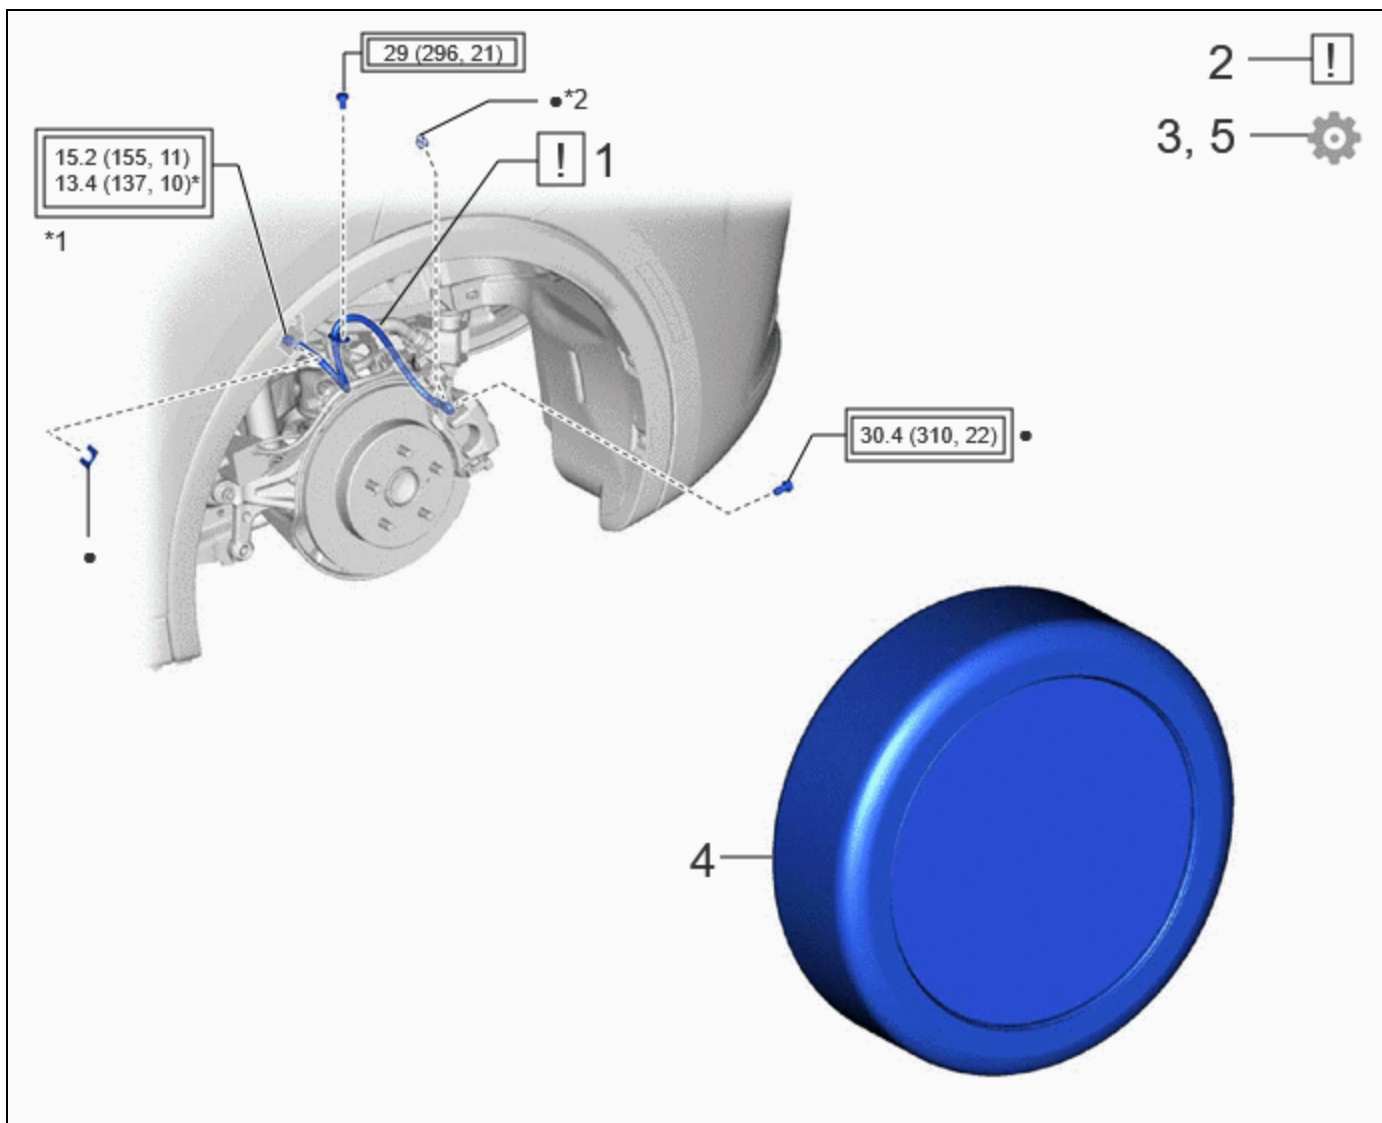
#### NOTICE:




- Because the left and right rear flexible hoses are not interchangeable, verify the part number when installing the rear flexible hoses.
- When reusing the rear flexible hoses, use the identification marks created during removal to install each rear flexible hose to its original position.

 
#### HINT:

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

### COMPONENTS (INSTALLATION)




PROCEDURE		PART NAME CODE			
1	REAR FLEXIBLE HOSE	47319F	INFO	-	-
2	CONNECT CABLE TO NEGATIVE AUXILIARY BATTERY TERMINAL	-	INFO	-	-
3	BLEED BRAKE LINE	-	-	-	INFO
4	REAR WHEEL	-	-	-	-
5	INITIALIZATION AFTER RECONNECTING AUXILIARY BATTERY TERMINAL	-	-	-	INFO

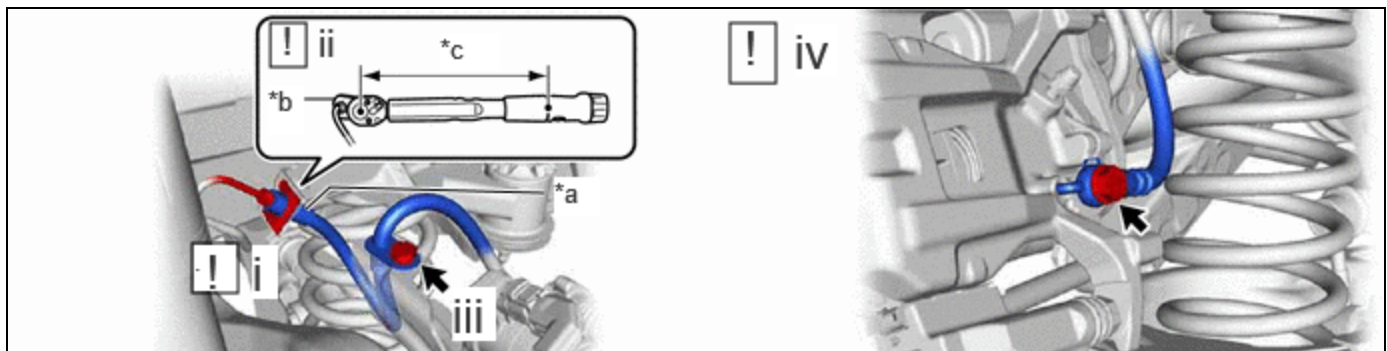
*1	BRAKE LINE	*2	GASKET
	Tightening torque for "Major areas involving basic vehicle performance such as moving/turning/stopping": N*m (kgf*cm, ft.*lbf)	*	For use with a union nut wrench
•	Non-reusable part	-	-

## PROCEDURE

### 1. INSTALL REAR FLEXIBLE HOSE



**NOTICE:**  
When installing the rear flexible hose, minimize twisting of the hose.



*a	Identification Mark	*b	Union Nut Wrench
*c	Torque Wrench Fulcrum Length	-	-

(1) Install the rear flexible hose with a new clip.

**NOTICE:**

Install the clip as far as it will go.

(2) Using a union nut wrench, connect the brake line to the rear flexible hose while holding the rear flexible hose with a wrench.

**Torque:**

**Specified tightening torque :****15.2 N·m {155 kgf·cm, 11 ft·lbf}****NOTICE:**

- Do not kink or damage the brake line.
- Do not allow any foreign matter such as dirt or dust to enter the brake line from the connecting parts.

**HINT:**

- Calculate the torque wrench reading when changing the fulcrum length of the torque wrench.

[Click here](#) **INFO**

- When using a union nut wrench (fulcrum length of 22 mm (0.866 in.)) + torque wrench (fulcrum length of 162 mm (6.38 in.)):

13.4 N·m (137 kgf·cm, 10 ft·lbf)

(3) Install the rear flexible hose with the bolt.

**Torque:****29 N·m {296 kgf·cm, 21 ft·lbf}**

(4) Install the rear flexible hose to the rear disc brake cylinder assembly with a new union bolt and a new gasket.

**Torque:****30.4 N·m {310 kgf·cm, 22 ft·lbf}****NOTICE:**

Install the rear flexible hose lock securely into the lock hole in the rear disc brake cylinder assembly.

**2. CONNECT CABLE TO NEGATIVE AUXILIARY BATTERY TERMINAL**[Click here](#) **INFO****3. BLEED BRAKE LINE**[Click here](#) **INFO****4. INSTALL REAR WHEEL**[Click here](#) **INFO****5. INITIALIZATION AFTER RECONNECTING AUXILIARY BATTERY TERMINAL****HINT:**

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

[Click here](#) **INFO**