

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029YI2
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> POWER DISTRIBUTION: SUB BATTERY SYSTEM: FAIL-SAFE CHART; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## FAIL-SAFE CHART

When the following DTCs are stored in the integrated capacitor (integration control supply), the system enters fail-safe mode.

### Fail-safe Mode

TRANSITION CONDITIONS	FAIL-SAFE CONTENTS	RETURN CONDITIONS
A DTC is stored for the integrated capacitor (integration control supply)	Remote park prohibited	After returning to normal, the ECU is reset after 6 minutes or more by turning off the ignition switch

