Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029YHW
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: POWER DISTRIBUTION: SUB BATTERY SYSTEM: PRECAUTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

PRECAUTION

PRECAUTIONS FOR INSPECTING SUB BATTERY SYSTEM

NOTICE:

- When disconnecting a wire harness of any component connected to the supply power of the integrated capacitor (integration control supply) or when removing the integrated capacitor (integration control supply), make sure to wait 5 minutes or more after turning the ignition switch off for self-diagnosis to complete and the voltage of the integrated capacitor (integration control supply) to discharge.
- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

Click here NFO

HINT:

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

Click here NFO



