

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028VRQ
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> PARK ASSIST / MONITORING: PARKING SUPPORT BRAKE SYSTEM: CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## CUSTOMIZE PARAMETERS

### CUSTOMIZE PARKING SUPPORT BRAKE SYSTEM

(a) Customizing with the GTS.

#### NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

#### Clearance Warning

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
PKSB (O) Function	Parking support brake (static objects) function setting	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (O) Target Stopping Distance	Stop distance status of parking support brake (static objects) function	Far	\$00:Close,\$01:Far	Clearance warning ECU assembly
PKSB Switch State Stored	Setting of the parking support brake system main switch status memory	Stored	\$00:Stored,\$01:Not Stored	Clearance warning ECU assembly
PCS Cooperate Function	Setting of the pre-collision system cooperate function	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (V) Function	Parking support brake (rear crossing vehicles) function setting	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (V) Operation Timing Setting	Displays the operation timing setting of the parking support brake (rear crossing vehicles) function	Standard	\$00:Late,\$01:Standard	Clearance warning ECU assembly

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
PKSB (V) Sensitivity	Displays the sensitivity setting of the parking support brake (rear crossing vehicles) function	Standard	\$00:Standard,\$01:Low	Clearance warning ECU assembly
PKSB (P) Function	Setting of the parking support brake (rear pedestrians) function	ON	\$00:ON,\$01:OFF	Clearance warning ECU assembly
PKSB (P) Target Stopping Distance	Parking support brake (rear pedestrians) function target stopping distance	Normal	\$00:Close,\$01:Normal	Clearance warning ECU assembly
PKSB (P) Width Adjustment (Y Axis)	Setting of the sensitivity of the parking support brake (rear pedestrians) function	Normal	\$00:Narrow,\$01:Normal	Clearance warning ECU assembly
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSB (O) Main Switch	Switches the PKSB (O) function on and off.	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

**Driver 1**

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

**Driver 2**

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

**Driver 3**

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

**Guest**

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Clearance Warning Buzzer Volume	Sets the volume of the clearance warning buzzer	Volume2	\$01:Volume1,\$02:Volume2,\$03:Volume3	Clearance warning ECU assembly
PKSA (O) Main Switch	Intuitive parking assist system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
PKSB (O) Main Switch	Parking support brake system main switch	ON	\$00:OFF,\$01:ON	Clearance warning ECU assembly

(b) Customizing with multi-information display

**NOTICE:**

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

(1) Select the setting by referring to the table below.

**Parking Support Brake**

DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Parking Support Brake function	Setting of ON/OFF of the parking support brake system	ON	ON/OFF	Clearance warning ECU assembly

