

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BJFB
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: METER / GAUGE / DISPLAY: METER / GAUGE SYSTEM: CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

CUSTOMIZE PARAMETERS

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

CUSTOMIZE METER / GAUGE SYSTEM

(a) Customizing with the GTS

(1) Select the setting by referring to the table below.

HINT:

Depending on the specifications of the vehicle, some items may not be displayed.

Warning

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Lane Change Flashing Times Adjust	Function to change the lane change flashing times.	3	\$00:OFF,\$01:3,\$02:4,\$03:5,\$04:6,\$05:7	Combination meter assembly
Flasher Sound Volume Adjust	Function to change the turn signal flasher buzzer sound volume	Medium	\$02:Large,\$00:Medium,\$01:Small	Combination meter assembly
Proposal Services Function	Function to change the suggestion function display setting	ON	\$00:OFF,\$01:Parked,\$03:ON	Main body ECU (Multiplex network body ECU)
Reverse Buzzer Setting	Function to change the reverse buzzer setting	Mute	\$00:Mute,\$01:Continual	Combination meter assembly

Display

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
ODO Display Time After IG OFF Adjust	Function to change the trip result display time after the ignition switch is turned off	30s	\$00:30s,\$01:60s,\$02:600s,\$03:OFF	Combination meter assembly

(b) Customizing with the multi-display

(1) Enter the following menus: MENU / Setup / Vehicle / Vehicle customization.

(2) Select the setting by referring to the table below.

DISPLAY	DEFAULT	CONTENT	SETTING	RELEVANT ECU
Suggestion Function	On	Function to change the suggestion function display setting	On/On (when the vehicle is stopped)/Off	Main body ECU (Multiplex network body ECU)

(c) Customizing with the multi-information display

(1) Select the settings tab on the multi-information display.

(2) Select the setting by referring to the table below.

NOTICE:

- When the cable is disconnected from the negative (-) auxiliary battery terminal, some of the settings will be reset. Therefore, it is necessary to make a note of each set value before disconnecting the cable.
- As some values cannot be selected when the vehicle is being driven, perform the procedure with the vehicle stopped.

HINT:

Depending on the specifications of the vehicle, some items may not be displayed.

Lane Departure Alert System

DISPLAY	DESCRIPTION	SETTING	ECU
Lane Departure Alert System	Lane departure alert system setting	ON/OFF	Forward recognition camera
Alert Options	Lane departure alert method setting	Steering vibration/buzzer	
Alert Timing	Lane departure alert timing level setting	1/2	

BSM

DISPLAY	DESCRIPTION	SETTING	ECU
-	Blind spot monitor system setting	ON/OFF	Blind spot monitor sensor LH (B)
Support timing	Change Support Timing	1/2/3	
Brightness	Outer rear view mirror indicator brightness level setting	1/2	

PCS

DISPLAY	DESCRIPTION	SETTING	ECU
Warning timing	Change Warning Timing	1/2/3	Forward recognition camera
PCS	Pre-collision system setting	ON/OFF	

PDA

DISPLAY	DESCRIPTION	SETTING	ECU
-	PDA system setting	ON/OFF	Forward recognition camera
Sensitivity	Change Sensitivity	1/2/3	
SA	System ON/OFF	ON/OFF	
DA	System ON/OFF	ON/OFF	
OAA	System ON/OFF	ON/OFF	

Parking Assist

DISPLAY	DESCRIPTION	SETTING	ECU
-	TOYOTA parking assist-sensor system setting	ON/OFF	Clearance warning ECU assembly
Parking Assist System Volume	Clearance warning buzzer volume level setting	3 levels	

RCTA

DISPLAY	DESCRIPTION	SETTING	ECU
-	RCTA function setting	ON/OFF	Blind spot monitor sensor LH (B)
Parking Assist System Volume	RCTA buzzer (blind spot monitor buzzer) volume setting	1/2/3	

RCD

DISPLAY	DESCRIPTION	SETTING	ECU
-	RCD function setting	ON/OFF	Rear Television Camera Assembly

PKSB

DISPLAY	DESCRIPTION	SETTING	ECU
-	PKSB function setting	ON/OFF	Clearance warning ECU assembly

SEA

DISPLAY	DESCRIPTION	SETTING	ECU
-	Safe Exit Assist system setting	ON/OFF	Blind spot monitor sensor LH (B)
Sensitivity	Change Sensitivity	1/2/3	
Mirror indicate	Door mirror indicator setting	ON/OFF	

RSA

DISPLAY	DESCRIPTION	SETTING	ECU
-	Road sign assist system setting	ON/OFF	Forward recognition camera

DISPLAY		DESCRIPTION	SETTING	ECU
Notification Method	Above Speed Limit	Excess speed notification method setting	No Notification/Only Visual/Visual & Audio	
	Others	Others traffic sign notification method setting	No Notification/Only Visual/Visual & Audio	
Notification Level		Excess speed notification level setting	10 km/h (5 MPH), 5 km/h (3 MPH), 2 km/h (1 MPH)	

DRCC/Speed Limiter

DISPLAY	DESCRIPTION	SETTING	ECU
Acceleration Setting	Acceleration Setting Low/Mid/High	1/2/3	ECM
Speed Setting (Push)	Speed Setting (Push) +/-1, +/-5, +/-10	+/-1, +/-5, +/-10	
Speed setting (Hold)	Speed Setting (Hold) +/-1, +/-5, +/-10	+/-1, +/-5, +/-10	
Guide message	System ON/OFF	ON/OFF	
Curve Speed Reduction	Curve Speed Reduction System OFF/Low/Mid/High	1/2/3	

Vehicle Settings

DISPLAY		DESCRIPTION	SETTING	ECU
Charging Settings	Charging Schedule	Setting the timer charging	<ul style="list-style-type: none"> Charge Now Scheduled Events Next Event 	Electric vehicle charger assembly
	Charging Current	Changing the upper limit of the charging current	MAX/16A/8A	
	Connector Lock	Changing the charging connector lock settings	Auto Lock/Auto Lock & Unlock/OFF	
	Battery Cooler	Setting "HV Supply Battery Cooler" on/off.	ON/OFF	Battery ECU assembly
	Battery Heater	Setting "HV Supply Battery Heater" on/off.	ON/OFF	
Electric Supply		Setting the power supply method	Electric/Hybrid	Battery ECU assembly
Driver Break Suggestion		Driver Break Suggestion ON/OFF	ON/OFF	Combination meter assembly
LCA		LCA ON/OFF	ON/OFF	Forward recognition camera
FCTA	FCTA	FCTA setting	ON/OFF	Forward recognition camera
	Timing	timing setting	3 levels	
TPWS setting	Tire Set Switching	Register replaced valve / ID	-	Tire Pressure Warning ECU and Receiver

DISPLAY		DESCRIPTION	SETTING	ECU
	Tire Rotation	Reset tire location	-	
	Tire Pressure Setting	Set tire warning pressure	-	
	Pressure unit setting	Change display units	-	
Driver Monitor Settings	Driver Monitor Alert	Alert notification settings	ON/OFF	Driver Monitor ECU Assembly
	Drowsiness Alert	Notification settings for drowsiness alert notifications	ON/OFF	
Regenerative Brake	Deceleration	Deceleration settings	1/2/3	Hybrid Vehicle Control ECU
	Deceleration Memory	Deceleration memory settings	ON/OFF	
PBD	System Settings	Hands free power back door function setting	ON/OFF	Multiplex network door ECU
	Opening Adjustment	Back door opening stop position setting when operated by power back door system	5 levels	
	Volume	Power back door buzzer volume level setting	3 levels	
Scheduled Maintenance		Scheduled maintenance data reset	Yes/No	ECM
Oil Maintenance		Engine oil maintenance required reminder data reset	Yes/No	ECM
Rear Seat Reminder		Rear seat reminder function setting	ON/OFF	Main body ECU (Multiplex network body ECU)
My settings	setting	Change Driver and Settings	-	Main body ECU (Multiplex network body ECU)
	function	Setting of my settings function	ON/OFF	

Meter Settings

DISPLAY		DESCRIPTION	SETTING	ECU
Language		Display language setting	*	Related ECUs
Units		Display units setting	*	
Meter Type		Meter Type setting	ON/OFF	Combination meter assembly
Eco driving indicator light		Eco driving indicator light display setting	ON/OFF	
EV Drive Information		EV drive information setting	EV Energy remaining/EV Distance remaining	
Eco-friendly driving information tab	Hybrid System	Eco Guidance	Display setting in eco-friendly driving information tab	ON/OFF

DISPLAY		DESCRIPTION	SETTING	ECU	
	Fuel Economy	Displayed fuel economy display item setting	Trip Average/Total Average/Tank Average		
	Power Consumption	Calculated value setting for electricity consumption information	Trip Average/Total Average		
Audio tab		Audio tab display setting	ON/OFF		
Drive Information	Display Contents	AWD	AWD system ON/OFF		ON/OFF
	Drive Info Type	Displayed drive information display item setting	Trip/Total		
	Drive Info Items	Displayed drive information display item setting	Average Speed/Distance/Total Time		
Trip Summary		Current trip result display setting	Drive Info/Charging Schedule		
Pop-Up Display	TbT Navigation	Interrupt display setting	ON/OFF		
	Telephone	Interrupt display setting	ON/OFF		
	Audio Operation	Interrupt display setting	ON/OFF		
	Volume Operation	Interrupt display setting	ON/OFF		
	Voice Control	Interrupt display setting	ON/OFF		
	Brightness	Interrupt display setting	ON/OFF		
Calendar		Date setting	-		
Default Settings		Reset the combination meter settings to the default setting	Yes/No		Related ECUs

*: Varies according to the vehicle specification.

