

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029I6A
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SEAT BELT: SEAT BELT WARNING SYSTEM (w/ Occupant Classification System): CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

CUSTOMIZE PARAMETERS

CUSTOMIZE SEAT BELT WARNING SYSTEM

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.
- These buzzers should be on for safe driving. Perform this procedure only if it is necessary to set the buzzer to off (disabled).

HINT:

The following items can be customized.

(a) Customizing with the GTS

- (1) Connect the GTS to the DLC3.
- (2) Turn the ignition switch to ON.
- (3) Turn the GTS on.
- (4) Enter the following menus: Customize Setting / Warning.
- (5) Select the setting by referring to the table below.

Warning

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Driver Seatbelt Warning Buzzer Function	Enables sounding of the driver seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Passenger Seatbelt Warning Buzzer Function	Enables sounding of the front passenger seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Rear Right Seatbelt Warning Buzzer Function	Enables sounding of the rear RH seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Rear Left Seatbelt Warning Buzzer Function	Enables sounding of the rear LH seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Rear Center Seatbelt Warning Buzzer Function	Enables sounding of the rear center seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly

HINT:

These settings are only valid when the vehicle is driven at approximately 20 km/h (12 mph) or more.

