Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002A14X	
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]	
Title: LIGHTING (EXT): LIGHTING SYSTE	M: CUSTOMIZE PARAMETERS	5; 2023 - 2024 MY Prius Prius Prime [12/2022 -]

CUSTOMIZE PARAMETERS

CUSTOMIZE LIGHTING SYSTEM (EXT)

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

HINT:

The following items can be customized.

- (a) Customizing with the GTS
 - (1) Enter the following menus: Customize Setting / Light Control, Warning or Illuminated Entry.
 - (2) Select the setting by referring to the table below.

Light Control

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Tail Remind Buzzer Function	Sounds a buzzer when the driver door is opened with the light control switch in the tail or head position.	Enable	\$00:Disable,\$01:Enable	Main Body ECU (Multiplex Network Body ECU)
Headlight ON in Conjunction with Wiper Function	Turns the low beam headlights on/off according to wiper operation.*1	Enable	\$00:Disable,\$01:Enable	Main Body ECU (Multiplex Network Body ECU)
Brightness Level Adjust (Lowering)	Changes the ambient brightness level required to dim the lights such as the indicator lights of the combination meter, A/C indicator light and clock.*A	Normal	\$00:Normal,\$01:Dark2,\$02:Dark1,\$03:Light1,\$04:Light2	Main Body ECU (Multiplex Network Body ECU)
Brightness Level Adjust (Canceling)	Changes the ambient brightness level required to cancel the dimming of the lights such as the indicator lights of the combination meter, A/C indicator light and clock.*B	Normal	\$00:Normal,\$01:Dark2,\$02:Dark1,\$03:Light1,\$04:Light2	Main Body ECU (Multiplex Network Body ECU)

\$00:OFF,\$01:30sec,\$02:60sec,\$03:90sec

\$00:Disable,\$01:Enable

TESTER

DISPLAY

Sensitivity

Adjust

Light Auto OFF

Delay Setting

DRL Function

1	l: CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12,	/2022 -]
	SETTING	ECU
	\$01:Dark2,\$02:Dark1,\$00:Normal,\$03:Light1,\$04:Light2	Main Body ECU (Multiplex Network Body ECU)
		Main Body

ECU

(Multiplex

Network

Body ECU)

Main Body ECU

(Multiplex

Network Body ECU)

*1: w/	Wiper-linked	Low Beam	Headlight	Control	System
--------	--------------	----------	-----------	---------	--------

DESCRIPTION

Adjusts the sensitivity of

the automatic light control

system.*C

Keeps the headlights on for a certain period of time

after turning the ignition

switch off and closing all of

doors with the low beam

headlights on.*2

Turns the DRL function

on/off.*3

DEFAULT

Normal


30 s

Enable

HINT:

The sensitivity adjustment may be difficult to confirm. Check by driving the vehicle.

*A

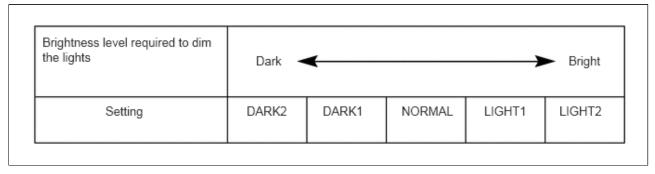


*В

Brightness level required to cancel the dimming of the lights	Dark ⊸	-			► Bright
Setting	DARK2	DARK1	NORMAL	LIGHT1	LIGHT2

^{*2:} w/ Delay Function

^{*3:} for vehicles with customize setting "DRL Function"

*C

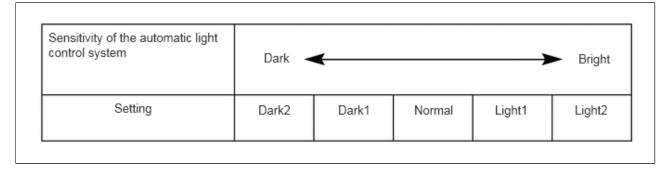

Warning

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Lane Change Flashing Times Adjust	Function to change the lane change flashing times.	3	\$00:OFF,\$01:3,\$02:4,\$03:5,\$04:6,\$05:7	Combination Meter Assembly

- (b) Customizing with the multi-display
 - (1) Enter the following menus:

Settings (icon) / Vehicle customize

HINT:

Depending on the specifications of the vehicle, some items may not be displayed.

(2) Select the setting by referring to the table below.

DISPLAY	DEFAULT	CONTENT	SETTING	RELEVANT ECU
Headlights Auto- on Sensitivity	Normal	Adjusts the sensitivity of the automatic light control system.*A		Main Body ECU (Multiplex Network Body ECU)
Headlights Auto- off Timer*1	30 sec.	Keeps the headlights on for a certain period of time after turning the ignition switch off and closing all of doors with the low beam headlights on.	()tt 3() sec 6()	Main Body ECU (Multiplex Network Body ECU)
Daytime Running Lights*2	On	Turns the DRL function on/off.		Main Body ECU (Multiplex Network Body ECU)

^{*1:} w/ Delay Function

HINT:

The sensitivity adjustment may be difficult to confirm. Check by driving the vehicle.

^{*2:} for vehicles with customize setting "Daytime Running Lights"



Sensitivity of the automatic light control system	Dark ⊸	←			➤ Bright
Setting	-2	-1	0	+1	+2



