

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029C1K
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> ADVANCED PARK: ADVANCED PARK: CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## CUSTOMIZE PARAMETERS

### CUSTOMIZE ADVANCED PARK

(a) Customize using radio and display receiver assembly

#### NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

(1) Turn the ignition switch to ON.

(2) Turn the IPA main switch assembly on.

(3) On the radio and display receiver assembly, enter the following menus: Advanced Park.

DISPLAY	MEASUREMENT ITEM	DEFAULT	SETTING	ECU
Speed Profile	Sets the vehicle speed during parking assist	Standard	Slow, Standard, Fast	Clearance warning ECU assembly
Obstacle Detection Range	Sets the obstacle avoidance distance during parking assist	Standard	Standard, Far	Clearance warning ECU assembly
Preferred Parking Method	Sets the parking method to be prioritized for display when both perpendicular parking and parallel parking are possible	Parallel	Back-in, Parallel	Clearance warning ECU assembly
Road Width Adjustment*	Sets the road width to be used by the vehicle during parking assist	0	-3, -2, -1, 0, +1, +2, +3	Clearance warning ECU assembly
Clear Registered parking lot	Setting of Clear Registered parking lot display	Standard	Standard, Slightly Narrow, Narrow	Clearance warning ECU assembly
Preferred Parking Direction	Setting of preferred parking direction display	Back	Back / progress	Clearance warning ECU assembly
Camera View When Parking	Setting of the image displayed when parking	Normal	Wide / Normal	Clearance warning ECU assembly
Camera View When Exiting	Setting of image displayed when parking	Normal	Wide / Normal	Clearance warning ECU assembly
Prior park in direction	Setting of Prior park in direction	forward	forward / reverse	Clearance warning ECU assembly

\*: If set to Slightly Narrow or Narrow, the number of times the tires must be turned may increase

DISPLAY	MEASUREMENT ITEM	DEFAULT	SETTING	ECU
Prior park out direction (Perpendicular)	Setting of Prior park out direction (Perpendicular)	left	left / right	Clearance warning ECU assembly
Prior park out direction (Parallel)	Setting of Prior park out direction (Parallel)	left	left / right	Clearance warning ECU assembly
Rear Accessory Setting	Setting of length of component installed to rear of vehicle	0	+10cm to +40cm	Clearance warning ECU assembly
Park Position Adjustment(fwd.)	Setting of Park Position Adjustment(fwd.)	0	+20 to +60cm/-20cm to -60cm	Clearance warning ECU assembly
Park Position Adjustment (rev.)	Setting of Park Position Adjustment (rev.)	0	+20 to +60cm/-20cm to -60cm	Clearance warning ECU assembly

\*: If set to Slightly Narrow or Narrow, the number of times the tires must be turned may increase

