

|   |                           |                                      |
|---|---------------------------|--------------------------------------|
| <b>Last Modified:</b> 12-04-2024  | 6.11:8.1.0                | <b>Doc ID:</b> RM100000029H5X        |
| <b>Model Year Start:</b> 2023   | <b>Model:</b> Prius Prime | <b>Prod Date Range:</b> [12/2022 - ] |
| <b>Title:</b> STEERING COLUMN: HEATED STEERING WHEEL SYSTEM: FAIL-SAFE CHART; 2023 - 2024 MY Prius Prius Prime [12/2022 - ] |                           |                                      |

## FAIL-SAFE CHART

### FAIL-SAFE FUNCTION

(a) Operation when a malfunction is detected

| CONTENT  | OPERATION         |
|--|-------------------|
| A thermistor malfunction (open) is detected        | Heater output off |
| A thermistor malfunction (short) is detected       | Heater output off |
| A heater malfunction is detected                   | Heater output off |
| An abnormally high voltage malfunction is detected | Heater output off |
| An abnormally low voltage malfunction is detected  | Heater output off |
| A communication malfunction is detected            | Heater output off |
| A malfunction is detected during the initial check | Heater output off |

