

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029H5U
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> STEERING COLUMN: HEATED STEERING WHEEL SYSTEM: HOW TO PROCEED WITH TROUBLESHOOTING; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## HOW TO PROCEED WITH TROUBLESHOOTING

## CAUTION / NOTICE / HINT

### HINT:

Use these procedures to troubleshoot the heated steering wheel system.

## PROCEDURE

### 1. VEHICLE BROUGHT TO WORKSHOP

### NEXT



### 2. INSPECT AUXILIARY BATTERY VOLTAGE

(a) Measure the auxiliary battery voltage with the power switch off.

Standard voltage:

11 to 14 V (Power switch off)

If the voltage is below 11 V, replace or recharge the auxiliary battery before proceeding to the next step.

### NEXT



### 3. PROBLEM SYMPTOMS TABLE

### HINT:

Refer to Problem Symptoms Table.

Click here [INFO](#)

### NEXT



<b>4.</b>	<b>REPAIR OR REPLACE</b>
-----------	--------------------------

**NEXT**



<b>5.</b>	<b>CONFIRMATION TEST</b>
-----------	--------------------------

**NEXT**  **END**

