

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028NQD
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> TIRE PRESSURE MONITORING: TIRE PRESSURE WARNING SYSTEM: PRECAUTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## PRECAUTION

### PRECAUTION FOR DISCONNECTING CABLE FROM NEGATIVE AUXILIARY BATTERY TERMINAL

#### NOTICE:

- After the power switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

[Click here](#) 

#### HINT:

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

[Click here](#) 

### PRECAUTIONS FOR REMOVAL, INSTALLATION AND REPLACEMENT OF COMPONENTS

- (a) After replacing certain components, it may be necessary to update the ECU security key.

[Click here](#) 

### TIRE PRESSURE WARNING ECU AND RECEIVER EXPRESSIONS

- (a) The type of tire pressure warning ECU and receiver used on this model differs according to the specifications of the vehicle. The expressions listed in the table below are used in this section.

PART NAME IN MANUAL	ACTUAL PART NAME
Tire pressure warning ECU and receiver	Electrical key and TPMS receiver assembly
TPMS is an abbreviation for Tire Pressure Monitoring System.	

