


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028NQJ
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: TIRE PRESSURE MONITORING: TIRE PRESSURE WARNING SYSTEM: TERMINALS OF ECU; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

TERMINALS OF ECU

CHECK TIRE PRESSURE WARNING ECU AND RECEIVER

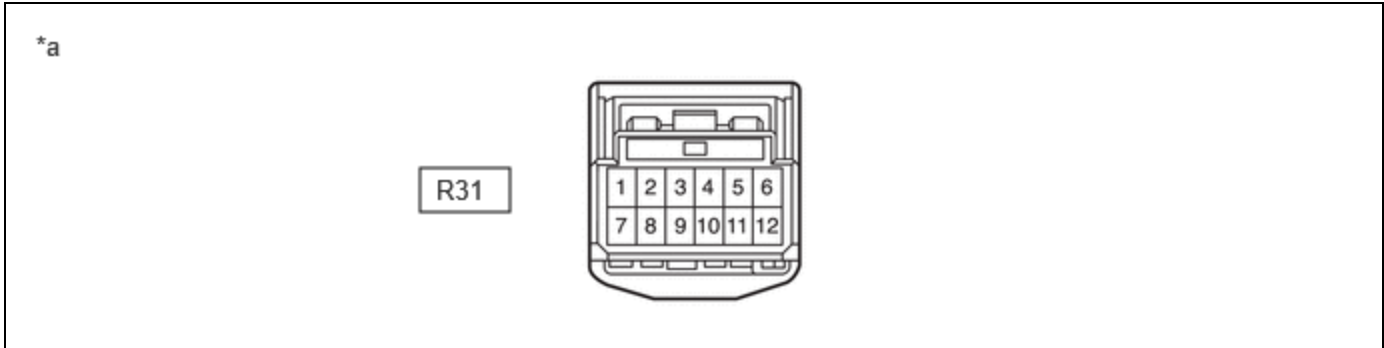

*a	Front view of wire harness connector (to Tire Pressure Warning ECU and Receiver)	-	-
----	--	---	---

(a) Disconnect the tire pressure warning ECU and receiver connector and measure the voltage or resistance on the wire harness side.

TERMINAL NO. (SYMBOL)	TERMINAL DESCRIPTION	CONDITION	SPECIFIED CONDITION
R31-1 (IGR) - R31-12 (GND)	IG power source	Power switch ON (IG)	10.5 to 16 V
R31-7 (+B) - R31-12 (GND)	Power supply (from auxiliary battery)	Always	10.5 to 16 V
R31-9 (CANH) - R31-10 (CANL)	CAN communication line	Power switch OFF	54 to 69 Ω
R31-12 (GND) - Body ground	Ground	Always	Below 1 Ω

