

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028NQS
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: TIRE PRESSURE MONITORING: TIRE PRESSURE WARNING SYSTEM: Tire Pressure Warning Light Circuit; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

Tire Pressure Warning Light Circuit

DESCRIPTION

- If the tire pressure warning ECU and receiver detects any problems, the tire pressure warning light blinks for 1 minute then illuminates, and tire pressure monitoring is disabled at the same time.

CAUTION / NOTICE / HINT

NOTICE:

- When replacing the tire pressure warning ECU and receiver, first use the GTS to record all of the current IDs and registered tires with transmitters (4 or 5 tires) of the tire pressure warning valve and transmitter registered to the tire pressure warning ECU and receiver.
- It is necessary to perform initialization [INFO](#) after registration [INFO](#) of the transmitter IDs into the tire pressure warning ECU and receiver if the ECU has been replaced.

PROCEDURE

1. CHECK FOR DTC (CAN COMMUNICATION SYSTEM)

(a) Check if CAN communication system DTCs are output.

Click here [INFO](#)

RESULT	PROCEED TO
DTCs are not output.	A
DTCs are output.	B

B  **GO TO CAN COMMUNICATION SYSTEM**

A


2. CHECK COMBINATION METER ASSEMBLY

(a) Inspect the combination meter assembly.

Click here 

OK  **REPLACE TIRE PRESSURE WARNING ECU AND RECEIVER** 

NG  **GO TO METER / GAUGE SYSTEM** 

