


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002B4JH
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: DOOR / HATCH: FUEL LID OPENER MOTOR ASSEMBLY: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		



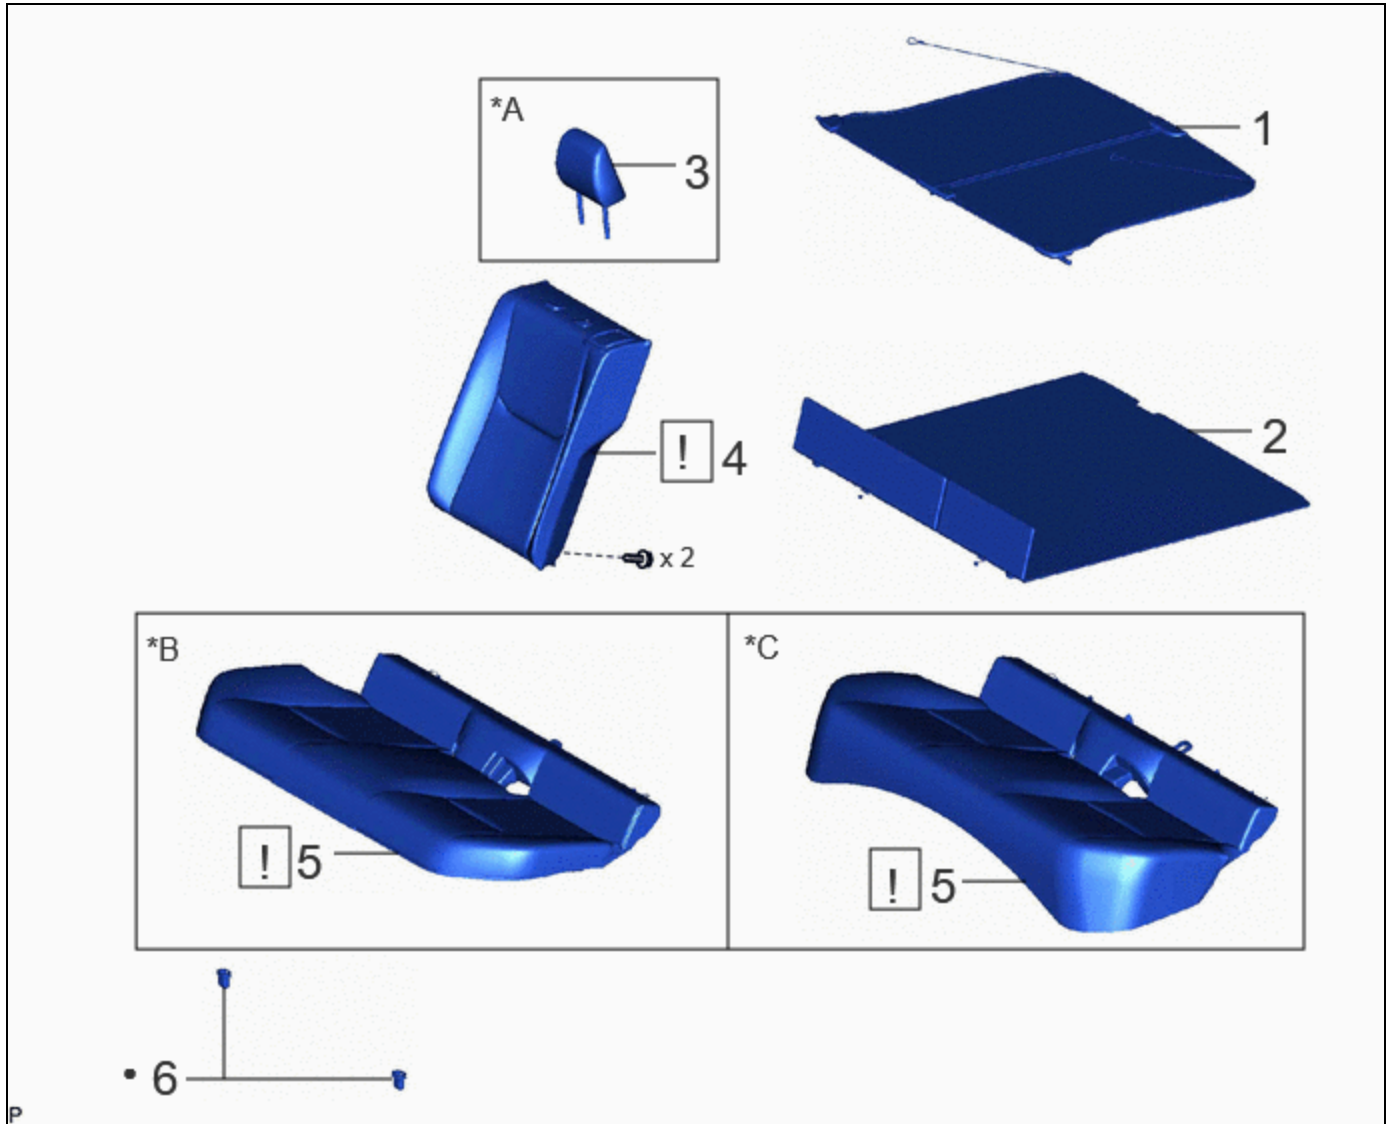


REMOVAL

CAUTION / NOTICE / HINT


COMPONENTS (REMOVAL)






	PROCEDURE	PART NAME CODE	!	✍	⚙
1	TONNEAU COVER ASSEMBLY	64910J	-	-	-
2	DECK BOARD ASSEMBLY	58410B	-	-	-


PROCEDURE		PART NAME CODE			
3	REAR SEAT HEADREST ASSEMBLY	71940A	-	-	-
4	REAR SEATBACK ASSEMBLY LH	-		-	-
5	REAR SEAT CUSHION ASSEMBLY	-		-	-
6	REAR SEAT CUSHION LOCK HOOK	72693	-	-	-

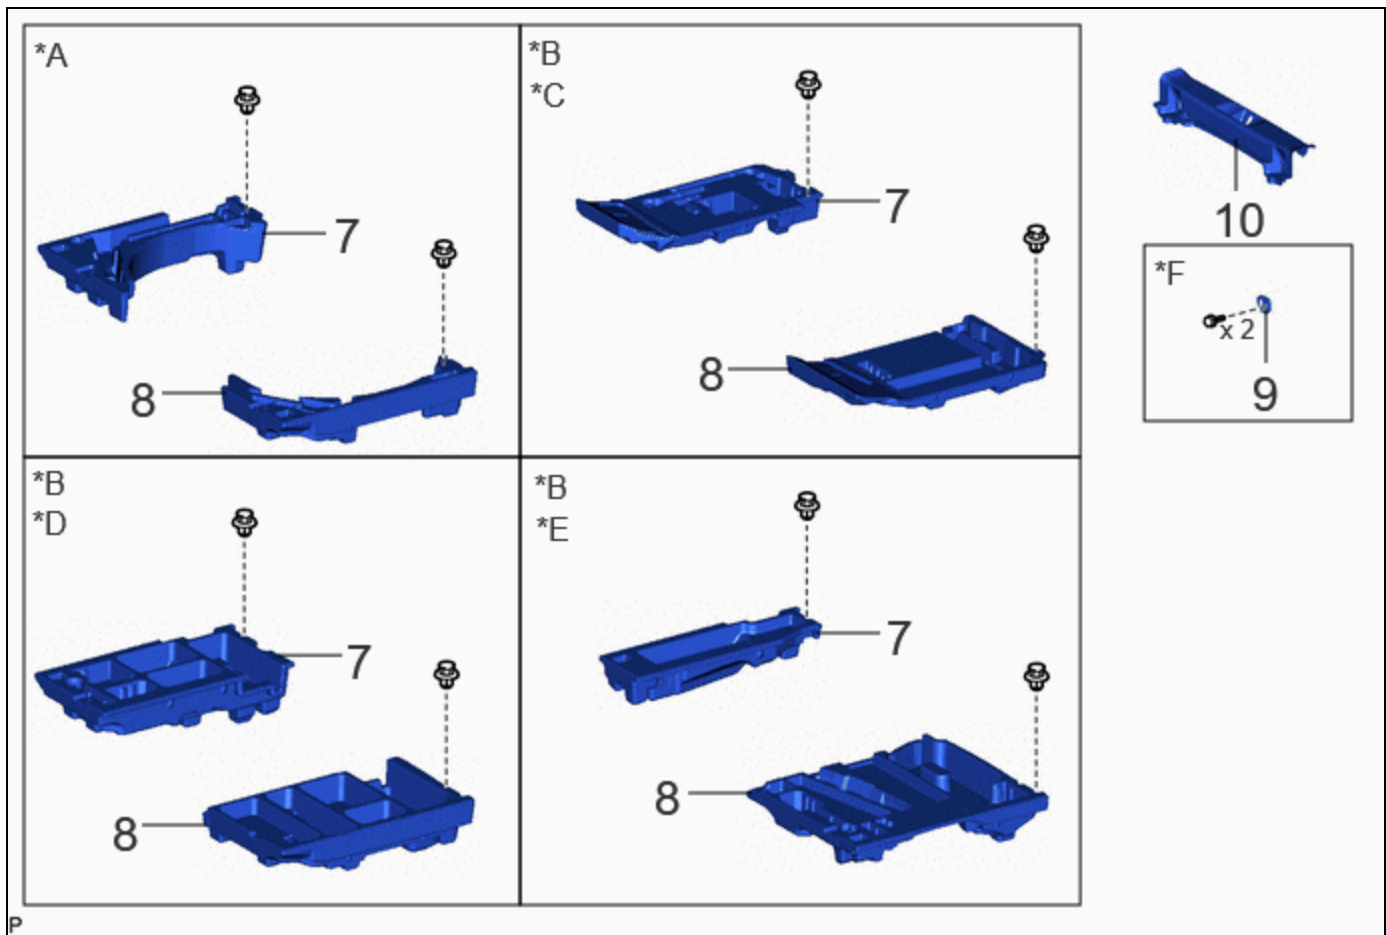*A	for LH Side	*B	for HEV Model
*C	for PHEV Model	-	-
•	Non-reusable part	-	-






PROCEDURE		PART NAME CODE			
7	DECK FLOOR BOX RH	64995	-	-	-
8	DECK FLOOR BOX LH	64997	-	-	-
9	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
10	REAR DECK TRIM COVER	64716D	-	-	-

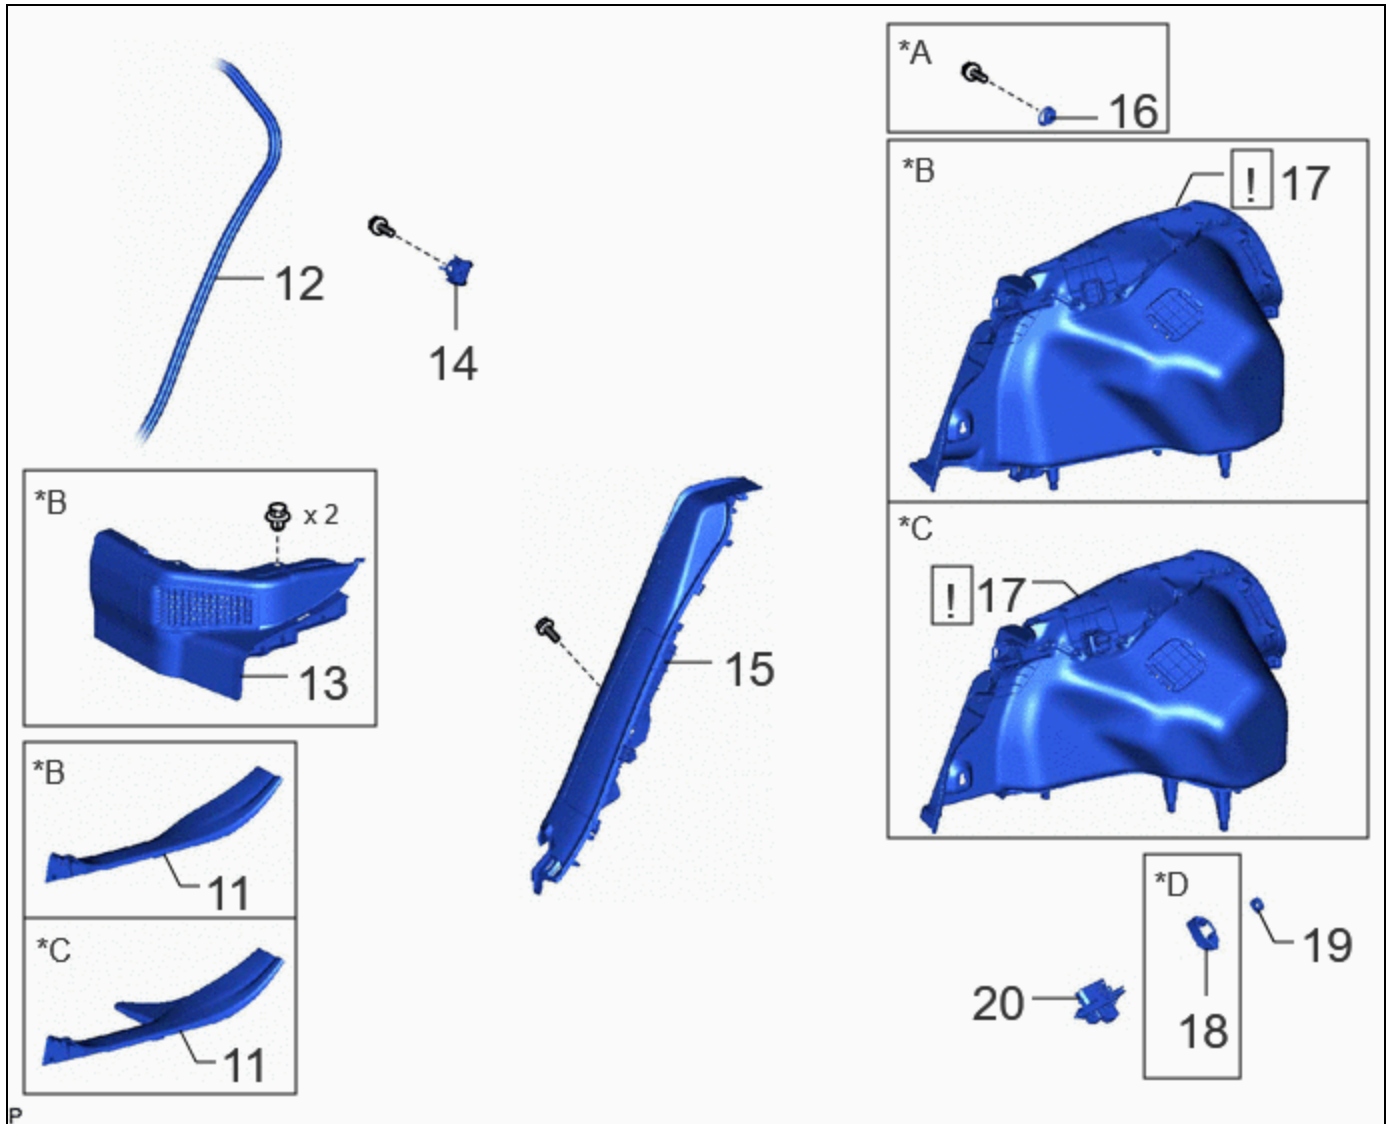*A	w/ Spare Tire	*B	w/o Spare Tire
*C	for Type A	*D	for Type B
*E	for Type C	*F	for Rear Side



PROCEDURE		PART NAME CODE			
11	REAR DOOR SCUFF PLATE INSIDE LH	67918F	-	-	-
12	REAR DOOR OPENING TRIM WEATHERSTRIP LH	62332A	-	-	-
13	REAR UNDER SIDE COVER LH	76974E	-	-	-
14	REAR SEATBACK HINGE SUB-ASSEMBLY LH	71304C	-	-	-
15	REAR SEAT SIDE GARNISH LH	62552F	INFO	-	-
16	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
17	DECK TRIM SIDE PANEL ASSEMBLY LH	64740C	INFO	-	-

PROCEDURE		PART NAME CODE			
18	FUEL FILLER OPENING LID LOCK COVER	77378A	-	-	-
19	FUEL FILLER OPENING LID LOCK RETAINER	77377	-	-	-
20	FUEL LID LOCK WITH MOTOR ASSEMBLY	77030A	-	-	-

*A	for LH Side	*B	for HEV Model
*C	for PHEV Model	*D	w/ Cover

PROCEDURE

1. REMOVE TONNEAU COVER ASSEMBLY

Click here [INFO](#)

2. REMOVE DECK BOARD ASSEMBLY

Click here [INFO](#)

3. REMOVE REAR SEAT HEADREST ASSEMBLY (for LH Side)

Click here [INFO](#)

4. REMOVE REAR SEATBACK ASSEMBLY LH

	Click here INFO
---	---------------------------------

5. REMOVE REAR SEAT CUSHION ASSEMBLY

	Click here INFO
---	---------------------------------

6. REMOVE REAR SEAT CUSHION LOCK HOOK

Click here [INFO](#)

7. REMOVE DECK FLOOR BOX RH

Click here [INFO](#)

8. REMOVE DECK FLOOR BOX LH

Click here [INFO](#)

9. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for Rear Side)

Click here [INFO](#)

10. REMOVE REAR DECK TRIM COVER

Click here [INFO](#)

11. REMOVE REAR DOOR SCUFF PLATE INSIDE LH

Click here [INFO](#)

12. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH

Click here [INFO](#)


13. REMOVE REAR UNDER SIDE COVER LH (for HEV Model)

Click here [INFO](#)

14. REMOVE REAR SEATBACK HINGE SUB-ASSEMBLY LH

Click here [INFO](#)


15. REMOVE REAR SEAT SIDE GARNISH LH

	Click here INFO
---	---------------------------------


16. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)


Click here [INFO](#)

17. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH


	Click here INFO
---	---------------------------------

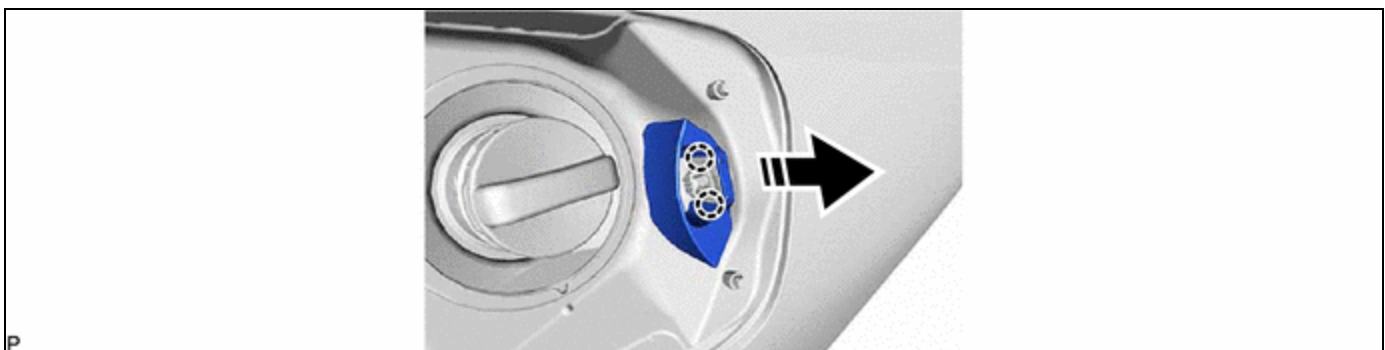

18. REMOVE FUEL FILLER OPENING LID LOCK COVER (w/ Cover)




	Remove in this Direction	-	-
---	--------------------------	---	---

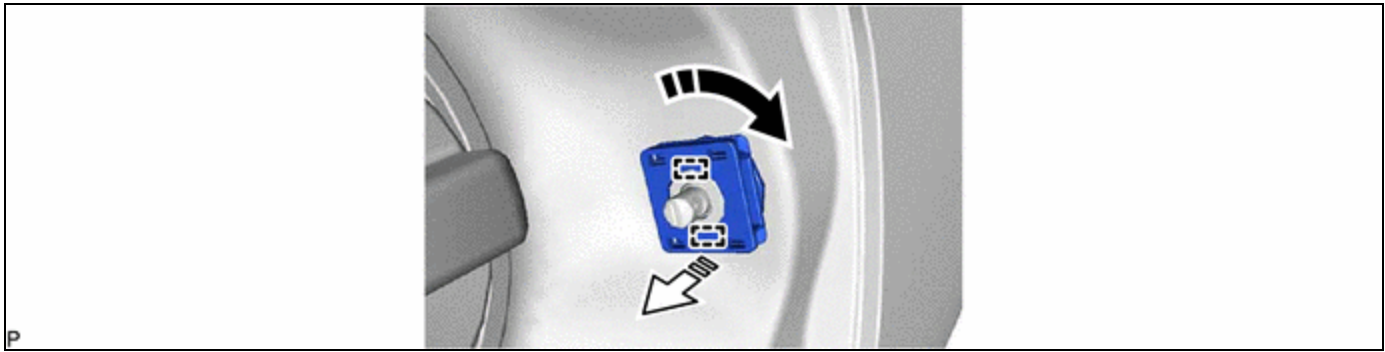
19. REMOVE FUEL FILLER OPENING LID LOCK RETAINER



	Remove in this Direction (1)		Remove in this Direction (2)
---	------------------------------	---	------------------------------

20. REMOVE FUEL LID LOCK WITH MOTOR ASSEMBLY

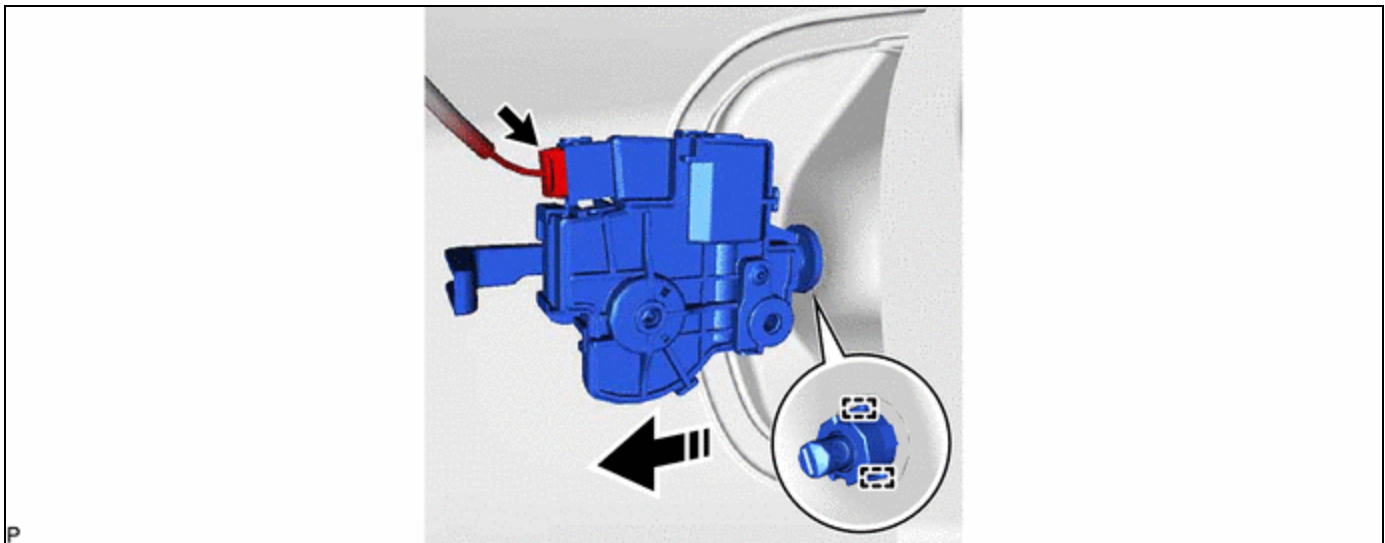

	Remove in this Direction	-	-
---	--------------------------	---	---

