


<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002924U
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> DOOR / HATCH: HOOD LOCK CONTROL CABLE ASSEMBLY: INSTALLATION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

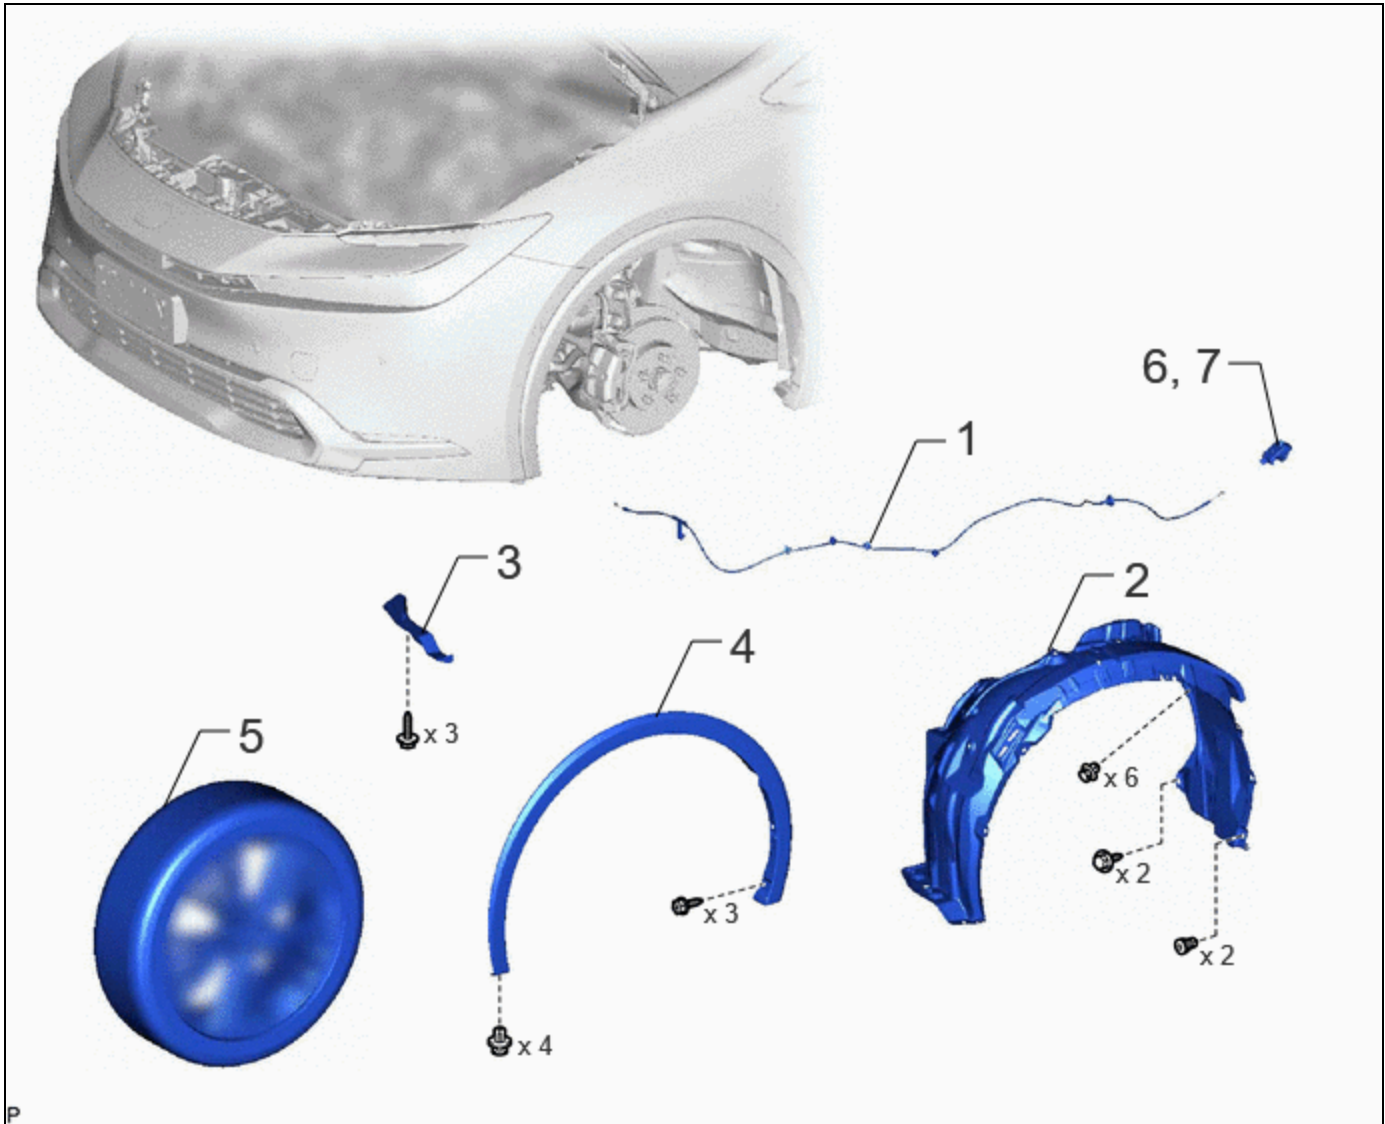


## INSTALLATION


### CAUTION / NOTICE / HINT




#### COMPONENTS (INSTALLATION)





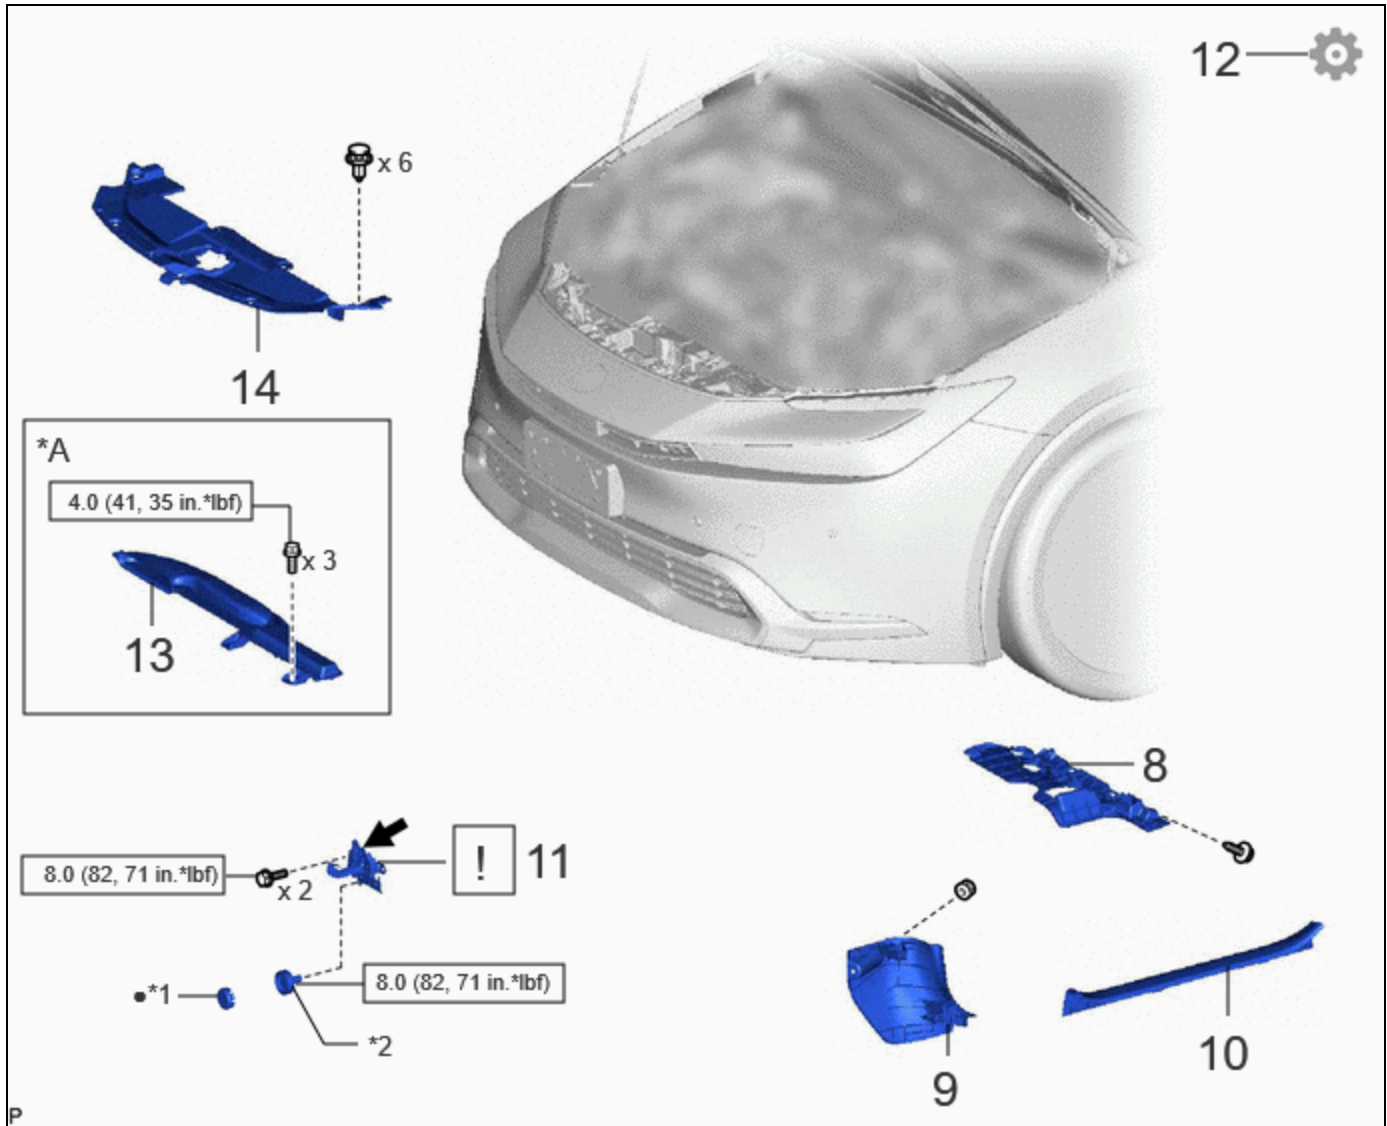


	PROCEDURE	PART NAME CODE			
1	HOODLOCK CONTROL CABLE & LEVER SET	53630D	-	-	-
2	FRONT FENDER LINER LH	53876A	-	-	-

PROCEDURE		PART NAME CODE			
3	FRONT WHEEL OPENING EXTENSION PAD LH	53852B	-	-	-
4	FRONT FENDER MOULDING SUB-ASSEMBLY LH	75602A	-	-	-
5	FRONT TIRE LH	-	-	-	-
6	HOOD LOCK CONTROL LEVER SUB-ASSEMBLY	53601	-	-	-
7	CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY	53601	-	-	-




PROCEDURE		PART NAME CODE			
8	NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY	55606	-	-	-

	PROCEDURE	PART NAME CODE			
9	COWL SIDE TRIM BOARD LH	62112	-	-	-
10	FRONT DOOR SCUFF PLATE LH	67914	-	-	-
11	HOOD LOCK ASSEMBLY	53510	<b>INFO</b>	-	-
12	ADJUST HOOD SUB-ASSEMBLY	53301	-	-	<b>INFO</b>
13	INLET NO. 1 AIR CLEANER	17751	-	-	-
14	RADIATOR SUPPORT OPENING COVER	53289A	-	-	-

*A	for M20A-FXS	-	-
*1	HOOD LOCK NUT CAP	*2	HOOD LOCK BOLT
•	Non-reusable part	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque		MP grease

## PROCEDURE

- 1. INSTALL HOODLOCK CONTROL CABLE & LEVER SET**
- 2. INSTALL FRONT FENDER LINER LH**
- 3. INSTALL FRONT WHEEL OPENING EXTENSION PAD LH**
- 4. INSTALL FRONT FENDER MOULDING SUB-ASSEMBLY LH**
- 5. INSTALL FRONT TIRE LH**
- 6. INSTALL HOOD LOCK CONTROL LEVER SUB-ASSEMBLY**
- 7. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY**
- 8. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY**
- 9. INSTALL COWL SIDE TRIM BOARD LH**
- 10. INSTALL FRONT DOOR SCUFF PLATE LH**
- 11. INSTALL HOOD LOCK ASSEMBLY**

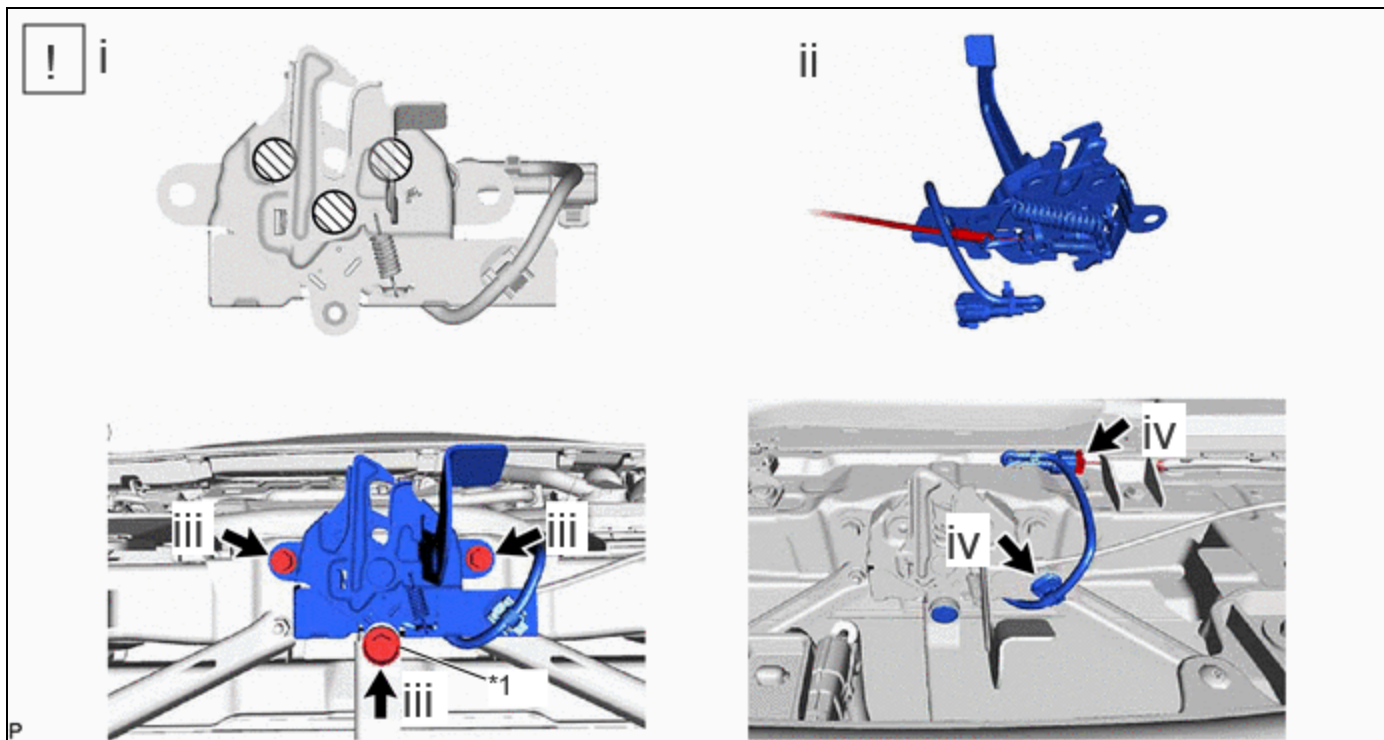

*1	Hood Lock Bolt	-	-
	MP grease	-	-

- (1) Apply MP grease to the sliding areas of the hood lock assembly.
- (2) Connect the hood lock control cable assembly to the hood lock assembly.
- (3) Install the hood lock assembly with the 2 bolts and hood lock bolt.

**Torque:**

**8.0 N·m {82 kgf·cm, 71 in·lbf}**

- (4) Connect the connector and engage the clamp.

**12. ADJUST HOOD SUB-ASSEMBLY**

Click here [INFO](#)

**13. INSTALL INLET NO. 1 AIR CLEANER (for M20A-FXS)**

Click here [INFO](#)

**14. INSTALL RADIATOR SUPPORT OPENING COVER**

