


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002BNIN
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: DOOR / HATCH: HOOD LOCK CONTROL CABLE ASSEMBLY: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

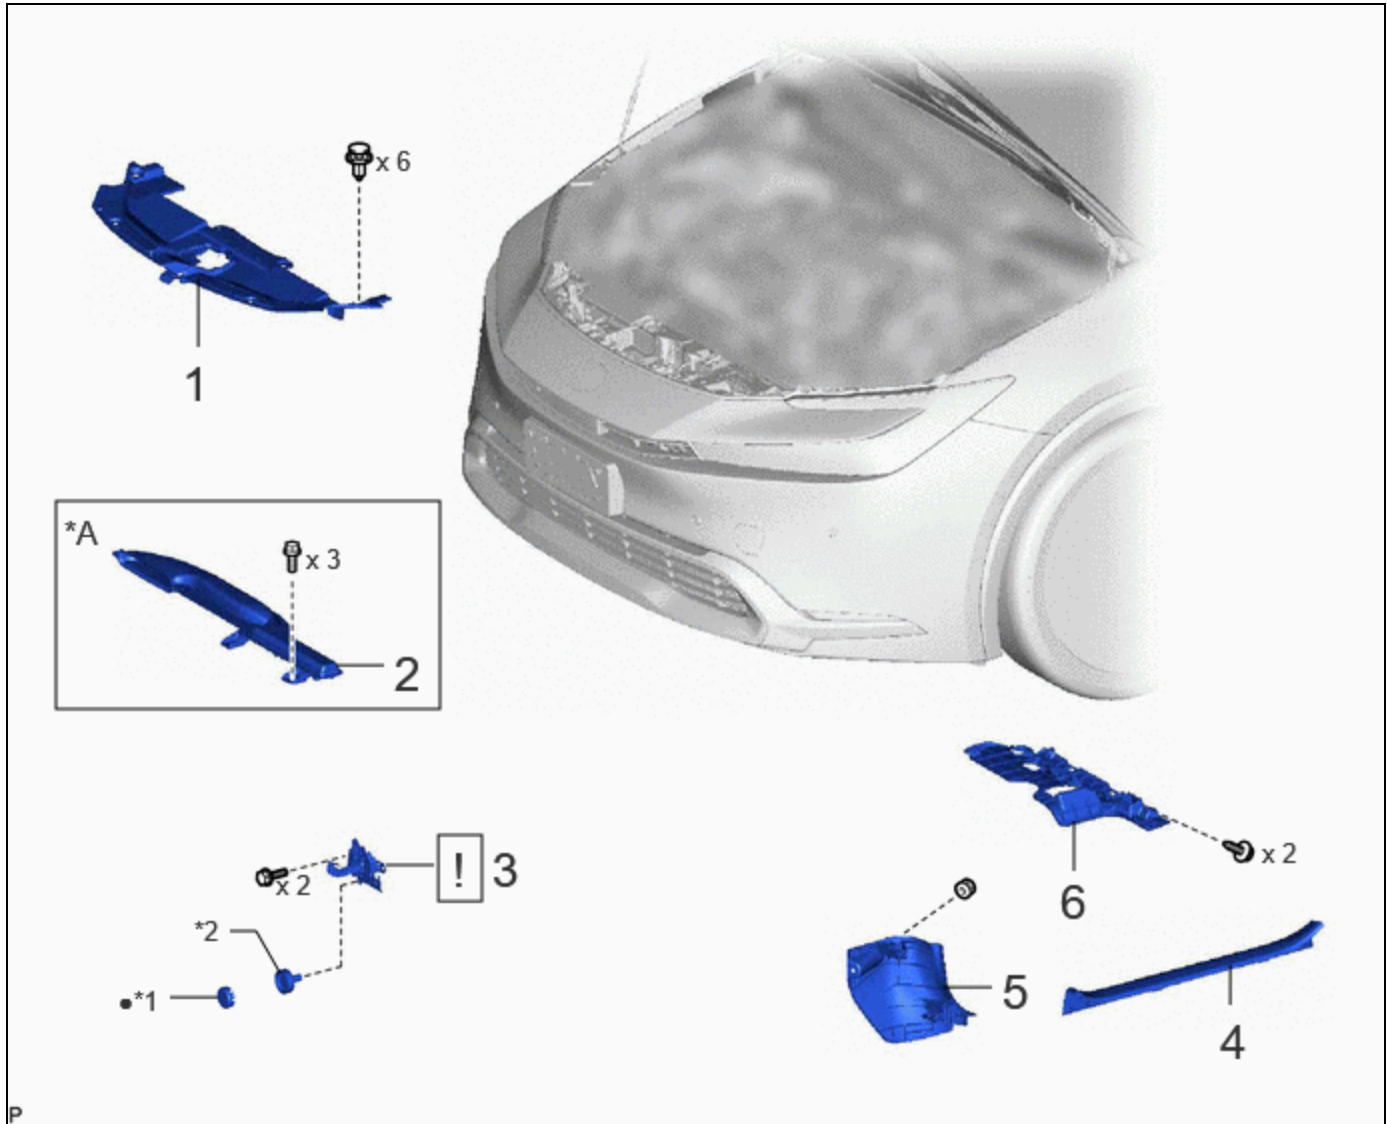


REMOVAL

CAUTION / NOTICE / HINT


COMPONENTS (REMOVAL)



	PROCEDURE	PART NAME CODE	!	📄	⚙️
1	RADIATOR SUPPORT OPENING COVER	53289A	-	-	-
2	INLET NO. 1 AIR CLEANER	17751	-	-	-

PROCEDURE		PART NAME CODE			
3	HOOD LOCK ASSEMBLY	53510	INFO	-	-
4	FRONT DOOR SCUFF PLATE LH	67914	-	-	-
5	COWL SIDE TRIM BOARD LH	62112	-	-	-
6	NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY	55606	-	-	-

*A	for M20A-FXS	-	-
*1	HOOD LOCK NUT CAP	*2	HOOD LOCK BOLT
•	Non-reusable part	-	-

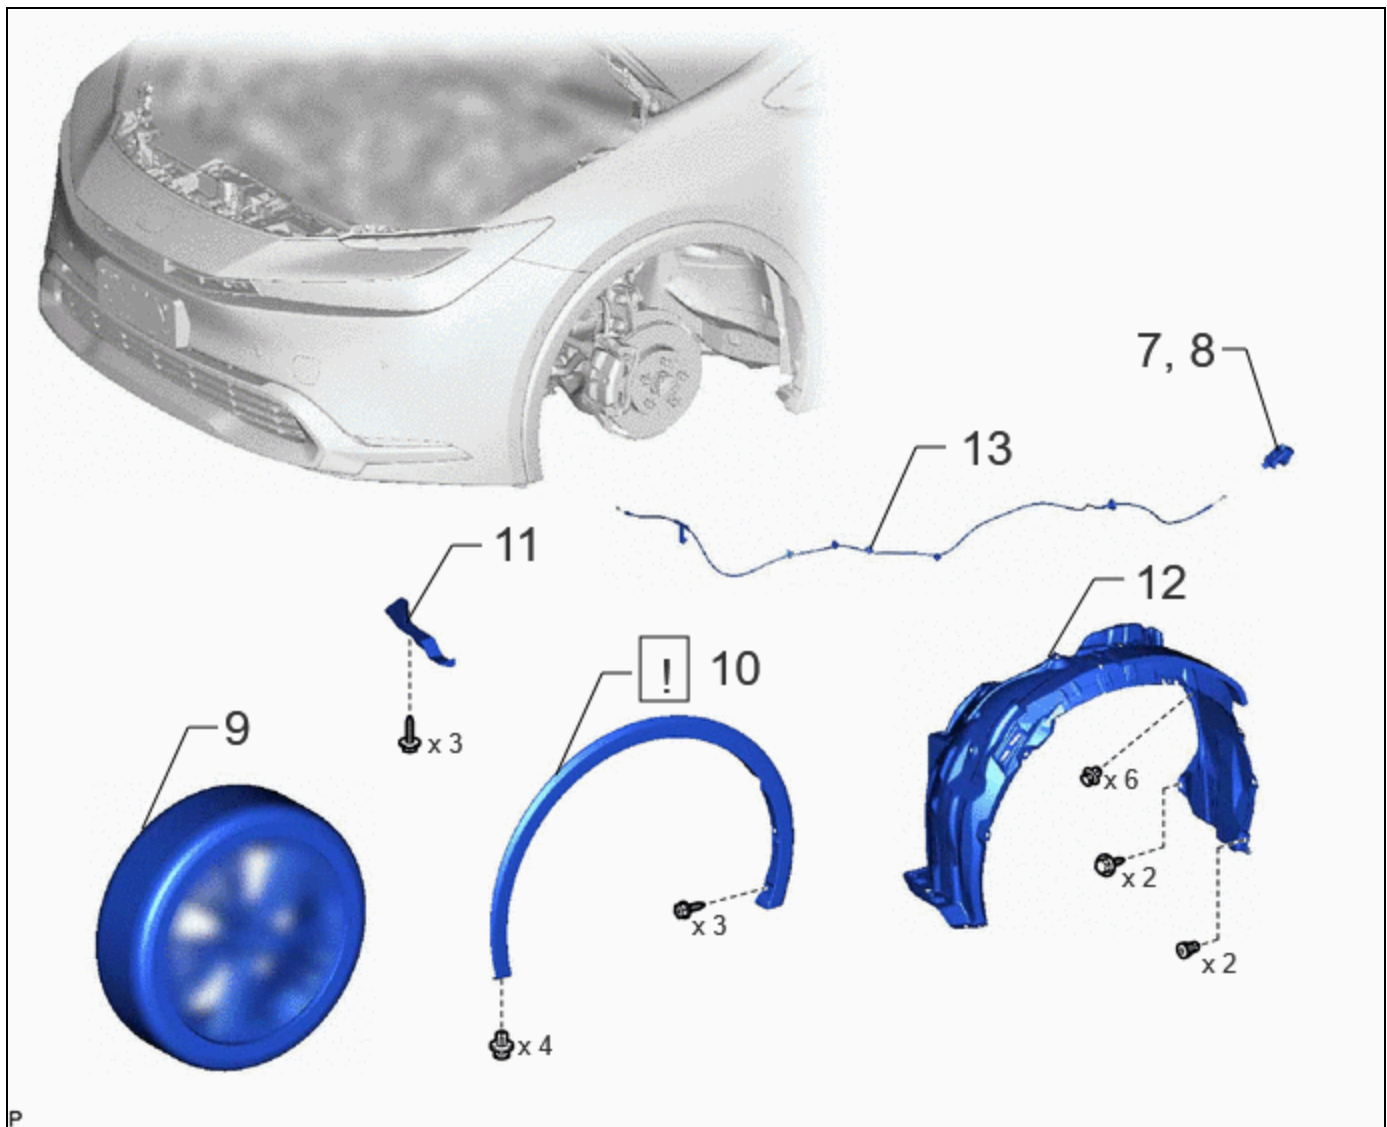

	PROCEDURE	PART NAME CODE	!	📄	⚙️
7	DISCONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY	53601	-	-	-
8	HOOD LOCK CONTROL LEVER SUB-ASSEMBLY	53601	-	-	-
9	FRONT TIRE LH	-	-	-	-
10	FRONT FENDER MOULDING SUB-ASSEMBLY LH	75602A	INFO	-	-
11	FRONT WHEEL OPENING EXTENSION PAD LH	53852B	-	-	-
12	FRONT FENDER LINER LH	53876A	-	-	-
13	HOODLOCK CONTROL CABLE & LEVER SET	53630D	-	-	-

PROCEDURE


1. REMOVE RADIATOR SUPPORT OPENING COVER

Click here [INFO](#)

2. REMOVE INLET NO. 1 AIR CLEANER (for M20A-FXS)

Click here [INFO](#)

3. REMOVE HOOD LOCK ASSEMBLY

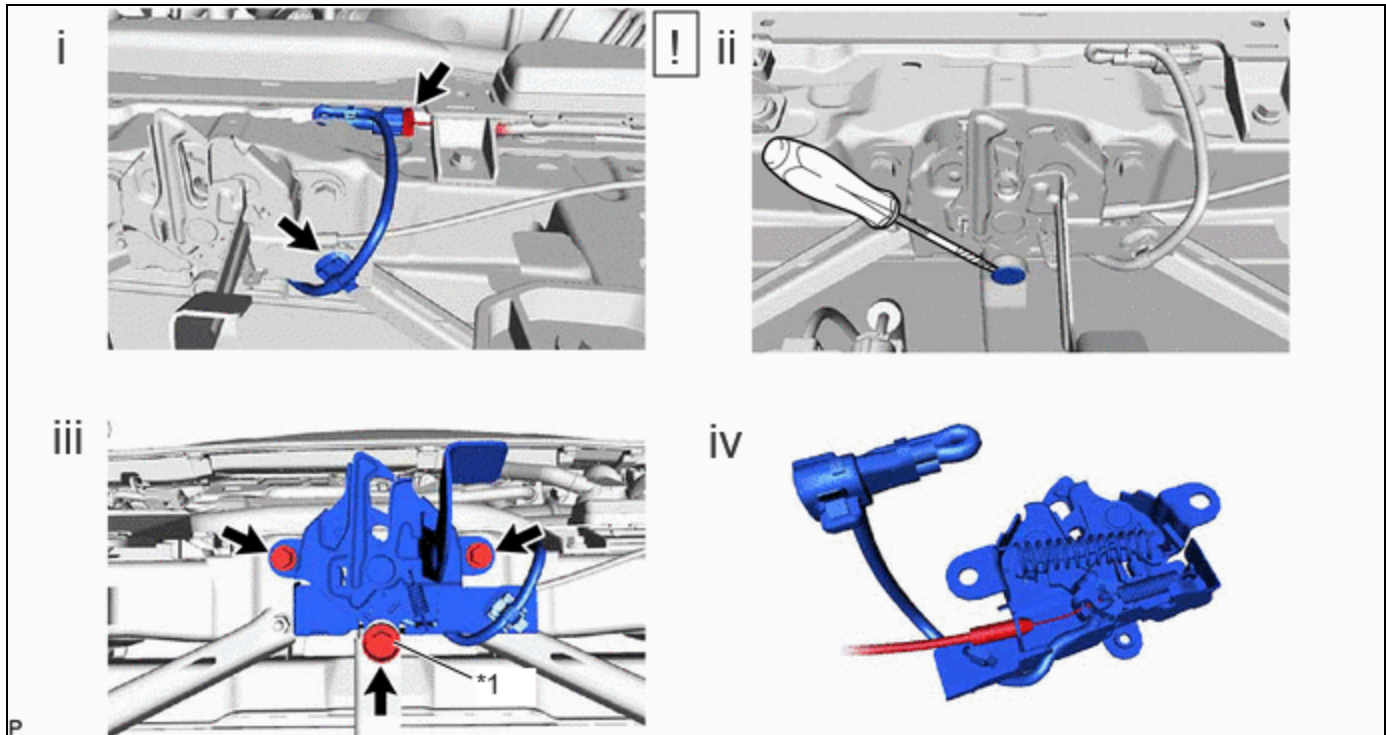

*1	Hood Lock Bolt	-	-
----	----------------	---	---

(1) Disengage the clamp and disconnect the connector.

(2) Using a screwdriver with its tip wrapped with protective tape, remove the hood lock nut cap.

(3) Remove the 2 bolts and hood lock bolt.

(4) Disconnect the hood lock control cable and lever set to remove the hood lock assembly.

4. REMOVE FRONT DOOR SCUFF PLATE LH

Click here [INFO](#)


5. REMOVE COWL SIDE TRIM BOARD LH

Click here [INFO](#)


6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

Click here [INFO](#)

7. DISCONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY

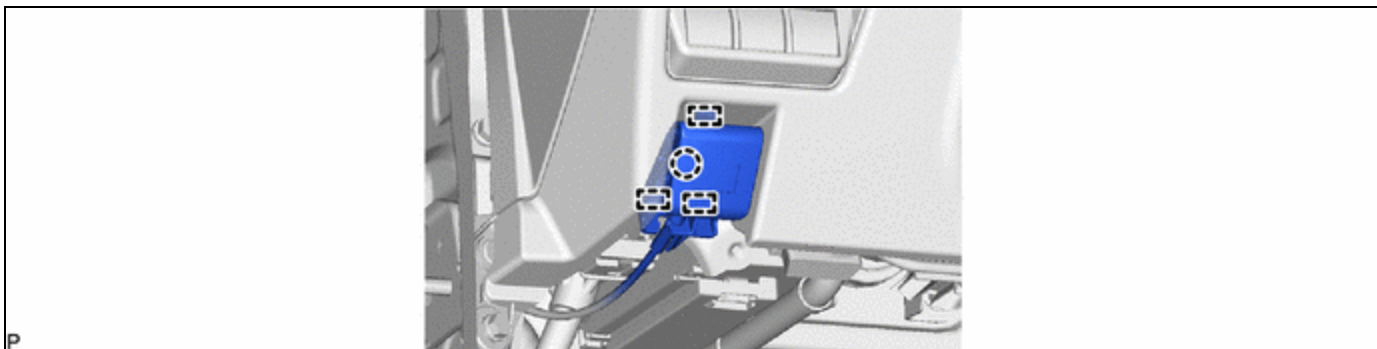

8. REMOVE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY

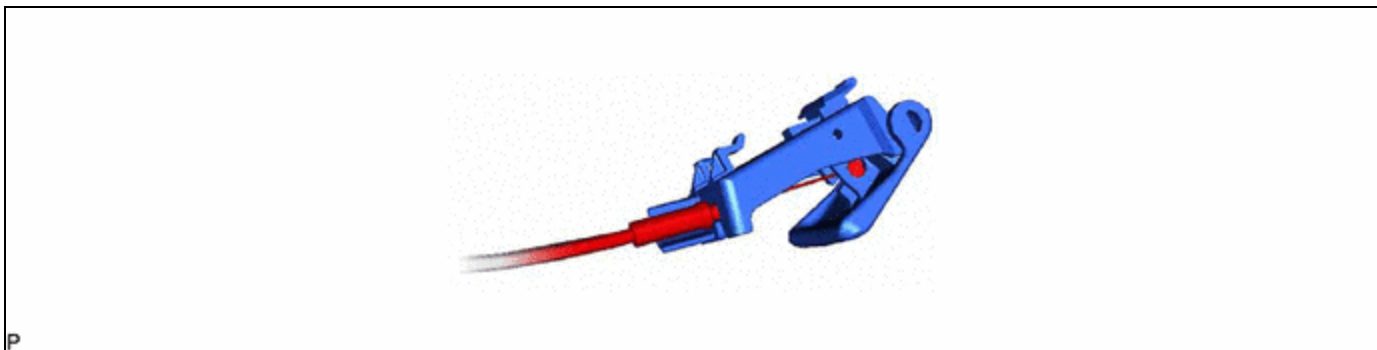

9. REMOVE FRONT TIRE LH

Click here [INFO](#)

10. REMOVE FRONT FENDER MOULDING SUB-ASSEMBLY LH

	Click here INFO
---	---------------------------------

11. REMOVE FRONT WHEEL OPENING EXTENSION PAD LH

for HEV Model:

Click here [INFO](#)

for PHEV Model:

Click here [INFO](#)

12. REMOVE FRONT FENDER LINER LH

Click here [INFO](#)

13. REMOVE HOODLOCK CONTROL CABLE & LEVER SET

