

| | | |
|---|---------------------------|--------------------------------------|
| Last Modified: 12-04-2024 | 6.11:8.1.0 | Doc ID: RM100000002923M |
| Model Year Start: 2023 | Model: Prius Prime | Prod Date Range: [12/2022 -] |
| Title: DOOR / HATCH: POWER BACK DOOR SYSTEM: CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 -] | | |

CUSTOMIZE PARAMETERS

CUSTOMIZE POWER BACK DOOR SYSTEM

(a) Customizing with the GTS.

(1) Select the setting by referring to the table below.

PSD & PBD operation

| TESTER DISPLAY | DESCRIPTION | DEFAULT | SETTING | ECU |
|---|--|--|---|--|
| Wireless Backdoor Open Operation Adjust | Function that select the switch operation of the power back door button (electrical key transmitter subassembly (electrical key)) to open the back door. | Long1 | \$00:1tim ON,\$01:2tim ON,\$02:Long1,\$03:Long2,\$07:Prohibit | Main body ECU (Multiplex network body ECU) |
| PBD SW Operating Condition Setting | Power back door control switch operation. | Short Press (0.04s) or Long Press (0.8s) | \$00:Short Press (0.04s),\$01:Long Press (0.8s) | Multiplex network door ECU |
| PBD Assist Close Function | Function that enables/disables the power back door assist close operation. When set to ON, the back door will close automatically when operated in the close direction manually. | ON | \$00:OFF,\$01:ON | Multiplex network door ECU |
| PBD Assist Open Function | Function that enables/disables the power back door assist open operation. When set to ON, the back door will open automatically when the back door opener switch assembly (open switch) is operated. | ON | \$00:OFF,\$01:ON | Multiplex network door ECU |

| TESTER DISPLAY | DESCRIPTION | DEFAULT | SETTING | ECU |
|---|--|--|---|----------------------------|
| PBD Door Unlock with One Motion Setting | Function that selects the door or doors to unlock when the back door is locked and the electrical key transmitter subassembly (electrical key) is pushed to operate the power back door.*2 | ALL DOORS | \$00:Back Door,\$01:All Doors | Multiplex network door ECU |
| PBD Wireless Function | Function that operates the power back door by pushing the transmitter switch (electrical key transmitter sub-assembly). | ON | \$00:OFF,\$01:ON | Multiplex network door ECU |
| PBD Wireless One Motion Function | Wireless one motion function.*1 | ON | \$00:OFF,\$01:ON | Multiplex network door ECU |
| PBD Wireless SW Setting | Wireless operation setting condition. | 1 Time Press, 2 Times Press or Long Press (0.8s) | \$00:1 Time Press,\$01:2 Times Press,\$02:Long Press (0.8s) | Multiplex network door ECU |
| PBD Walk Away Close & Lock Function | Power back door walk away close and lock function. | ON | \$00:OFF,\$01:ON | Multiplex network door ECU |

*1: Enables when the following conditions are met:

- o "Wireless Backdoor Open Operation Adjust" is set to other than "Prohibit"
- o "PBD Wireless Function" is set to "ON"

*2: Enables when the following conditions are met:

"PBD Wireless One Motion Function" is set to "ON"

(b) Customizing with the multi-information display (combination meter assembly)

(1) Turn the ignition switch to ON.

(2) Enter the following menus: Vehicle Settings / Power Back Door.

| DISPLAY | DESCRIPTION | DEFAULT | SETTING | RELEVANT ECU |
|-----------------|---|---------|----------------------|----------------------------|
| Power back door | Function that enables or disables the power back door operation. | ON | ON or OFF | Multiplex network door ECU |
| Buzzer volume | Function that can be used to set the power back door buzzer volume. | Loud | Loud, Normal or Soft | Multiplex network door ECU |

| DISPLAY | DESCRIPTION | DEFAULT | SETTING | RELEVANT ECU |
|------------------|---|---------|-------------------------|----------------------------|
| Opening position | Function that can be used to set the power back door opening angle. | 5 | 5, 4, 3, 2, 1 or Manual | Multiplex network door ECU |

