
Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029LCU
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: EXTERIOR PANELS / TRIM: REA	AR BUMPER: REASSEMBLY;	2023 - 2024 MY Prius Prius Prime [12/2022 -

REASSEMBLY

CAUTION / NOTICE / HINT

COMPONENTS (REASSEMBLY)

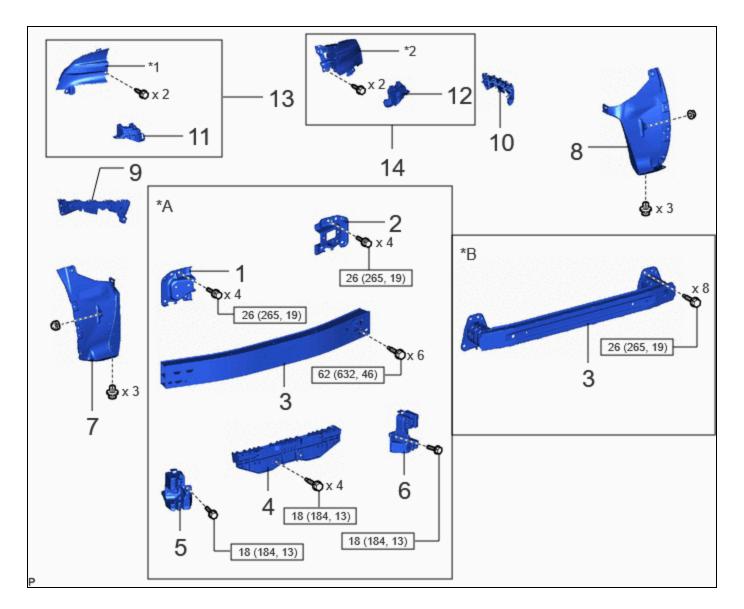


	PROCEDURE	PART NAME CODE	!		¢
1	REAR BUMPER ARM LH	52182	-	-	-
2	REAR BUMPER ARM RH	52181	-	-	-

]

	PROCEDURE	PART NAME CODE	!		
3	REAR BUMPER REINFORCEMENT SUB-ASSEMBLY	52023	-	-	-
4	REAR BUMPER ENERGY ABSORBER	52615	-	-	-
5	REAR BUMPER ARM REINFORCEMENT LH	52188A	-	-	-
6	REAR BUMPER ARM REINFORCEMENT RH	52187A	-	-	-
7	REAR BUMPER SIDE SEAL LH	52592	-	-	-
8	REAR BUMPER SIDE SEAL RH	52591	-	-	-
9	REAR BUMPER SIDE RETAINER LH	52576	-	-	-
10	REAR BUMPER SIDE RETAINER RH	52575	-	-	-
11	REAR BUMPER UPPER RETAINER LH	52563D	-	-	-
12	REAR BUMPER UPPER RETAINER RH	52562E	-	-	-
13	REAR COMBINATION LIGHT ASSEMBLY LH	-	-	-	_
14	REAR COMBINATION LIGHT ASSEMBLY RH	-	-	-	_

*A	for Type A	*В	for Type B
*1	REAR COMBINATION LIGHT SUB-ASSEMBLY LH	*2	REAR COMBINATION LIGHT SUB-ASSEMBLY RH
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

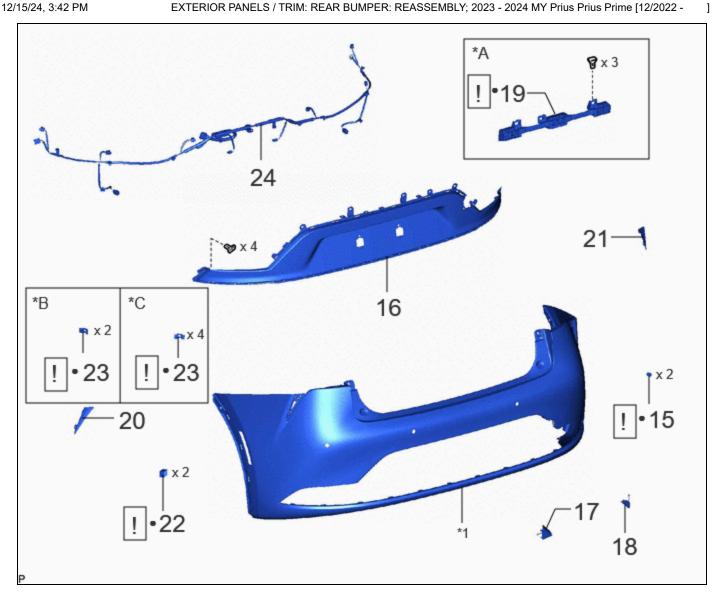


	PROCEDURE	PART NAME CODE	!		0
15	SEAL TAPE	-	INFO	-	-
16	REAR BUMPER CENTER GUARD	52453	-	-	-
17	REAR BUMPER LOWER COVER	52169C	-	-	-
18	REAR BUMPER COVER	52151H	-	-	-
19	NO. 2 REAR BUMPER ENERGY ABSORBER	52614A	INFO	-	-
20	REAR BUMPER CORNER EXTENSION LH	52166B	-	-	-
21	REAR BUMPER CORNER EXTENSION RH	52165D	-	-	-
22	REAR BUMPER PAD	52461F	INFO	-	-
23	REAR ULTRASONIC SENSOR CLIP	89348Y	INFO	-	-
24	NO. 3 LUGGAGE ROOM WIRE	82183	-	-	-

I.E

]

*A	w/ No. 2 Rear Bumper Energy Absorber	*В	w/o Side Marker Light
*C	w/ Side Marker Light	-	-
*1	REAR BUMPER COVER	-	-
•	Non-reusable part	-	-

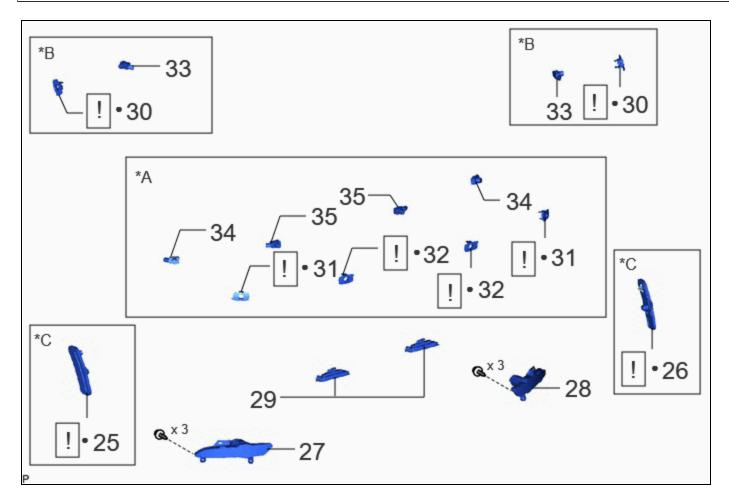

	PROCEDURE	PART NAME CODE	!		0
25	REAR SIDE MARKER LIGHT ASSEMBLY LH	81760	INFO	-	-
26	REAR SIDE MARKER LIGHT ASSEMBLY RH	81750	INFO	-	-
27	BACK-UP LIGHT ASSEMBLY LH	81680	-	-	-
28	BACK-UP LIGHT ASSEMBLY RH	81670	-	-	-
29	LICENSE PLATE LIGHT SUB-ASSEMBLY	81204A	-	-	-
30	REAR SIDE ULTRASONIC SENSOR RETAINER	89C48C	INFO	-	-
31	REAR CORNER ULTRASONIC SENSOR RETAINER	89C48A	INFO	-	-
32	REAR CENTER ULTRASONIC SENSOR RETAINER	89C48B	INFO	-	-
33	REAR SIDE ULTRASONIC SENSOR	89342B	-	-	-
34	REAR CORNER ULTRASONIC SENSOR	89342	-	-	-

ЦΠ

٦٢

71

]

PROCEDURE	PART NAME CODE	!		¢
35 REAR CENTER ULTRASONIC SENSOR	89342A	-	-	-

*A w/ Parking Support Brake System	*B	w/ Advanced Park
*C w/ Side Marker Light	-	-
Non-reusable part	-	-

PROCEDURE

1. INSTALL REAR BUMPER ARM LH (for Type A)

Torque:

26 N·m {265 kgf·cm, 19 ft·lbf}

2. INSTALL REAR BUMPER ARM RH (for Type A)

(a) Use the same procedure as for the LH side.

3. INSTALL REAR BUMPER REINFORCEMENT SUB-ASSEMBLY

Torque:

for Type A: :

62 N·m {632 kgf·cm, 46 ft·lbf}

for Type B: :

26 N·m {265 kgf·cm, 19 ft·lbf}

4. INSTALL REAR BUMPER ENERGY ABSORBER (for Type A)

Torque:

18 N·m {184 kgf·cm, 13 ft·lbf}

5. INSTALL REAR BUMPER ARM REINFORCEMENT LH (for Type A)

Torque:

18 N·m {184 kgf·cm, 13 ft·lbf}

6. INSTALL REAR BUMPER ARM REINFORCEMENT RH (for Type A)

(a) Use the same procedure as for the LH side.


7. INSTALL REAR BUMPER SIDE SEAL LH

8. INSTALL REAR BUMPER SIDE SEAL RH

9. INSTALL REAR BUMPER SIDE RETAINER LH

10. INSTALL REAR BUMPER SIDE RETAINER RH


11. INSTALL REAR BUMPER UPPER RETAINER LH

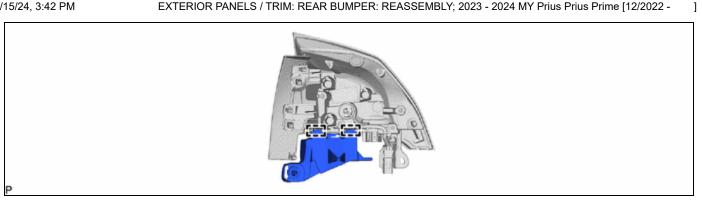

12. INSTALL REAR BUMPER UPPER RETAINER RH

(a) Use the same procedure as for the LH side.


13. INSTALL REAR COMBINATION LIGHT ASSEMBLY LH

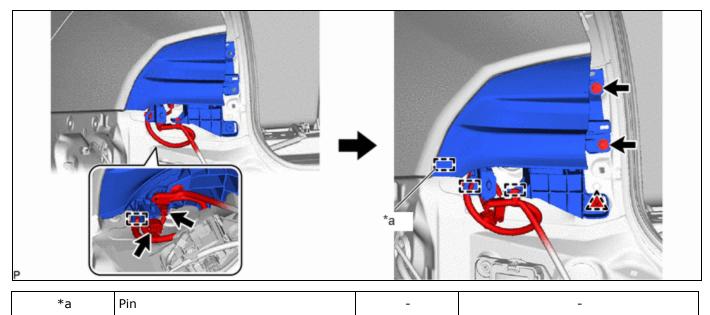

14. INSTALL REAR COMBINATION LIGHT ASSEMBLY RH

(a) Use the same procedure as for the LH side.

15. INSTALL SEAL TAPE

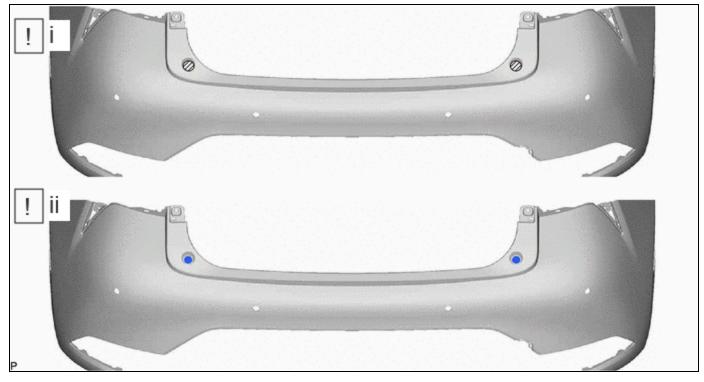

	Cleaning Area	-	-
--	---------------	---	---


(1) Clean the rear bumper cover surface.

1. Using a heat light, heat the double-sided tape remaining on the rear bumper cover and 2 seal tapes.

Heating Temperature

AREA	TEMPERATURE	AREA	TEMPERATURE
Rear Bumper Cover	20 to 30 °C (68 to 86 °F)	Seal Tape	20 to 30 °C (68 to 86 °F)

- Do not touch the heat light and heated parts, touching the heat light may result in burns.
- Touching heated parts for a long time may result in burns.

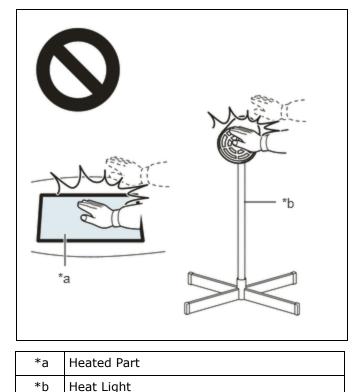

NOTICE:

Do not heat the rear bumper cover excessively.

- 2. Remove any remaining double-sided tape from the rear bumper cover.
- 3. Wipe off any tape adhesive residue with cleaner.
- (2) Install 2 new seal tapes.
 - 1. Using a heat light, heat the rear bumper cover surface.
 - 2. Remove the release paper from the 2 seal tapes.

HINT:

After removing the release paper, keep the exposed adhesive free from foreign matter.

3. Install the 2 seal tapes as shown in the illustration.

HINT:


- Apply the seal tape along the scribed line on the rear bumper cover.
- Press the seal tape firmly to install it.

16. INSTALL REAR BUMPER CENTER GUARD

17. INSTALL REAR BUMPER LOWER COVER

18. INSTALL REAR BUMPER COVER

19. INSTALL NO. 2 REAR BUMPER ENERGY ABSORBER (w/ No. 2 Rear Bumper Energy Absorber)

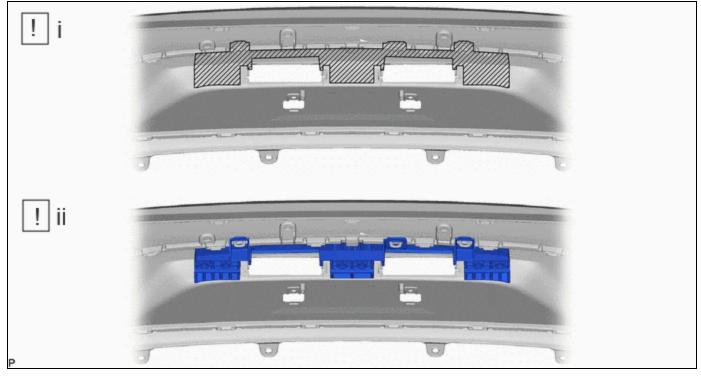

Cleaning Area	-	-
---------------	---	---


(1) Clean the rear bumper cover surface.

1. Using a heat light, heat the double-sided tape remaining on the rear bumper cover and No. 2 rear bumper energy absorber.

Heating Temperature

AREA	TEMPERATURE	AREA	TEMPERATURE
Rear Bumper Cover	20 to 30 °C (68 to 86 °F)	No. 2 Rear Bumper Energy Absorber	20 to 30 °C (68 to 86 °F)

- Do not touch the heat light and heated parts, touching the heat light may result in burns.
- Touching heated parts for a long time may result in burns.

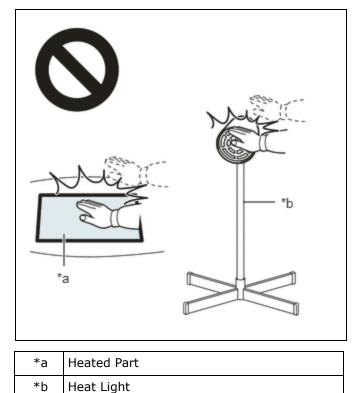

NOTICE:

Do not heat the rear bumper cover excessively.

- 2. Remove any remaining double-sided tape from the rear bumper cover.
- 3. Wipe off any tape adhesive residue with cleaner.
- (2) Install new No. 2 rear bumper energy absorber.
 - 1. Using a heat light, heat the rear bumper cover surface.
 - 2. Remove the release paper from the No. 2 rear bumper energy absorber.


HINT:

After removing the release paper, keep the exposed adhesive free from foreign matter.

3. Install the No. 2 rear bumper energy absorber as shown in the illustration.

HINT:

- Apply the No. 2 rear bumper energy absorber along the scribed line on the rear bumper cover.
- Press the No. 2 rear bumper energy absorber firmly to install it.

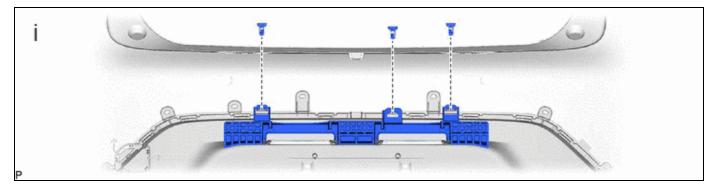


(1) Install the 3 clips.

20. INSTALL REAR BUMPER CORNER EXTENSION LH

21. INSTALL REAR BUMPER CORNER EXTENSION RH

22. INSTALL REAR BUMPER PAD

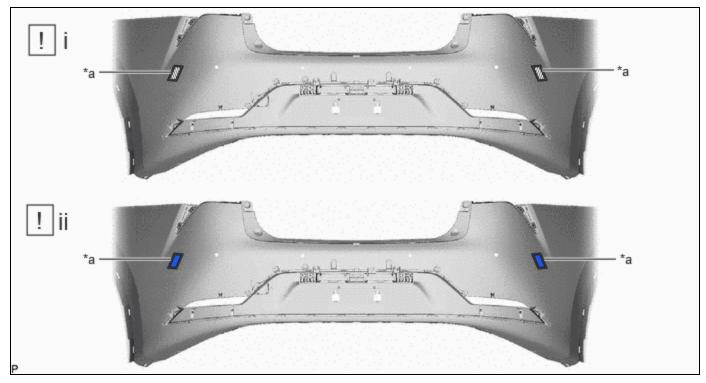

*а	Scribed Line	-	-
	Cleaning Area	-	-


(1) Clean the rear bumper cover surface.

1. Using a heat light, heat the double-sided tape remaining on the rear bumper cover and 2 rear bumper pads.

Heating Temperature

AREA	TEMPERATURE	AREA	TEMPERATURE
Rear Bumper Cover	20 to 30 °C (68 to 86 °F)	Rear Bumper Pad	20 to 30 °C (68 to 86 °F)

- Do not touch the heat light and heated parts, touching the heat light may result in burns.
- Touching heated parts for a long time may result in burns.

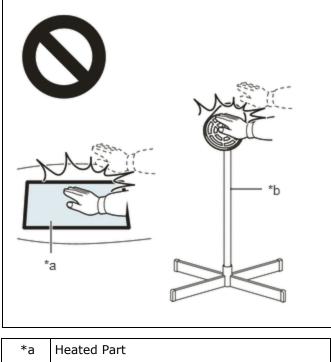

*b Heat Light

NOTICE:

Do not heat the rear bumper cover excessively.

- 2. Remove any remaining double-sided tape from the rear bumper cover.
- 3. Wipe off any tape adhesive residue with cleaner.
- (2) Install 2 new rear bumper pads.
 - 1. Using a heat light, heat the rear bumper cover surface.
 - 2. Remove the release paper from the 2 rear bumper pads.

HINT:

After removing the release paper, keep the exposed adhesive free from foreign matter.


3. Install the 2 rear bumper pads as shown in the illustration.

HINT:

- Apply the rear bumper pad along the scribed line on the rear bumper cover.
- Press the rear bumper pad firmly to install it.

23. INSTALL REAR ULTRASONIC SENSOR CLIP

(a) w/o Side Marker Light:

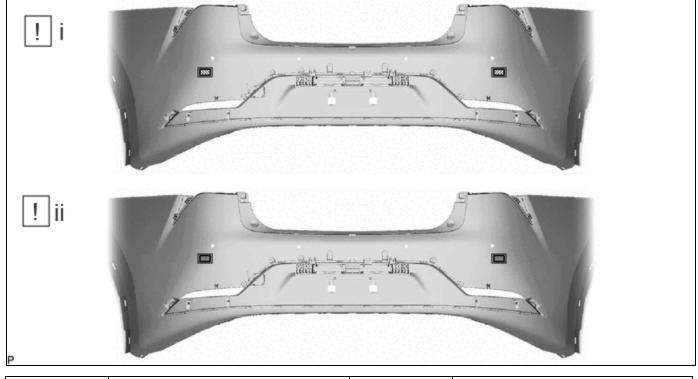

	Cleaning Area	Primer	
--	---------------	--------	--


(1) Clean the rear bumper cover surface.

1. Using a heat light, heat the double-sided tape remaining on the rear bumper cover and 2 rear ultrasonic sensor clips.

Heating Temperature

AREA	TEMPERATURE	AREA	TEMPERATURE
Rear Bumper Cover	20 to 30 °C (68 to 86 °F)	Rear Ultrasonic Sensor Clip	20 to 30 °C (68 to 86 °F)

- Do not touch the heat light and heated parts, touching the heat light may result in burns.
- Touching heated parts for a long time may result in burns.

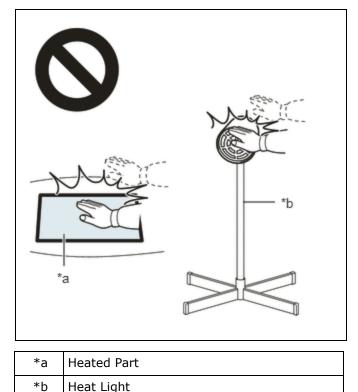

NOTICE:

Do not heat the rear bumper cover excessively.

- 2. Remove any remaining double-sided tape from the rear bumper cover.
- 3. Wipe off any tape adhesive residue with cleaner.
- (2) Apply primer to the installation area of the 2 rear ultrasonic sensor clips on the front bumper cover.

1. Using a brush or felt, apply primer or equivalent to the installation area of the 2 rear ultrasonic sensor clips.

NOTICE:

- Replace the brush or felt if it is dirty or has become hardened.
- Do not apply primer to the painted side.
- Do not touch the front bumper cover until the primer has dried.

2. Let the primer dry sufficiently.


NOTICE:

Do not touch applied surfaces until the primer is dry.

Recommended drying time:

10 minutes or more (at 23°C (73°F))

3. Confirm that the primer has completely dried by touching the front bumper cover. Then remove the tape.

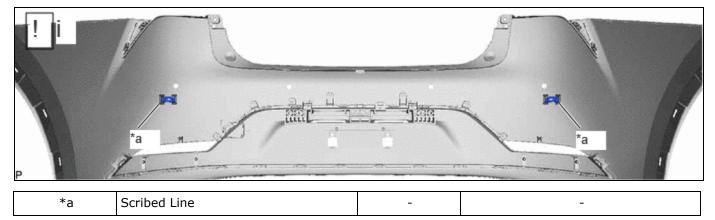

(1) Install 2 new rear ultrasonic sensor clips.

- 1. Using a heat light, heat the front bumper cover surface.
- 2. Remove the release paper from the 2 rear ultrasonic sensor clips.


HINT:

After removing the release paper, keep the exposed adhesive free from foreign matter.

3. Install the 2 rear ultrasonic sensor clips as shown in the illustration.

HINT:

- Apply each rear ultrasonic sensor clip along the scribed line on the front bumper cover.
- Press the rear ultrasonic sensor clip firmly to install it.
- (c) w/ Side Marker Light:

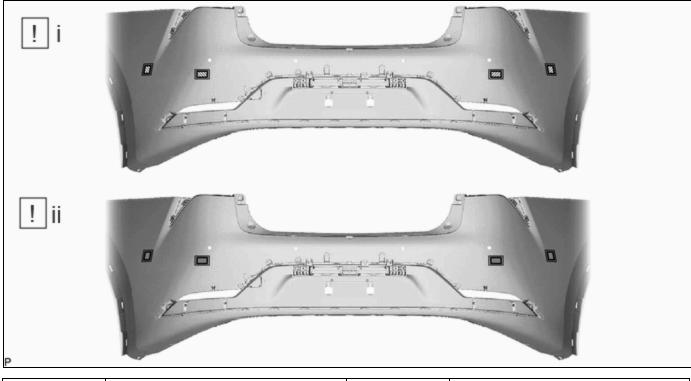

	Cleaning Area		Primer
--	---------------	--	--------

(1) Clean the rear bumper cover surface.

12/15/24, 3:42 PM

EXTERIOR PANELS / TRIM: REAR BUMPER: REASSEMBLY; 2023 - 2024 MY Prius Prius Prime [12/2022 -]


1. Using a heat light, heat the double-sided tape remaining on the rear bumper cover and 4 rear ultrasonic sensor clips.

Heating Temperature

AREA	TEMPERATURE	AREA	TEMPERATURE
Rear Bumper Cover	20 to 30 °C (68 to 86 °F)	Rear Ultrasonic Sensor Clip	20 to 30 °C (68 to 86 °F)

CAUTION:

- Do not touch the heat light and heated parts, touching the heat light may result in burns.
- Touching heated parts for a long time may result in burns.

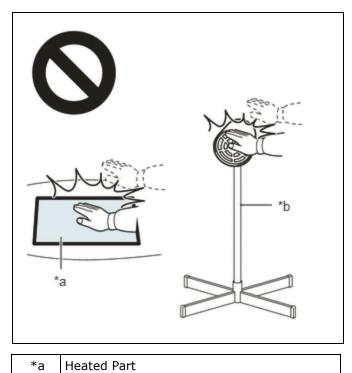

*b	Heat Light

NOTICE:

Do not heat the rear bumper cover excessively.

- 2. Remove any remaining double-sided tape from the rear bumper cover.
- 3. Wipe off any tape adhesive residue with cleaner.
- (2) Apply primer to the installation area of the 4 rear ultrasonic sensor clips on the front bumper cover.

1. Using a brush or felt, apply primer or equivalent to the installation area of the 4 rear ultrasonic sensor clips.

NOTICE:

- Replace the brush or felt if it is dirty or has become hardened.
- Do not apply primer to the painted side.
- Do not touch the front bumper cover until the primer has dried.
 - 2. Let the primer dry sufficiently.

NOTICE:


Do not touch applied surfaces until the primer is dry.

Recommended drying time:

10 minutes or more (at 23°C (73°F))

EXTERIOR PANELS / TRIM: REAR BUMPER: REASSEMBLY; 2023 - 2024 MY Prius Prius Prime [12/2022 -]

3. Confirm that the primer has completely dried by touching the front bumper cover. Then remove the tape.

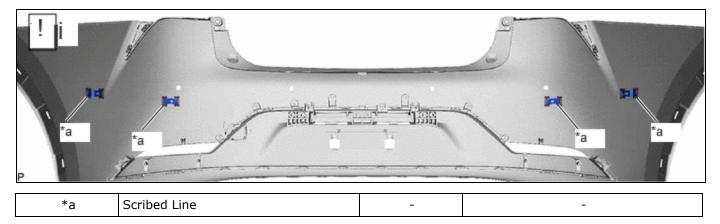

(1) Install 4 new rear ultrasonic sensor clips.

- 1. Using a heat light, heat the front bumper cover surface.
- 2. Remove the release paper from the 4 rear ultrasonic sensor clips.

HINT:

After removing the release paper, keep the exposed adhesive free from foreign matter.

3. Install the 4 rear ultrasonic sensor clips as shown in the illustration.

HINT:

- Apply each rear ultrasonic sensor clip along the scribed line on the front bumper cover.
- Press the rear ultrasonic sensor clip firmly to install it.

24. INSTALL NO. 3 LUGGAGE ROOM WIRE

25. INSTALL REAR SIDE MARKER LIGHT ASSEMBLY LH (w/ Side Marker Light)



26. INSTALL REAR SIDE MARKER LIGHT ASSEMBLY RH (w/ Side Marker Light)

(a) Use the same procedure as for the LH side.

27. INSTALL BACK-UP LIGHT ASSEMBLY LH

28. INSTALL BACK-UP LIGHT ASSEMBLY RH

29. INSTALL LICENSE PLATE LIGHT SUB-ASSEMBLY

30. INSTALL REAR SIDE ULTRASONIC SENSOR RETAINER (w/ Advanced Park)



31. INSTALL REAR CORNER ULTRASONIC SENSOR RETAINER (w/ Parking Support Brake System)



32. INSTALL REAR CENTER ULTRASONIC SENSOR RETAINER (w/ Parking Support Brake System)

Click here



33. INSTALL REAR SIDE ULTRASONIC SENSOR (w/ Advanced Park)

34. INSTALL REAR CORNER ULTRASONIC SENSOR (w/ Parking Support Brake System)

35. INSTALL REAR CENTER ULTRASONIC SENSOR (w/ Parking Support Brake System)

.

TOYOTA

]