

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002BFEM
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> LIGHTING (EXT): CHARGE LID LIGHT: INSPECTION; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## INSPECTION

## PROCEDURE


### 1. INSPECT SPOT LIGHT ASSEMBLY

(a) Check the spot light assembly.

(1) Apply auxiliary battery voltage to the connector and check the light illumination conditions.

OK:

AUXILIARY BATTERY CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) - R41-2 (LP) Auxiliary battery negative (-) - R41-1 (LDLP)	Illuminates

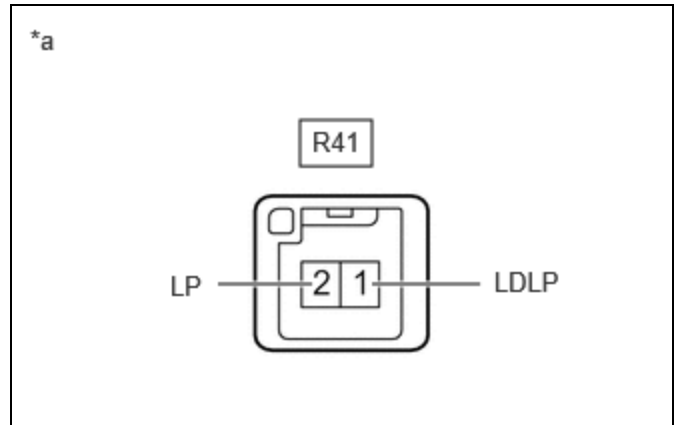

**HINT:**

If the result is not as specified, replace the spot light assembly.

*a	Component without harness connected (Spot Light Assembly)
----	---

