

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000000292KQ
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> LIGHTING (EXT): ILLUMINATION LIGHT ASSEMBLY: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

### PROCEDURE

#### 1. INSPECT LED ILLUMINATION LIGHT LH

##### (a) Illumination Inspection

- (1) Apply auxiliary battery voltage to the LED illumination light LH and check that the light illuminates.

OK:




[Click Location & Routing\(B8\)](#)

[Click Connector\(B8\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) - B8-1 (B)	LED illumination light illuminates
Auxiliary battery negative (-) - B8-2 (E)	

If the result is not as specified, replace the LED illumination light LH.

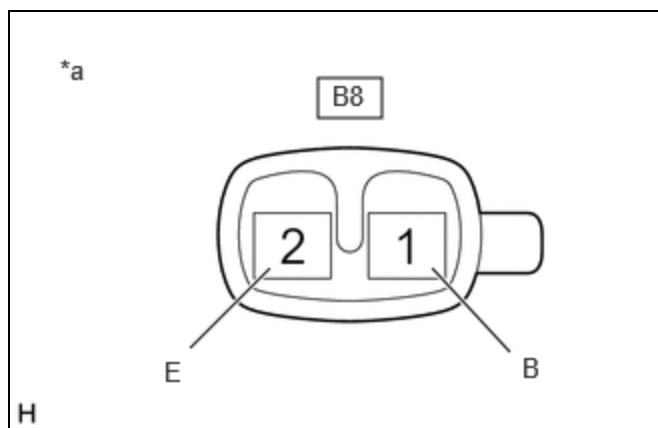

*a	Component without harness connected (LED Illumination Light LH)
----	---

#### 2. INSPECT LED ILLUMINATION LIGHT RH

##### (a) Illumination Inspection

- (1) Apply auxiliary battery voltage to the LED illumination light RH and check that the light illuminates.

OK:




[Click Location & Routing\(B11\)](#)

[Click Connector\(B11\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) - B11-1 (B)	LED illumination light illuminates
Auxiliary battery negative (-) - B11-2 (E)	

If the result is not as specified, replace the LED illumination light RH.

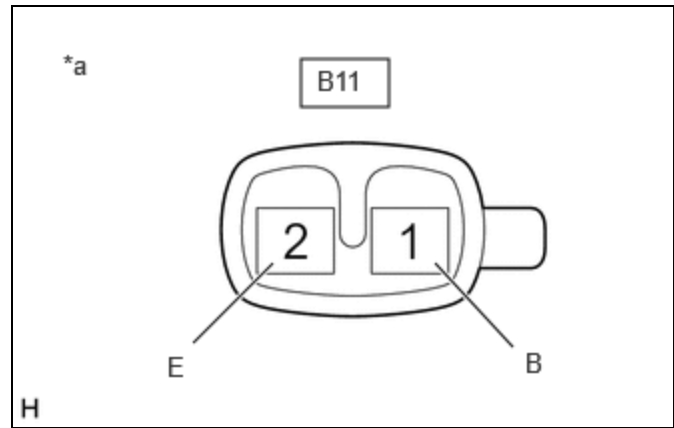

*a	Component without harness connected (LED Illumination Light RH)
----	---

