

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000000292KG
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: LIGHTING (EXT): REAR LIGHT ASSEMBLY: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

REMOVAL

CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during rear light assembly removal/installation are shown below.


Necessary Procedures After Parts Removed/Installed/Replaced




REPLACED PART OR PERFORMED PROCEDURE	NECESSARY PROCEDURES	EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	LINK
<ul style="list-style-type: none"> Power back door unit assembly set LH*1 Power back door unit assembly set RH*1 	Reset back door close position	Power Back Door System	INFO

*1: Even when not replacing the part, it is necessary to perform the specified necessary procedures after installation.

CAUTION / NOTICE / HINT

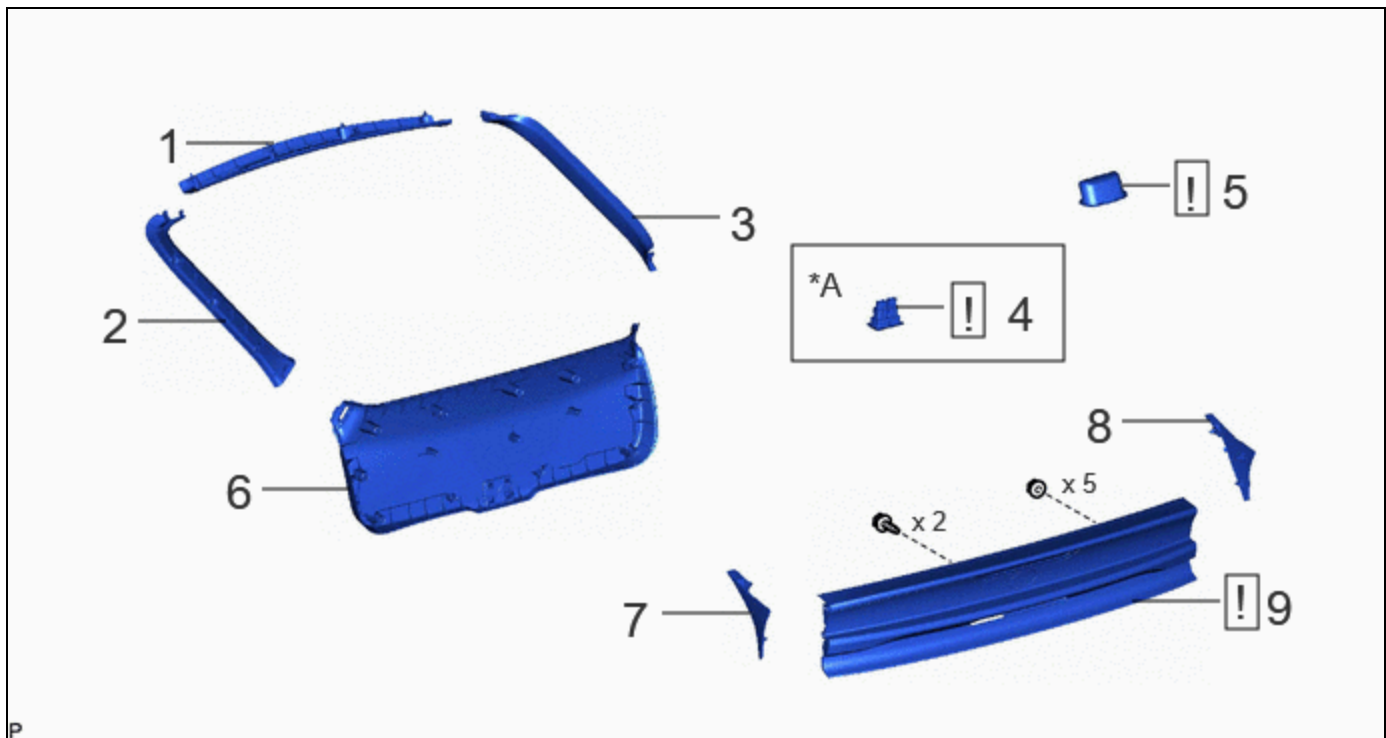COMPONENTS (REMOVAL)



	PROCEDURE	PART NAME CODE			
1	BACK DOOR UPPER TRIM PANEL ASSEMBLY	64790B	-	-	-
2	BACK DOOR SIDE GARNISH LH	67938A	-	-	-
3	BACK DOOR SIDE GARNISH RH	67937B	-	-	-
4	GLIDE DOOR INSIDE HANDLE BASE ASSEMBLY	69290G	INFO	-	-
5	DOOR PULL HANDLE	74811D	INFO	-	-
6	BACK DOOR TRIM BOARD ASSEMBLY	67750	-	-	-
7	BACK DOOR OUTSIDE GARNISH LOWER MOULDING LH	76816	-	-	-
8	BACK DOOR OUTSIDE GARNISH LOWER MOULDING RH	76815	-	-	-
9	REAR LIGHT ASSEMBLY	-	INFO	-	-

*A	w/ Power Back Door	-	-
----	--------------------	---	---

PROCEDURE

1. REMOVE BACK DOOR UPPER TRIM PANEL ASSEMBLY

Click here [INFO](#)

2. REMOVE BACK DOOR SIDE GARNISH LH

Click here [INFO](#)

3. REMOVE BACK DOOR SIDE GARNISH RH

(a) Use the same procedure as for the LH side.

4. REMOVE GLIDE DOOR INSIDE HANDLE BASE ASSEMBLY (w/ Power Back Door)

	Click here INFO
---	---------------------------------


5. REMOVE DOOR PULL HANDLE

	Click here INFO
---	---------------------------------

6. REMOVE BACK DOOR TRIM BOARD ASSEMBLY

Click here [INFO](#)

7. REMOVE BACK DOOR OUTSIDE GARNISH LOWER MOULDING LH

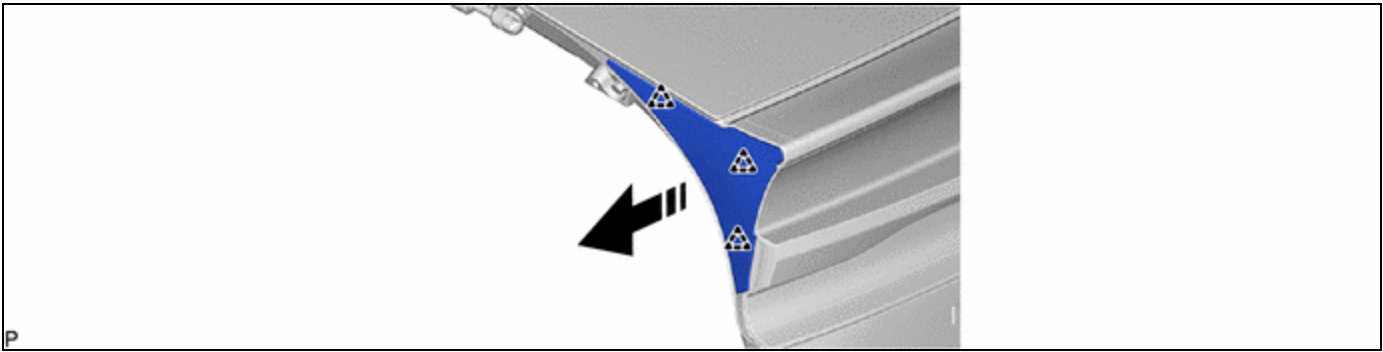


	Remove in this Direction	-	-
--	--------------------------	---	---

8. REMOVE BACK DOOR OUTSIDE GARNISH LOWER MOULDING RH

(a) Use the same procedure as for the LH side.

9. REMOVE REAR LIGHT ASSEMBLY

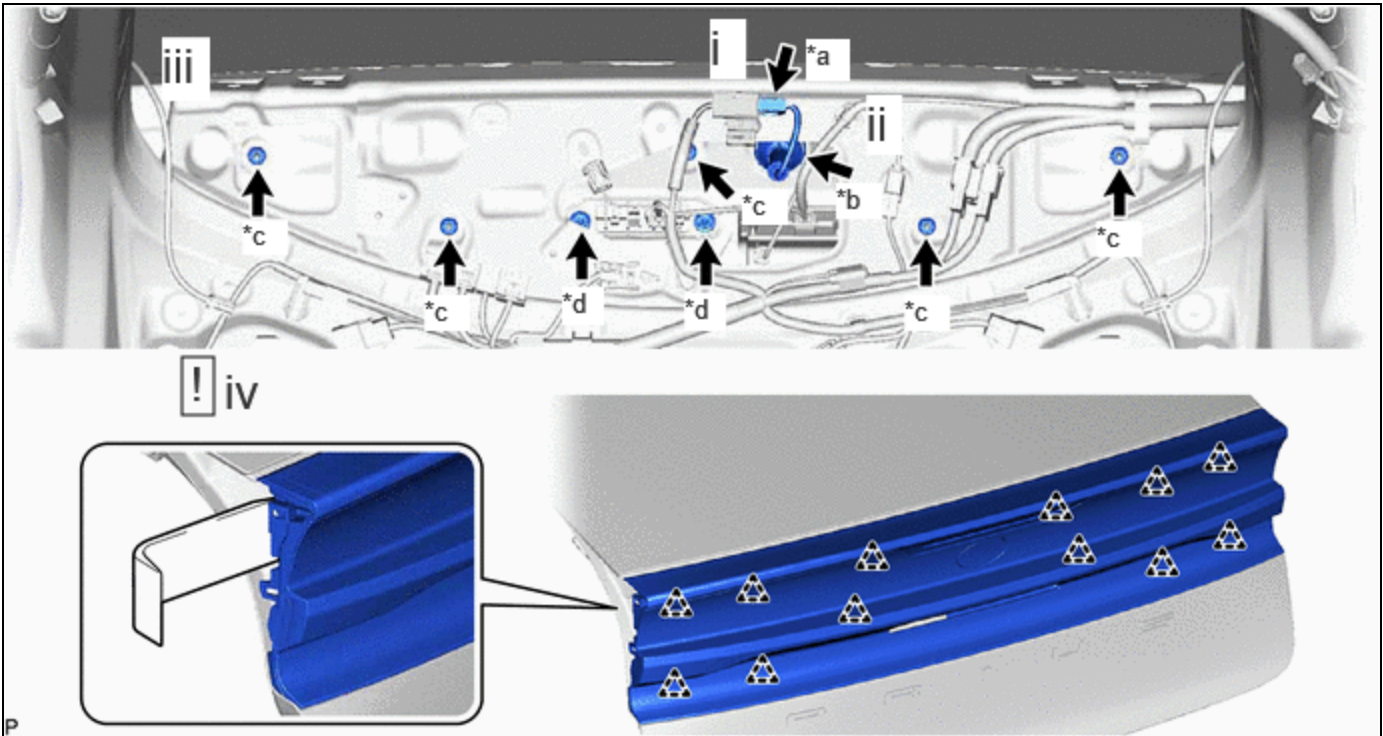

*a	Connector	*b	Grommet
*c	Nut	*d	Bolt

- (1) Disconnect the connector.
- (2) Disconnect the grommet.
- (3) Remove the 2 bolts and 5 nuts.
- (4) Using a moulding remover, disengage the 12 clips to remove the rear light assembly.

