

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BNIF
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> MIRROR (EXT): POWER MIRROR CONTROL SYSTEM: HOW TO PROCEED WITH TROUBLESHOOTING; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

**HOW TO PROCEED WITH TROUBLESHOOTING**

**CAUTION / NOTICE / HINT**

**HINT:**

- Use the following procedure to troubleshoot the power mirror control system.
- \*: Use the GTS.

**PROCEDURE**

<b>1.</b>	<b>VEHICLE BROUGHT TO WORKSHOP</b>
-----------	------------------------------------

**NEXT**



<b>2.</b>	<b>CUSTOMER PROBLEM ANALYSIS</b>
-----------	----------------------------------

**HINT:**

- In troubleshooting, confirm that the problem symptoms have been accurately identified. Preconceptions should be discarded in order to make an accurate judgment. To clearly understand what the problem symptoms are, it is extremely important to ask the customer about the problem and the conditions at the time the malfunction occurred.
- Gather as much information as possible for reference. Past problems that seem unrelated may also help in some cases.
- The following 5 items are important points for problem analysis:

What	Vehicle model, system name
When	Date, time, occurrence frequency
Where	Road conditions
Under what conditions?	Driving conditions, weather conditions
How did it happen?	Problem symptoms

**NEXT**



<b>3.</b>	<b>PRE-CHECK</b>
-----------	------------------

(a) Measure the auxiliary battery voltage with the ignition switch off.

Standard Voltage:

11 to 14 V

If the voltage is below 11 V, recharge or replace the auxiliary battery before proceeding to the next step.

(b) Check the fuses and relays.

(c) Check the connector connections and terminals to make sure that there are no abnormalities such as loose connections, deformation, etc.

## NEXT



### 4. INSPECT COMMUNICATION FUNCTION OF CXPI COMMUNICATION SYSTEM\*

(a) Using the GTS, check for CXPI communication system DTCs.

Click here [INFO](#)

RESULT	PROCEED TO
CXPI DTCs are not output	A
CXPI DTCs are output	B

**B** [GO TO CXPI COMMUNICATION SYSTEM](#)

## A



### 5. CHECK COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM\*

(a) Using the GTS, check for CAN communication system DTCs.

for HEV Model: Click here [INFO](#)

for PHEV Model: Click here [INFO](#)

RESULT	PROCEED TO
CAN DTCs are not output	A
CAN DTCs are output	B

**B ▶ GO TO CAN COMMUNICATION SYSTEM**for HEV Model: Click here [INFO](#)for PHEV Model: Click here [INFO](#)**A****6. INSPECT COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM\***

(a) Using the GTS, check for LIN communication system DTCs.

Click here [INFO](#)

RESULT	PROCEED TO
LIN DTCs are not output	A
LIN DTCs are output	B

**B ▶ GO TO LIN COMMUNICATION SYSTEM****A****7. PROBLEM SYMPTOMS TABLE**

(a) Refer to Problem Symptoms Table.

Click here [INFO](#)

RESULT	PROCEED TO
Fault is not listed in Problem Symptoms Table	A
Fault is listed in Problem Symptoms Table	B

**B ▶ GO TO STEP 9****A**

**8. OVERALL ANALYSIS AND TROUBLESHOOTING\***

(a) Operation Check

Click here 

(b) Terminals of ECU

Click here 

(c) Data List / Active Test

Click here 

(d) Inspection

**NEXT****9. REPAIR OR REPLACE****NEXT****10. CONFIRMATION TEST**

**NEXT**  **END**

