

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029X60
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: WINDOW / GLASS: POWER WINDOW CONTROL SYSTEM: CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

CUSTOMIZE PARAMETERS

CUSTOMIZE POWER WINDOW CONTROL SYSTEM

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

(a) Customizing with the GTS

(1) Select the setting by referring to the table below.

Power Window

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Door Key P/W Up Function	Function to close the power windows using the mechanical key	Disable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
Door Key P/W Down Function	Function to open the power windows using the mechanical key	Disable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
P/W Down W/ Transmit Function	Function to open the power windows using the key	Disable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
P/W Operation Buzzer W/ Transmit Function	Power window buzzer answer-back of wireless function	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
D Window Auto Up Function	Function to enable or disable the auto up function for the driver door power window using the multiplex network master switch assembly.	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
D Window Auto Down Function	Function to enable or disable the auto down function for the driver door power window using the multiplex network master switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
P Window Auto Up Function	Function to enable or disable the auto up function for the front passenger door power window using the power window regulator switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
P Window Auto Up by Driver Function	Function to enable or disable the remote auto up function for the front passenger door power window using the multiplex network master switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
P Window Auto Down Function	Function to enable or disable the auto down function for the front passenger door power window using the power window regulator switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
P Window Auto Down by Driver Function	Function to enable or disable the remote auto down function for the front passenger door power window using the multiplex network master switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
RR Window Auto Up Function	Function to enable or disable the auto up function using the rear power window regulator switch assembly (for RH door)	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
RR Window Auto Up by Driver Function	Function to enable or disable the remote auto up function for the rear RH door power window using the multiplex network master switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
RR Window Auto Down Function	Function to enable or disable the auto down function using the rear power window regulator switch assembly (for RH door)	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
RR Window Auto Down by Driver Function	Function to enable or disable the remote auto down function for the rear RH door power window using the multiplex network master switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
RL Window Auto Up Function	Function to enable or disable the auto up function using the rear power window regulator switch assembly (for LH door)	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
RL Window Auto Up by Driver Function	Function to enable or disable the remote auto up function for the rear LH door power window using the multiplex network master switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
RL Window Auto Down Function	Function to enable or disable the auto down function using the rear power window regulator switch assembly (for LH door)	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
RL Window Auto Down by Driver Function	Function to enable or disable the remote auto down function for the rear LH door power window using the multiplex network master switch assembly	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)

Warning

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Window Open Warning Function	Function to enable or disable the window open warning	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
Proposal Services Function	Function to enable or disable the display of a message for suggestion service function	ON	\$00:OFF,\$01:Parked,\$03:ON	Main body ECU (Multiplex network body ECU)

Others

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Power Window Voice Control Function	Function to enable or disable door window open/close linked voice recognition control.*	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)

*: w/ Body Device Voice Recognition Function

(b) Customizing with the multi-display

(1) Turn the ignition switch to ON.

(2) Enter the following menus: Settings / Vehicle Customize / Utility.

(3) Select the setting by referring to the table below.

Utility

DISPLAY	DESCRIPTION	DEFAULT	SETTING	RELEVANT ECU
Vehicle suggestions	Function to enable or disable the display of a message for suggestion service function	ON	ON/While stopped/OFF	Main body ECU (Multiplex network body ECU)

