ast Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029X6S
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: WINDOW / GLASS: WINDSHIELD DEICER SYSTEM: OPERATION CHECK; 2023 - 2024 MY Prius Prius Prime		

OPERATION CHECK

CHECK WINDSHIELD DEICER SYSTEM

NOTICE:

If the windshield deicer system is operated when the auxiliary battery voltage is low, due to the electrical load limit control that gives voltage supply priority to the power steering system, the windshield deicer system may not operate. In this case, check the vehicle control history (RoB) of the power steering system and check that "Battery Voltage Drop: X208F" is not stored before proceeding with troubleshooting.

Click here

- (a) Turn the ignition switch to ON.
- (b) Check that the windshield deicer wire (windshield glass) becomes warm by operating the front window deicer switch of the air conditioning control assembly.
- (c) Confirm that windshield deicer system operation stops after approximately 15 minutes.



