| Last Modified: 12-04-2024  | 6.11:8.1.0         | <b>Doc ID:</b> RM10000000290DN       |   |
|--|--------------------|--------------------------------------|---|
| Model Year Start: 2023   | Model: Prius Prime | <b>Prod Date Range:</b> [12/2022 - ] |   |
| Title: WIPER / WASHER: WASHER MOTOR: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - |                    |                                      | ] |

# **INSPECTION**

# **PROCEDURE**


### 1. INSPECT WINDSHIELD WASHER MOTOR AND PUMP ASSEMBLY

- (a) Check the washer operation
  - (1) This check should be performed with the windshield washer motor and pump assembly installed to the windshield washer jar assembly and fill the washer jar with washer fluid.
  - (2) Apply auxiliary battery voltage to the windshield washer motor and pump assembly and check that the washer fluid flows from the washer jar.

OK:

#### Front Washer

| CONDITION  | SPECIFIED CONDITION  |
|--|--|
| Auxiliary battery positive (+) → Terminal A46-1 (B) Auxiliary battery negative (-) → Terminal A46-2 (SW) | Washer fluid flows from the front washer nozzle sub-assembly |

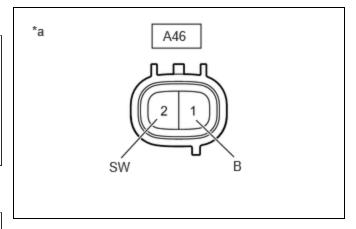

### **Rear Washer**

| CONDITION   | SPECIFIED CONDITION                            |
|---|--|
| Auxiliary battery positive (+)  → Terminal A46-2 (SW)  Auxiliary battery negative  (-) → Terminal A46-1 (B) | Washer fluid flows from the rear washer nozzle |

\*a (Windshield Washer Motor and Pump Assembly)

If the result is not as specified, replace the windshield washer motor and pump assembly.



