

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029ODO
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> WIPER / WASHER: WASHER MOTOR: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## REMOVAL

### CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization, or registration) that must be performed after parts are removed and installed, or replaced during washer motor removal/installation are shown below.

#### **Necessary Procedures After Parts Removed/Installed/Replaced**

REPLACED PART OR PERFORMED PROCEDURE	NECESSARY PROCEDURE	EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURE NOT PERFORMED	LINK
Tires	<ul style="list-style-type: none"> <li>Initialization*1*2</li> <li>Tire Position Identification*1*2</li> </ul>	Tire Pressure Warning System	Refer to Procedures Necessary When Replacing Parts (for Tire Pressure Warning System) <a href="#">INFO</a>
	Rear television camera assembly optical axis (Back camera position setting)*3	Parking Assist Monitor System	<a href="#">INFO</a>
	Parking assist ECU initialization*3	Panoramic View Monitor System	<a href="#">INFO</a>
		Advanced Park	<a href="#">INFO</a>


\*1: Also necessary after performing a tire rotation.

\*2: It is not necessary to perform this procedure if the tire pressure warning valve and transmitters are installed to the same location.

\*3: The vehicle height changes because of tire replacement.

### CAUTION / NOTICE / HINT

#### **COMPONENTS (REMOVAL)**

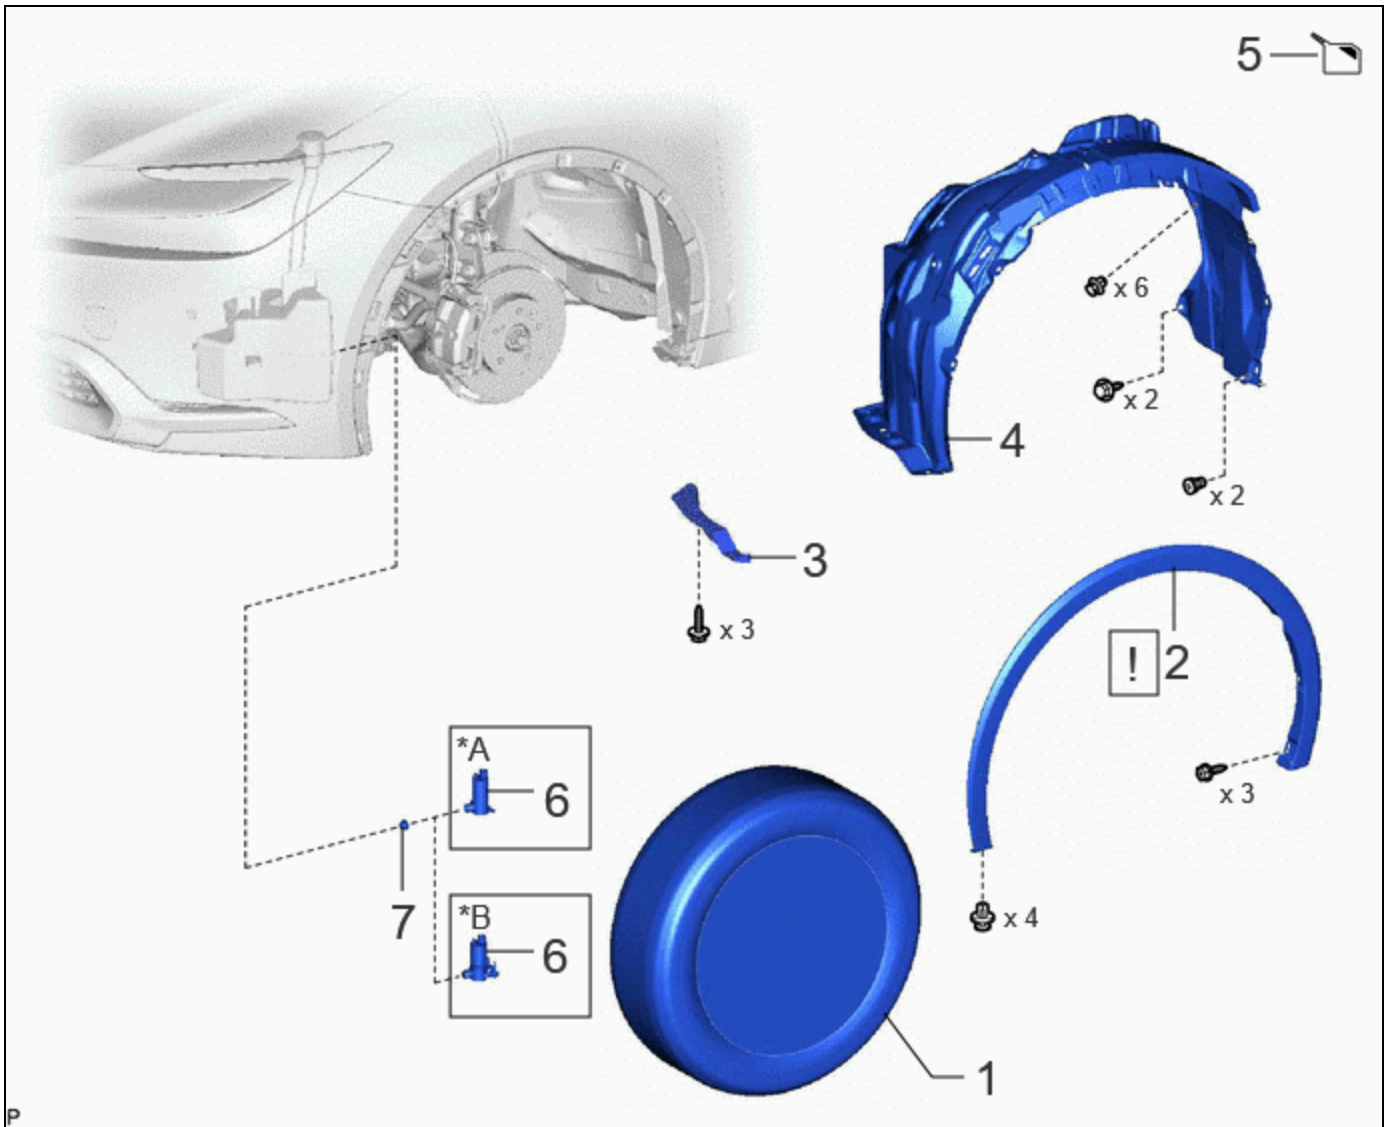

PROCEDURE		PART NAME CODE			
1	FRONT WHEEL RH	-	-	-	-
2	FRONT FENDER MOULDING SUB-ASSEMBLY LH	75602A	<a href="#">INFO</a>	-	-
3	FRONT WHEEL OPENING EXTENSION PAD LH	53852B	-	-	-
4	FRONT FENDER LINER LH	53876A	-	-	-
5	DRAIN WASHER FLUID	-	-	<a href="#">INFO</a>	-
6	WINDSHIELD WASHER MOTOR AND PUMP ASSEMBLY	85310	-	-	-
7	WINDSHIELD WASHER JAR PACKING	85336D	-	-	-

*A	for Type A	*B	for Type B
----	------------	----	------------

## PROCEDURE

### 1. REMOVE FRONT WHEEL RH

Click here [INFO](#)


## 2. REMOVE FRONT FENDER MOULDING SUB-ASSEMBLY LH



	Click here <a href="#">INFO</a>
---	---------------------------------

## 3. REMOVE FRONT WHEEL OPENING EXTENSION PAD LH

Click here [INFO](#)

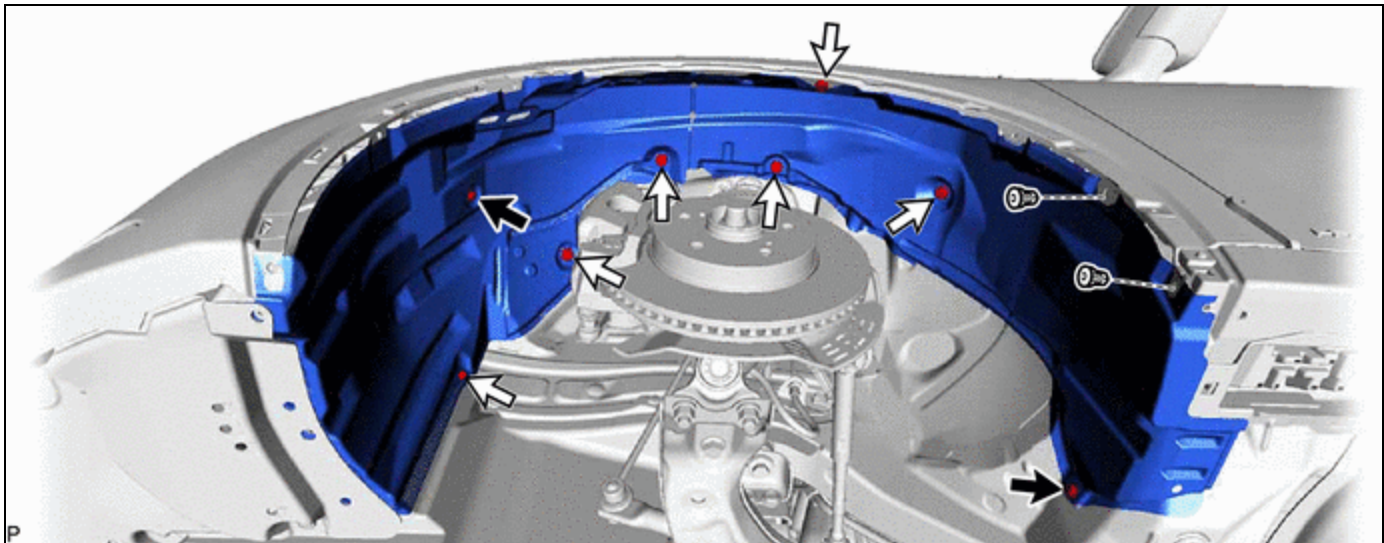
## 4. REMOVE FRONT FENDER LINER LH



	Screw		Clip
---	-------	---	------

## 5. DRAIN WASHER FLUID

(a) for Type A:

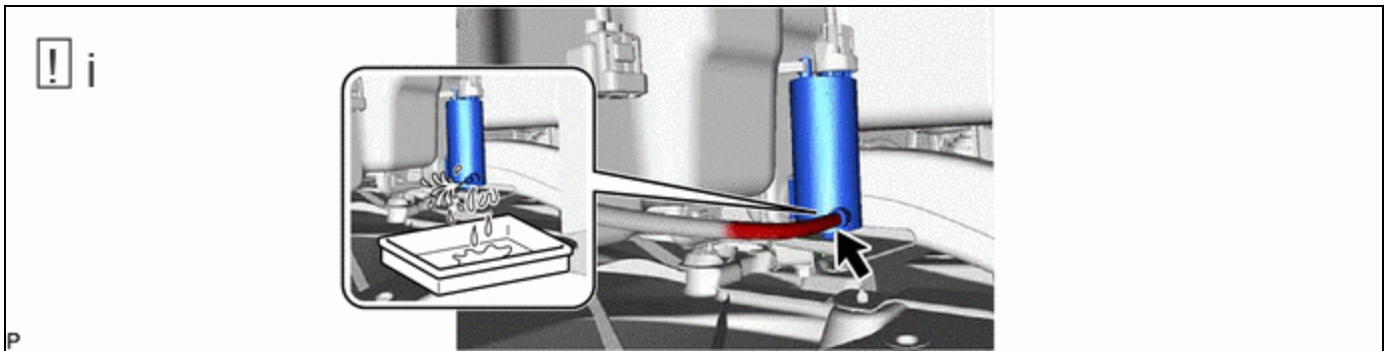


(1) Disconnect the washer hose from the windshield washer motor and pump assembly, and drain the washer fluid.

**HINT:**

Use a container to collect the washer fluid.

(b) for Type B:

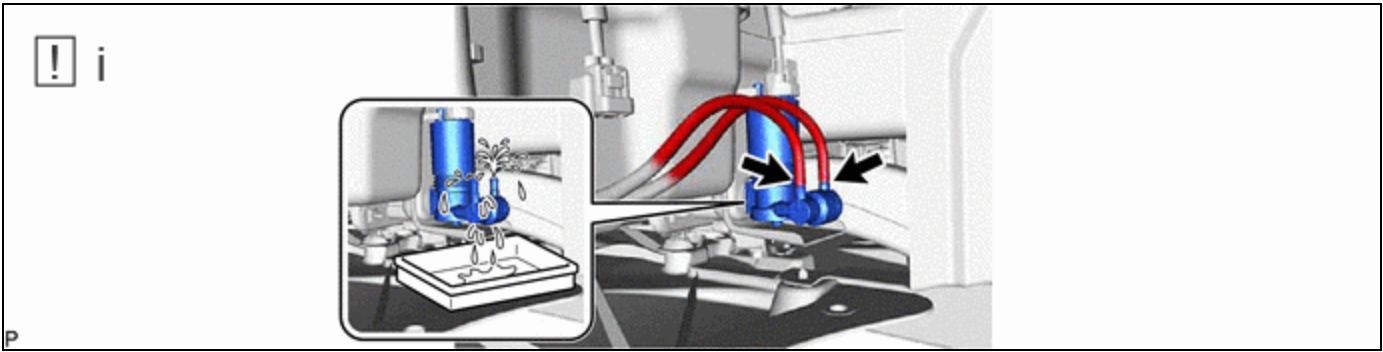


(1) Disconnect the 2 washer hoses from the windshield washer motor and pump assembly, and drain the washer fluid.

**HINT:**

Use a container to collect the washer fluid.


**6. REMOVE WINDSHIELD WASHER MOTOR AND PUMP ASSEMBLY**

(a) for Type A:

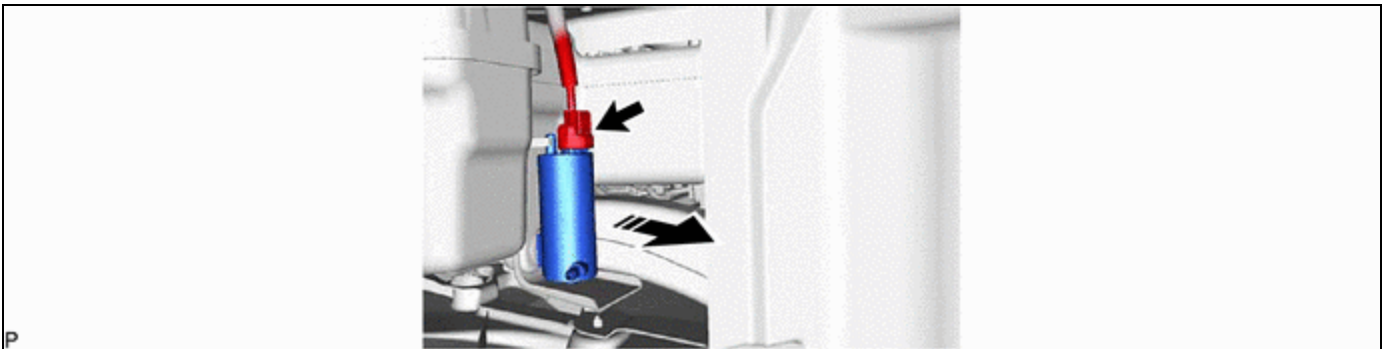

	Remove in this Direction	-	-
--	--------------------------	---	---

(b) for Type B:

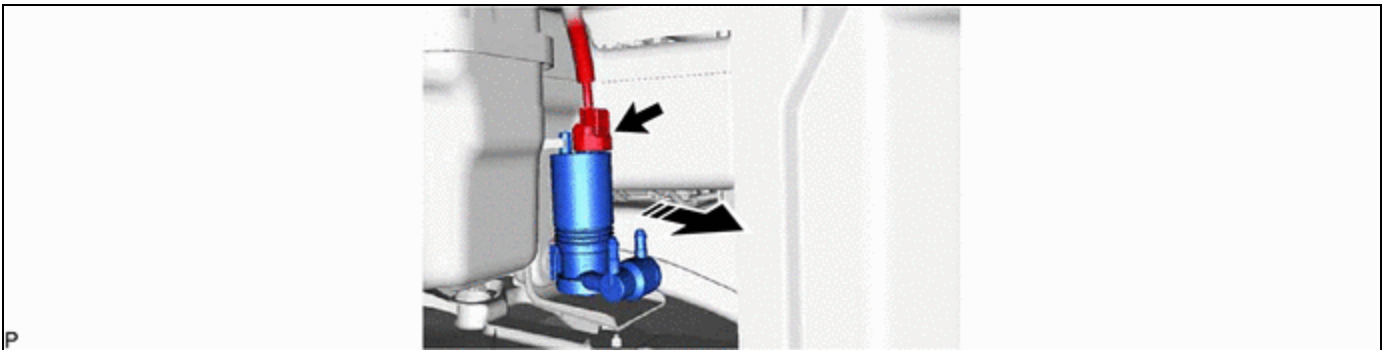

	Remove in this Direction	-	-
--	--------------------------	---	---

**7. REMOVE WINDSHIELD WASHER JAR PACKING**

**HINT:**

Perform this procedure only when replacement of the windshield washer jar packing is necessary.

