


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002BNU1
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: WIPER / WASHER: WIPER SWITCH: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

REMOVAL

CAUTION / NOTICE / HINT

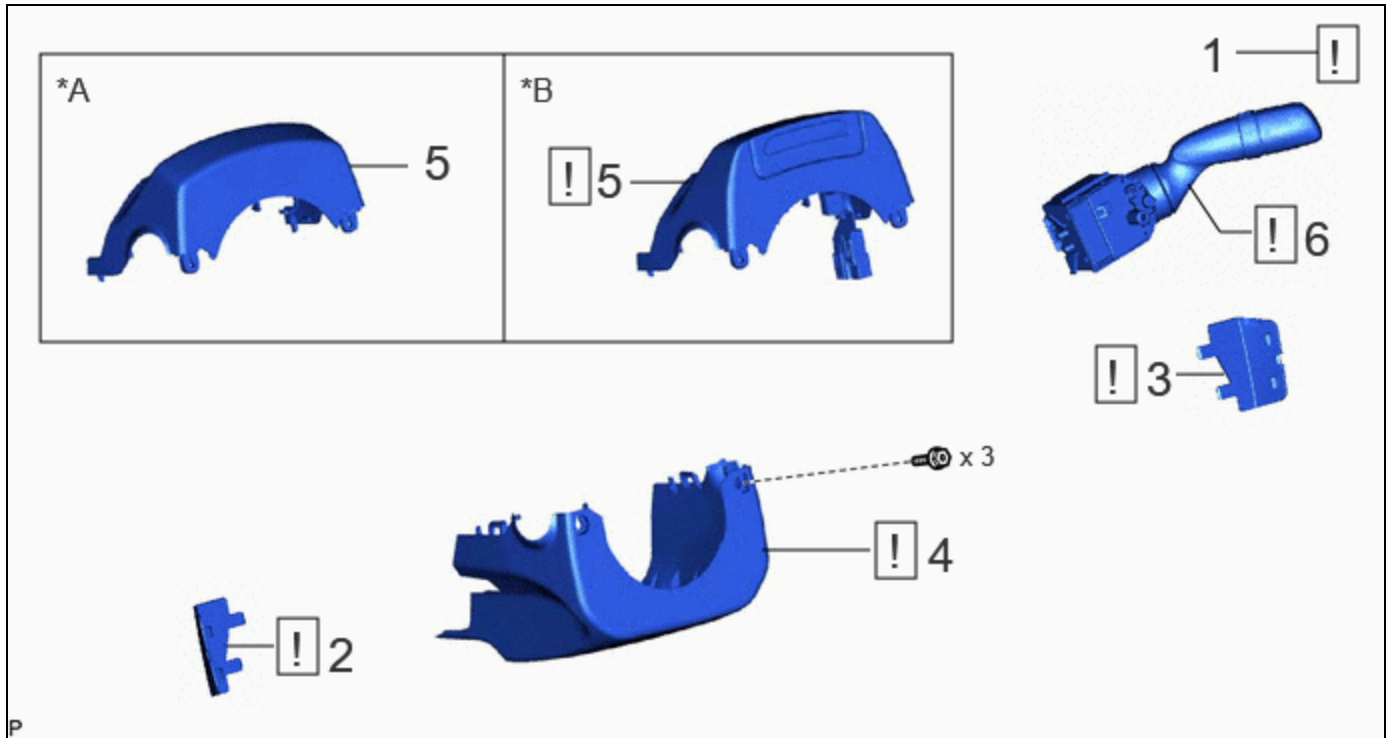



PROCEDURE		PART NAME CODE			
1	STEERING WHEEL POSITION	-	INFO	-	-
2	NO. 3 STEERING WHEEL LOWER COVER	45187	INFO	-	-
3	NO. 2 STEERING WHEEL LOWER COVER	45186	INFO	-	-
4	LOWER STEERING COLUMN COVER	45287	INFO	-	-
5	UPPER STEERING COLUMN COVER	45286B	INFO	-	-
6	WINDSHIELD WIPER SWITCH ASSEMBLY	84650	INFO	-	-

*A	w/o Driver Monitor Camera	*B	w/ Driver Monitor Camera
----	---------------------------	----	--------------------------

PROCEDURE


1. STEERING WHEEL POSITION

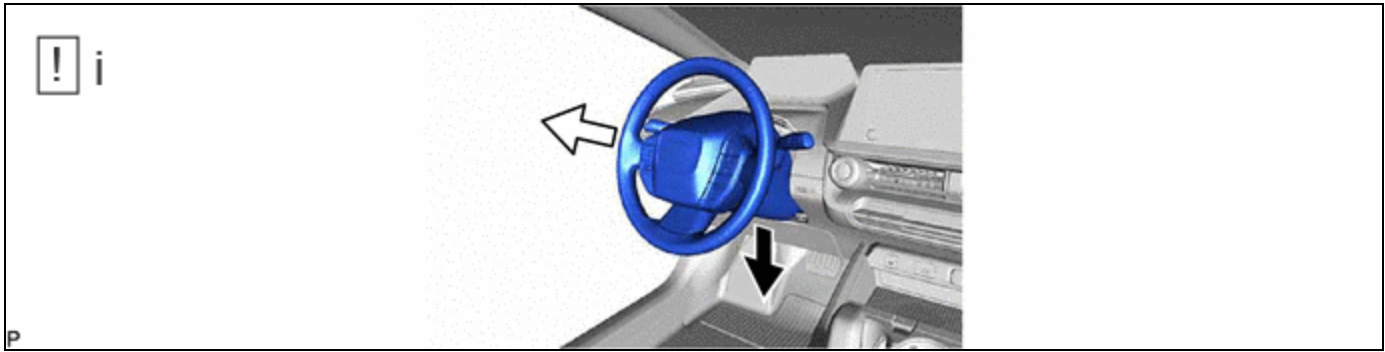

	Lower		Extend
---	-------	---	--------

(1) Release the tilt and telescopic lever and fully extend and lower the steering column sub-assembly.

2. REMOVE NO. 3 STEERING WHEEL LOWER COVER

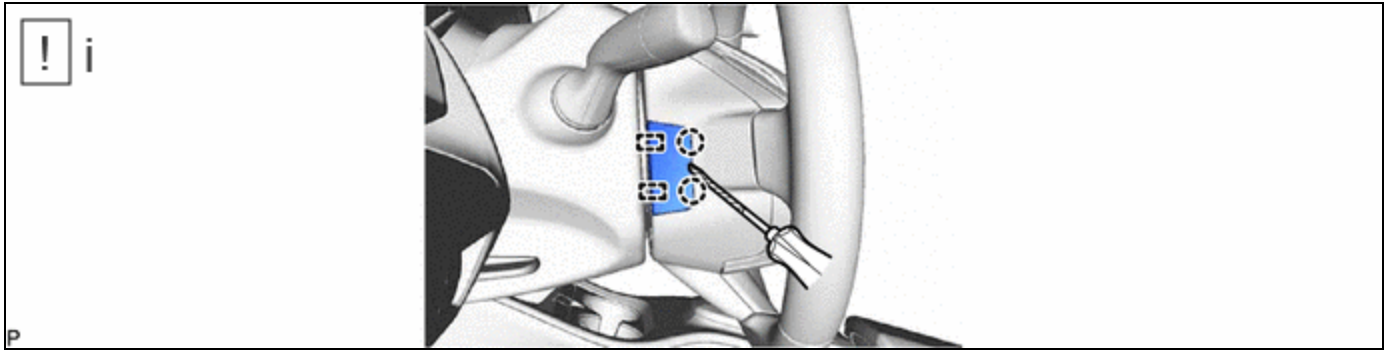


(1) Using a screwdriver with its tip wrapped with protective tape, disengage the 2 claws and 2 guides to remove the No. 3 steering wheel lower cover as shown in the illustration.


3. REMOVE NO. 2 STEERING WHEEL LOWER COVER

(a) Use the same procedure as for the No. 3 steering wheel lower cover.

4. REMOVE LOWER STEERING COLUMN COVER

	<p>NOTICE:</p> <p>Removing the lower steering column cover in the incorrect order will cause the parts to break.</p>
---	---

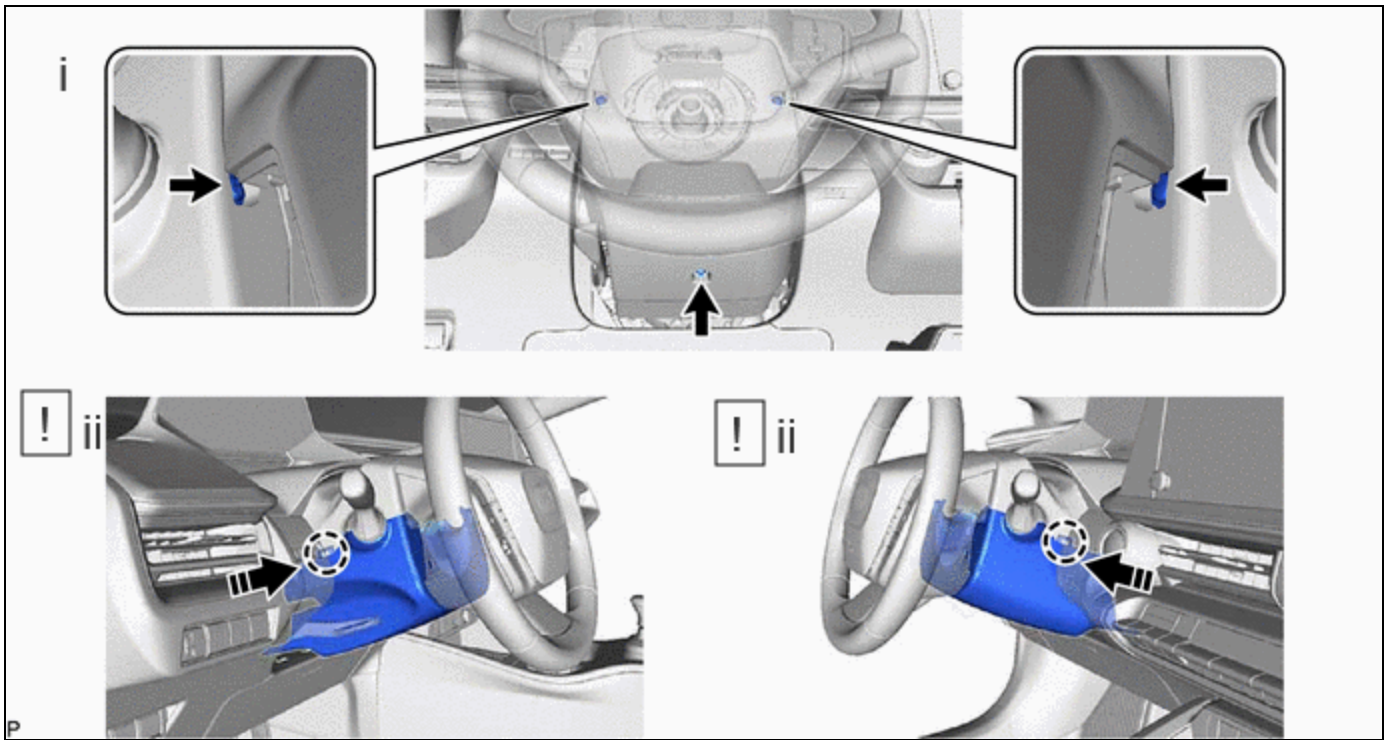

	Push in this direction	-	-
---	------------------------	---	---


- (1) Remove the 3 screws.
- (2) Push the lower steering column cover and disengage the 2 claws as shown in the illustration to remove the lower steering column cover.

5. REMOVE UPPER STEERING COLUMN COVER

w/ Driver Monitor Camera:


NOTICE:
As there is a possibility of the upper steering column cover cracking, do not apply oil, grease, etc., at the position shown in the illustration.


!

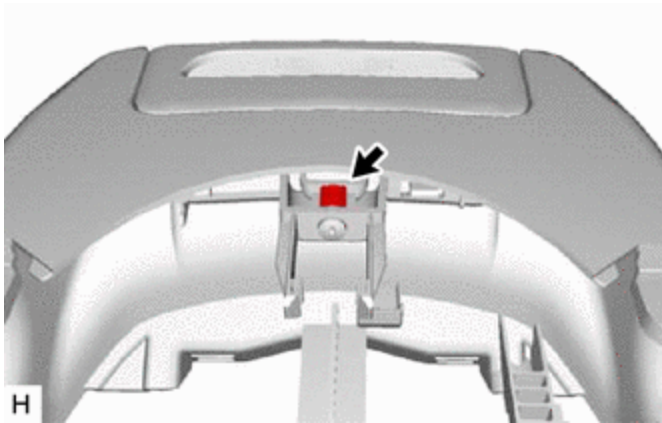


H


(a) w/o Driver Monitor Camera:

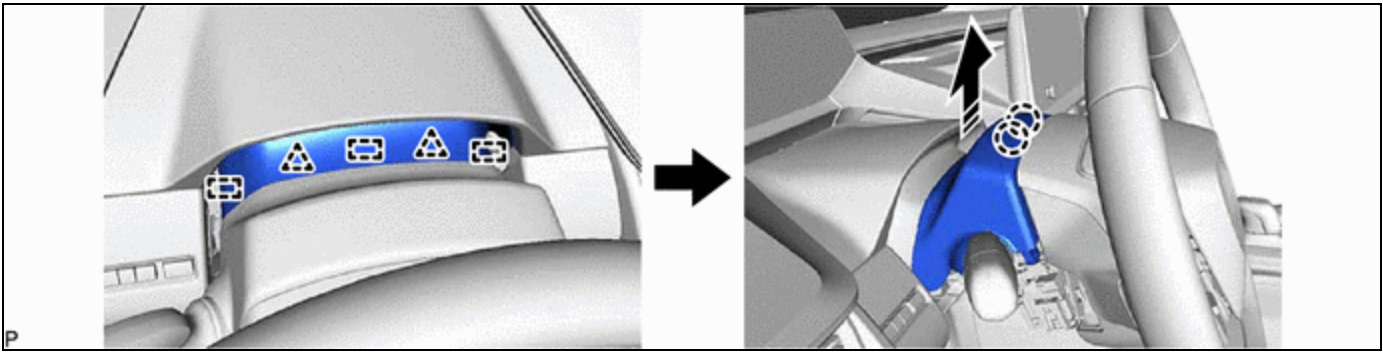


	Remove in this Direction	-	-
---	--------------------------	---	---


(b) w/ Driver Monitor Camera:

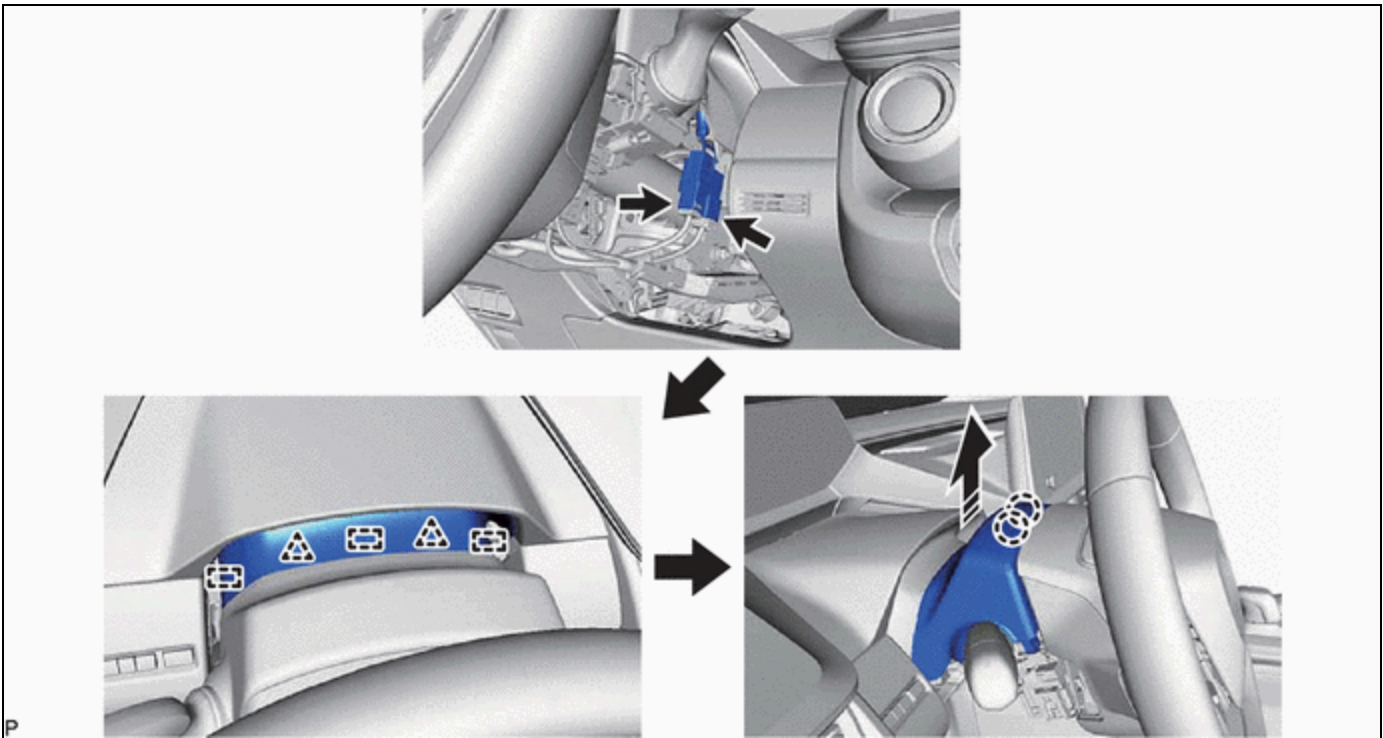

	Remove in this Direction	-	-
---	--------------------------	---	---

6. REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY

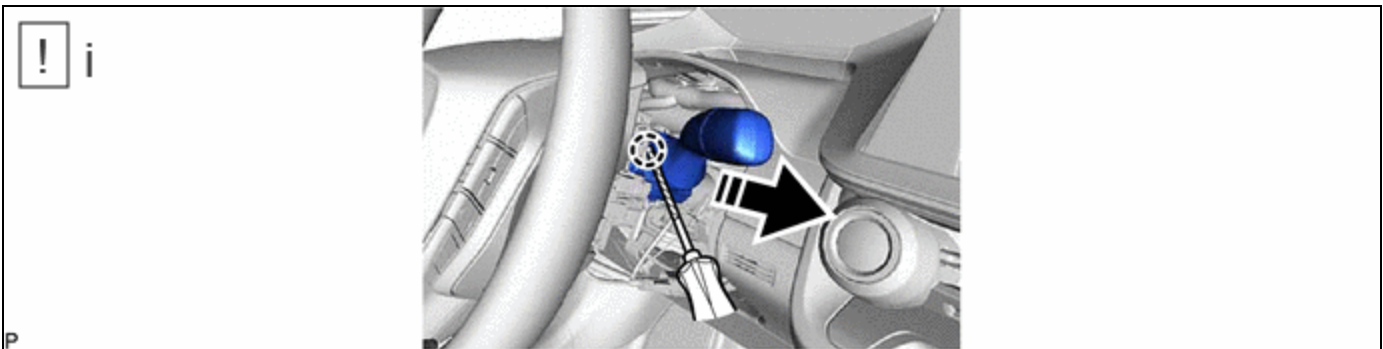

	Remove in this Direction	-	-
---	--------------------------	---	---

(1) Using a screwdriver with its tip wrapped with protective tape, disengage the claw and remove the windshield wiper switch assembly as shown in the illustration.

NOTICE:

If the claw is pulled with excessive force, it may break.

