

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029X4B
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT: CLIMATE CONTROL SEAT SYSTEM: OPERATION CHECK; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## OPERATION CHECK

### CHECK CLIMATE CONTROL SEAT SYSTEM

- (a) Turn the ignition switch to ON.
- (b) Operate the climate control switch to switch the seat blower operation in order from HI → MID → LO → OFF and check that the blower level indicator illuminates.
- (c) Check that the seat blower volume changes according to the operation of the climate control switch as follows: HI → MID → LO.

