

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029X35
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SEAT: FRONT POWER SEAT CONTROL SYSTEM (w/ Memory): CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

CUSTOMIZE PARAMETERS

CUSTOMIZE FRONT POWER SEAT CONTROL SYSTEM (w/ Memory)

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Record the current settings before customizing.

HINT:

The following items can be customized.

(a) Customizing with the GTS

(1) Select the setting by referring to the table below.

Seat

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Seat position/Tilt & Telesco memory recall setting	This customize function switches the condition of the seat position and Tilt & Telescopic memory recall. Possible recall activation parameter "D-door unlock and open by smart system" or "Any door unlock and open with smart system".	Driver Door	\$00:Driver Door,\$01:All Doors	Main body ECU (Multiplex network body ECU)
Driver Seat Distance Adjust when Get Off	Setting of seat slide distance for power easy access system.	Normal	\$00:OFF,\$01:Little,\$02:Normal	Main body ECU (Multiplex network body ECU)
Memory Call Function	Setting of memory call function.	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)
Auto Operation Interference Avoidance Function (D)	Setting of interference avoidance function for automatic operation.	ON	\$00:OFF,\$01:ON	Position control ECU assembly LH

Others

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Seat Position Voice Control Function	Function to enable or disable seat position adjustment by voice recognition control.*	Enable	\$00:Disable,\$01:Enable	Main body ECU (Multiplex network body ECU)

*: w/ Body Device Voice Recognition Function

(b) Customizing with the multi-display

- (1) Turn the ignition switch to ON.
- (2) Enter the following menus: Settings / Vehicle Customize / Boarding & Exit.
- (3) Select the setting by referring to the table below.

Driver easy exit

DISPLAY	DESCRIPTION	DEFAULT	SETTING	RELEVANT ECU
Seat slide	Setting of seat slide distance for power easy access system.	Full	Off / Partial / Full	Main body ECU (Multiplex network body ECU)

