Last Modified: 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029TOZ			
Model Year Start: 2023	Model: Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]			
<b>Title:</b> SEAT: FRONT SEATBACK HEATER (for Power Seat): INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]					

## **INSPECTION**

## **PROCEDURE**


## 1. INSPECT FRONT SEATBACK HEATER ASSEMBLY LH (w/o Climate Control Seat System)

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
1 - 3	Seat heater temperature 20°C (68°F)	3.096 to 3.784 Ω	Ω

If the result is not as specified, replace the front seatback heater assembly LH.

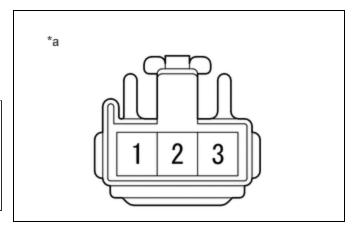

\*a Component without harness connected (Front Seatback Heater Assembly LH)


## 2. INSPECT FRONT SEATBACK HEATER ASSEMBLY LH (w/ Climate Control Seat System)

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
1 - 2	Seat heater temperature 20°C (68°F)	3.096 to 3.784 Ω

If the result is not as specified, replace the front seatback heater assembly LH.

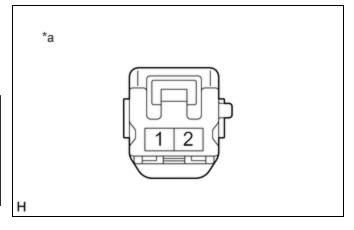

\*a Component without harness connected (Front Seatback Heater Assembly LH)



