

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029TOR
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SEAT: LUMBAR SUPPORT ADJUSTER ASSEMBLY: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

INSPECTION

PROCEDURE

1. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY LH

(a) Check the operation of the lumbar support adjuster assembly LH.

- (1) Check that the seatback moves forward and backward smoothly when the auxiliary battery is connected to the lumbar support adjuster assembly LH connector terminals.


OK:



[Click Location & Routing\(d5\)](#)

[Click Connector\(d5\)](#)

TESTER CONNECTION	OPERATIONAL DIRECTION
d5-1 - Auxiliary battery positive (+) d5-2 - Auxiliary battery negative (-)	Seatback moves forward
d5-2 - Auxiliary battery positive (+) d5-1 - Auxiliary battery negative (-)	Seatback moves backward
If the result is not as specified, replace the lumbar support adjuster assembly LH.	

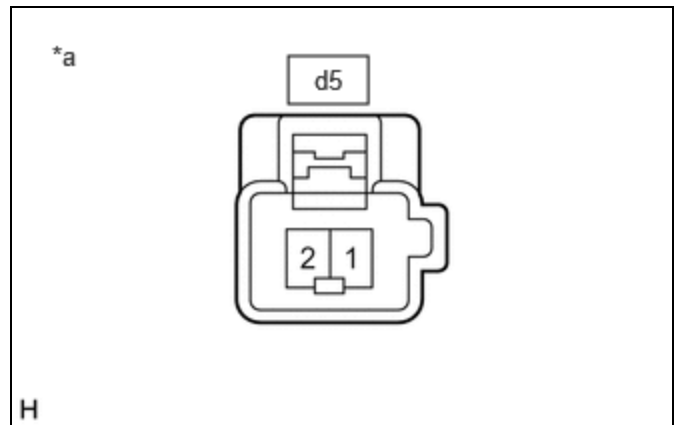

*a Component without harness connected (Lumbar Support Adjuster Assembly LH)

