

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000000293N3
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT: REAR SEAT CUSHION HEATER: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

### PROCEDURE


#### 1. INSPECT REAR NO. 1 SEAT CUSHION HEATER ASSEMBLY LH

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A-1 - B-2	Seat heater temperature 20 °C (68 °F)	2.49 to 3.05 Ω	Ω
A-2 - B-2	Seat heater temperature 20 °C (68 °F)	1.68 to 2.06 Ω	Ω

If the result is not as specified, replace the rear No. 1 seat cushion heater assembly LH.

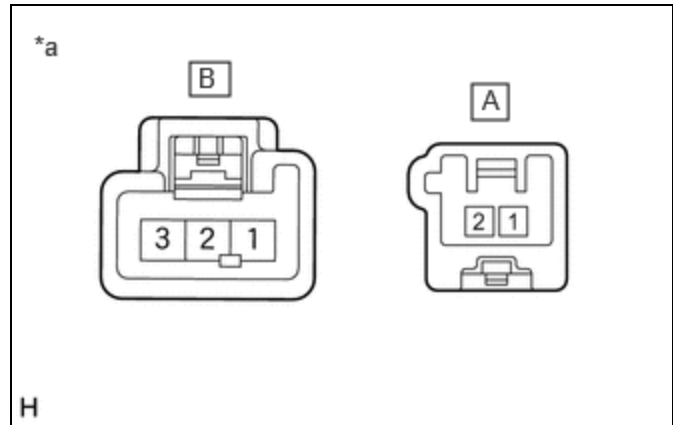

*a	Component without harness connected (Rear No. 1 Seat Cushion Heater Assembly LH)
----	----------------------------------------------------------------------------------


#### 2. INSPECT REAR NO. 1 SEAT CUSHION HEATER ASSEMBLY RH

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A-1 - B-2	Seat heater temperature 20 °C (68 °F)	2.49 to 3.05 Ω	Ω
A-2 - B-2	Seat heater temperature 20 °C (68 °F)	1.68 to 2.06 Ω	Ω

If the result is not as specified, replace the rear No. 1 seat cushion heater assembly RH.

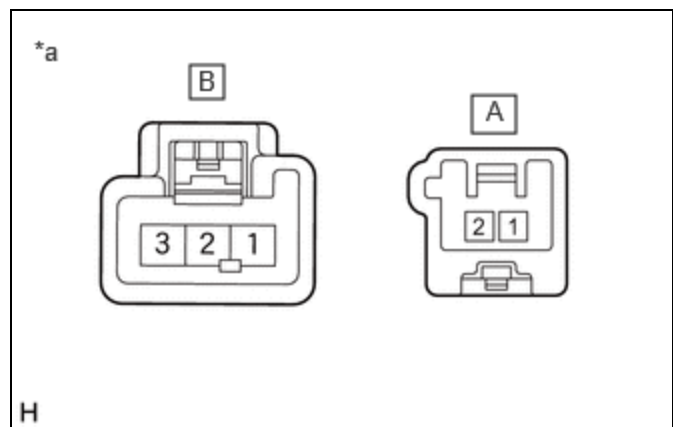

*a	Component without harness connected (Rear No. 1 Seat Cushion Heater Assembly RH)
----	----------------------------------------------------------------------------------

