

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029X4Q
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SEAT: REAR SEAT REMINDER SYSTEM: OPERATION CHECK; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

OPERATION CHECK

CHECK BASIC OPERATIONS

NOTICE:

Using the GTS, check that the rear seat reminder function is set to ON.

Click here 

HINT:

- Use the same procedure as for the RH side.
- If a higher priority notification is displayed on the multi-information display, the rear seat reminder will not be displayed.

(a) Operation Check 1:

- (1) Turn the ignition switch off.
- (2) Open the rear door LH for 2 seconds or more.
- (3) Close the rear door LH.
- (4) Start the hybrid system within 10 minutes.
- (5) Turn the ignition switch off, and then check that a rear seat reminder message is displayed on the multi-information display.
- (6) Perform a door lock operation using the wireless door lock function or entry lock function and check that the hazard warning lights flash 5 times and the wireless buzzer sounds 9 times after the door lock answer-back function operates.

HINT:

If a rear door RH or LH is opened and closed before a door lock operation is performed, the hazard warning lights and wireless buzzer do not operate.

(b) Operation Check 2:

- (1) Start the hybrid system.
- (2) Open the rear door LH for 2 seconds or more.
- (3) Close the rear door LH.
- (4) Turn the ignition switch off, and then check that a rear seat reminder message is displayed on the multi-information display.
- (5) Perform a door lock operation using the wireless door lock function or entry lock function and check that the hazard warning lights flash 5 times and the wireless buzzer sounds 9 times after the door lock answer-back function operates.

HINT:

If a rear door RH or LH is opened and closed before a door lock operation is performed, the hazard warning lights and wireless buzzer do not operate.

