

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029X3W
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT: SEAT HEATER SYSTEM: OPERATION CHECK; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## **OPERATION CHECK**

### **CHECK FRONT SEAT HEATER**

- (a) Turn the ignition switch to ON.
- (b) Operate the front seat heater switch to switch the seat heater operation in order from HI → MID → LO → OFF and check that the heater level indicator illuminates.
- (c) Check that the front seat surface temperature changes according to the operation of the front seat heater switch as follows: HI → MID → LO.

### **CHECK REAR SEAT HEATER (w/ Rear Seat Heater)**

- (a) Turn the ignition switch to ON.
- (b) Set the rear seat heater switch to "HI" or "LO" and check that the seat heater operates.
- (c) Operate the rear seat heater switch to switch the seat heater to "HI" or "LO" and check that the rear seat heater switch indicator illuminates or turns off.

