Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029X3Z		
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]		
Title: SEAT: SEAT HEATER SYSTEM: PROBLEM SYMPTOMS TABLE; 2023 - 2024 MY Prius Prius Prime [12/2022 -]				

PROBLEM SYMPTOMS TABLE

NOTICE:

If the seat heater system is operated when the auxiliary battery voltage is low, due to the electrical load limit control that gives voltage supply priority to the power steering system, the seat heater system may not operate. In this case, check the vehicle control history (RoB) of the power steering system and check that "Battery Voltage Drop: X208F" is not stored before proceeding with troubleshooting.

Click here NFO

HINT:

- Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.
- Inspect the fuses and relays related to this system before inspecting the suspected areas below.

Front Seat Heater

SYMPTOM	SUSPECTED AREA	LINK
Seat heater for front right seat does not operate	Refer to the "Seat Heater for Front Right Seat does not Operate".	INFO
Seat heater for front left seat does not operate	Refer to the "Seat Heater for Front Left Seat does not Operate".	INFO
Both front right seat heater and front left seat heater do not operate	Air conditioning control assembly	INFO
	Air conditioning amplifier assembly	INFO
	Power distribution box assembly	INFO
	Wire harness or connector	-

Rear Seat Heater (w/ Rear Seat Heater)

SYMPTOM	SUSPECTED AREA	LINK
IISeat heater for rear RH seat does not operate	Refer to the "Seat Heater for Rear Right Seat does not Operate".	INFO
IISeat heater for rear I H seat does not operate	Refer to the "Seat Heater for Rear Left Seat does not Operate".	INFO

SYMPTOM	SUSPECTED AREA	LINK
Both rear right seat heater and rear left seat heater do not operate	Air conditioning control assembly	INFO
	Air conditioning amplifier assembly	INFO
	Wire harness or connector	-



