

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029ZOA
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT BELT: OCCUPANT DETECTION SENSOR (for Front Passenger Side): INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

## PROCEDURE

### 1. INSPECT OCCUPANT DETECTION SENSOR (SEPARATE TYPE FRONT SEAT CUSHION PAD)


(a) Check the resistance.

(1) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A-1 - A-3	Front passenger side seat occupied	Below 100 Ω	Ω
A-1 - A-3	Front passenger side seat not occupied	1 MΩ or higher	MΩ

If the result is not as specified, replace the occupant detection sensor (separate type front seat cushion pad).

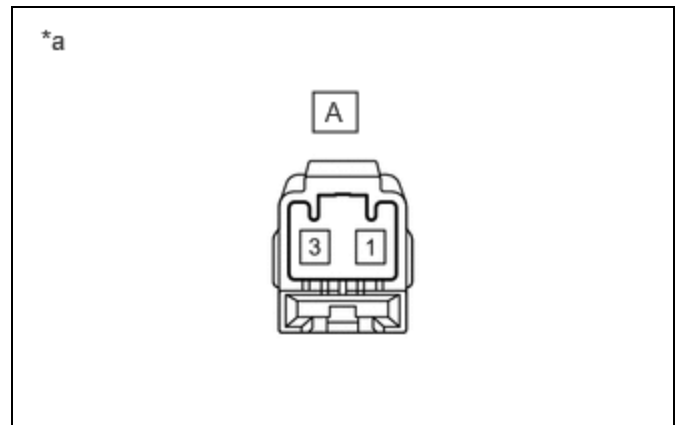

*a	Component without harness connected (Occupant Detection Sensor (Separate Type Front Seat Cushion Pad))
----	--

