

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029ZOT
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT BELT: REAR CENTER SEAT OUTER BELT ASSEMBLY: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

## PROCEDURE


### 1. INSPECT REAR CENTER SEAT OUTER BELT ASSEMBLY

- (a) Before installing the rear center seat outer belt assembly, check the ELR function.

**NOTICE:**

Do not disassemble the retractor.

- (1) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks. If the result is not as specified, replace the rear center seat outer belt assembly.

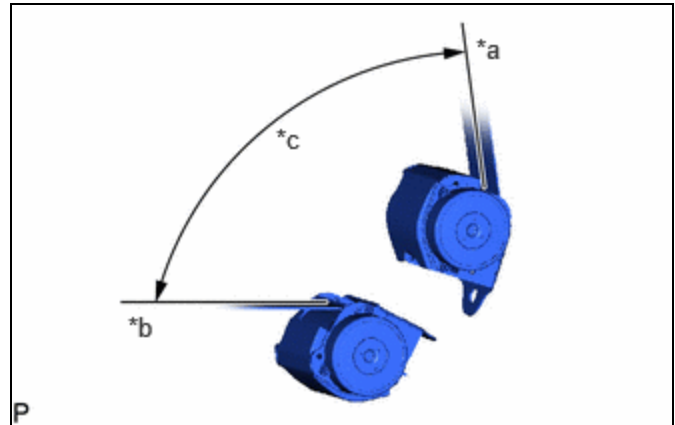

*a	Unlock
*b	Lock
*c	45°

