

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029ZOL
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT BELT: REAR SEAT INNER BELT ASSEMBLY (for RH Side): INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

## PROCEDURE

### 1. INSPECT REAR SEAT INNER BELT ASSEMBLY RH

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:




[Click Location & Routing\(R54\)](#)

[Click Connector\(R54\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R54-5(RBR+) - R54-4(RBR-)	Rear seat belt RH unfastened	Below 1 Ω	Ω
R54-5(RBR+) - R54-4(RBR-)	Rear seat belt RH fastened	10 kΩ or higher	kΩ

If the result is not as specified, replace the rear seat inner belt assembly RH.

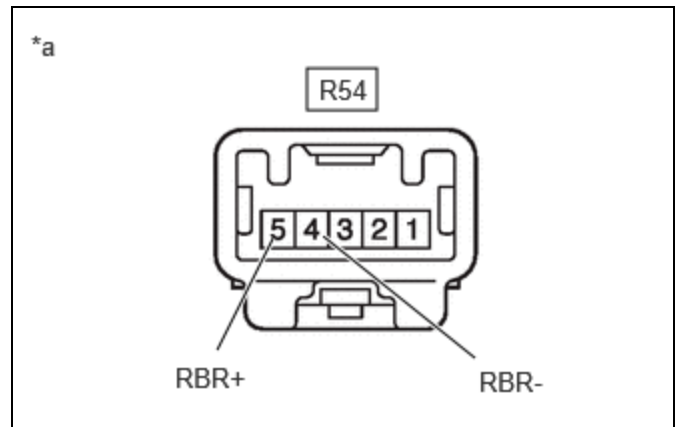

*a	Component without harness connected (Rear Seat inner Belt Assembly RH)
----	--

