

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002BGNG
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> SEAT BELT: REAR SEAT INNER BELT ASSEMBLY (for RH Side): REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## REMOVAL

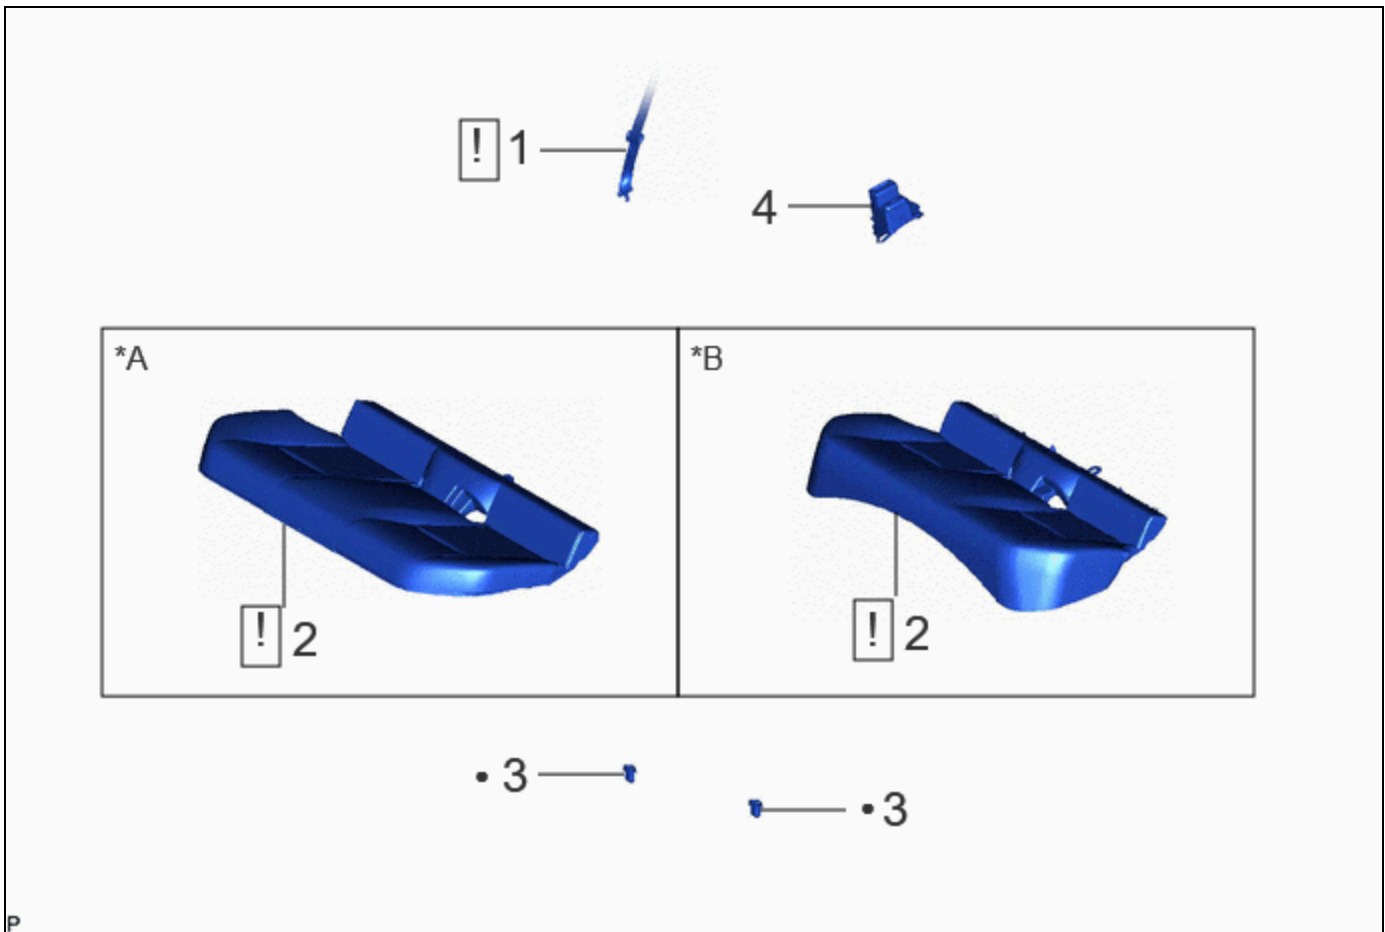
### CAUTION / NOTICE / HINT

**CAUTION:**




Wear protective gloves. Sharp areas on the parts may injure your hands.

### CAUTION / NOTICE / HINT

#### COMPONENTS (REMOVAL)




	PROCEDURE	PART NAME CODE			
1	REAR CENTER SEAT OUTER BELT ASSEMBLY	73350C	INFO	-	-
2	REAR SEAT CUSHION ASSEMBLY	-	INFO	-	-
3	REAR SEAT CUSHION LOCK HOOK	72693	-	-	-

PROCEDURE		PART NAME CODE			
4	REAR SEAT INNER BELT ASSEMBLY RH	73380X	-	-	-


*A	for HEV Model	*B	for PHEV Model
•	Non-reusable part	-	-

## PROCEDURE

### 1. DISCONNECT REAR CENTER SEAT OUTER BELT ASSEMBLY

	Click here <a href="#">INFO</a>
---	---------------------------------

### 2. REMOVE REAR SEAT CUSHION ASSEMBLY

	Click here <a href="#">INFO</a>
---	---------------------------------

### 3. REMOVE REAR SEAT CUSHION LOCK HOOK

Click here [INFO](#)

### 4. REMOVE REAR SEAT INNER BELT ASSEMBLY RH

