


<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028UZZ
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SUPPLEMENTAL RESTRAINT SYSTEMS: SIDE AIRBAG SENSOR (for Front Door): INSTALLATION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		





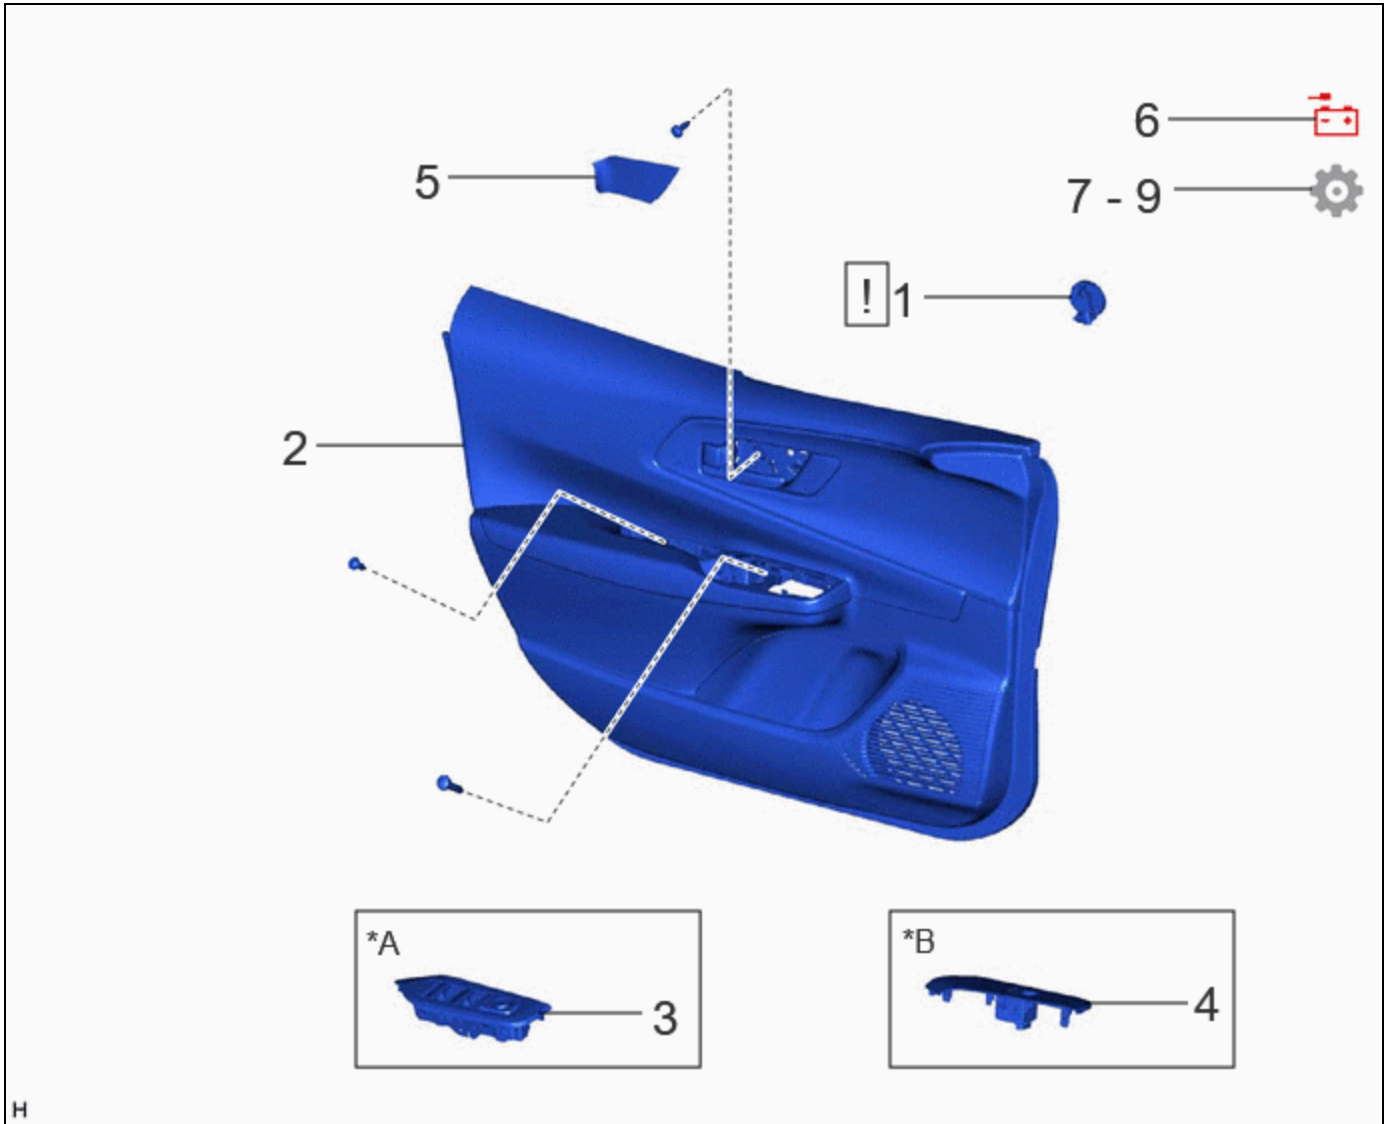


## INSTALLATION

### CAUTION / NOTICE / HINT

#### COMPONENTS (INSTALLATION)




PROCEDURE		PART NAME CODE	!	📄	⚙️
1	SIDE AIRBAG PRESSURE SENSOR	8983AA	INFO	-	-
2	FRONT DOOR TRIM BOARD SUB-ASSEMBLY	67602	-	-	-

	PROCEDURE	PART NAME CODE			
3	MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY WITH FRONT DOOR UPPER ARMREST BASE PANEL	-	-	-	-
4	POWER WINDOW REGULATOR SWITCH ASSEMBLY WITH FRONT DOOR UPPER ARMREST BASE PANEL	-	-	-	-
5	FRONT DOOR TRIM UPPER COVER	67782B	-	-	-
6	CONNECT CABLE TO NEGATIVE AUXILIARY BATTERY TERMINAL	-		-	-
7	INSPECT SRS WARNING LIGHT	-	-	-	
8	INITIALIZATION AFTER RECONNECTING AUXILIARY BATTERY TERMINAL	-	-	-	
9	INSPECT POWER WINDOW OPERATION	-	-	-	

*A	for Driver Side	*B	for Front Passenger Side
----	-----------------	----	--------------------------

## PROCEDURE

### 1. INSTALL SIDE AIRBAG PRESSURE SENSOR

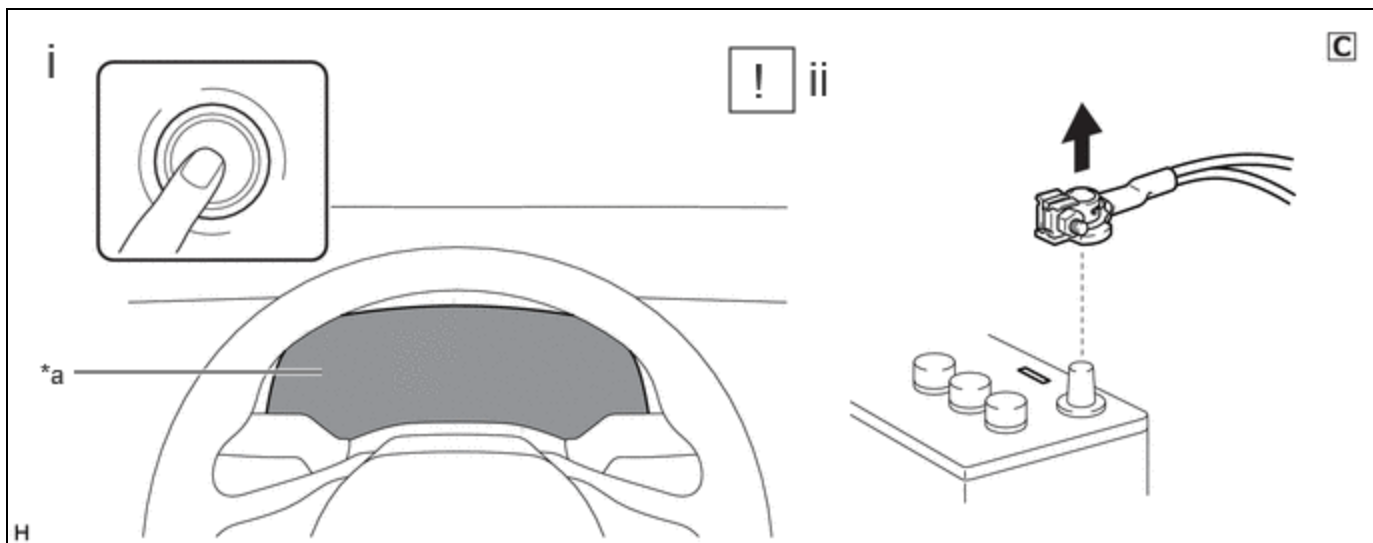



*a	Illumination off	-	-
----	------------------	---	---

- (1) Check that the ignition switch is off.
- (2) Check that the cable is disconnected from the negative (-) auxiliary battery terminal.

**CAUTION:**

Wait at least 60 seconds after disconnecting the cable from the negative (-) auxiliary battery terminal to disable the SRS system.

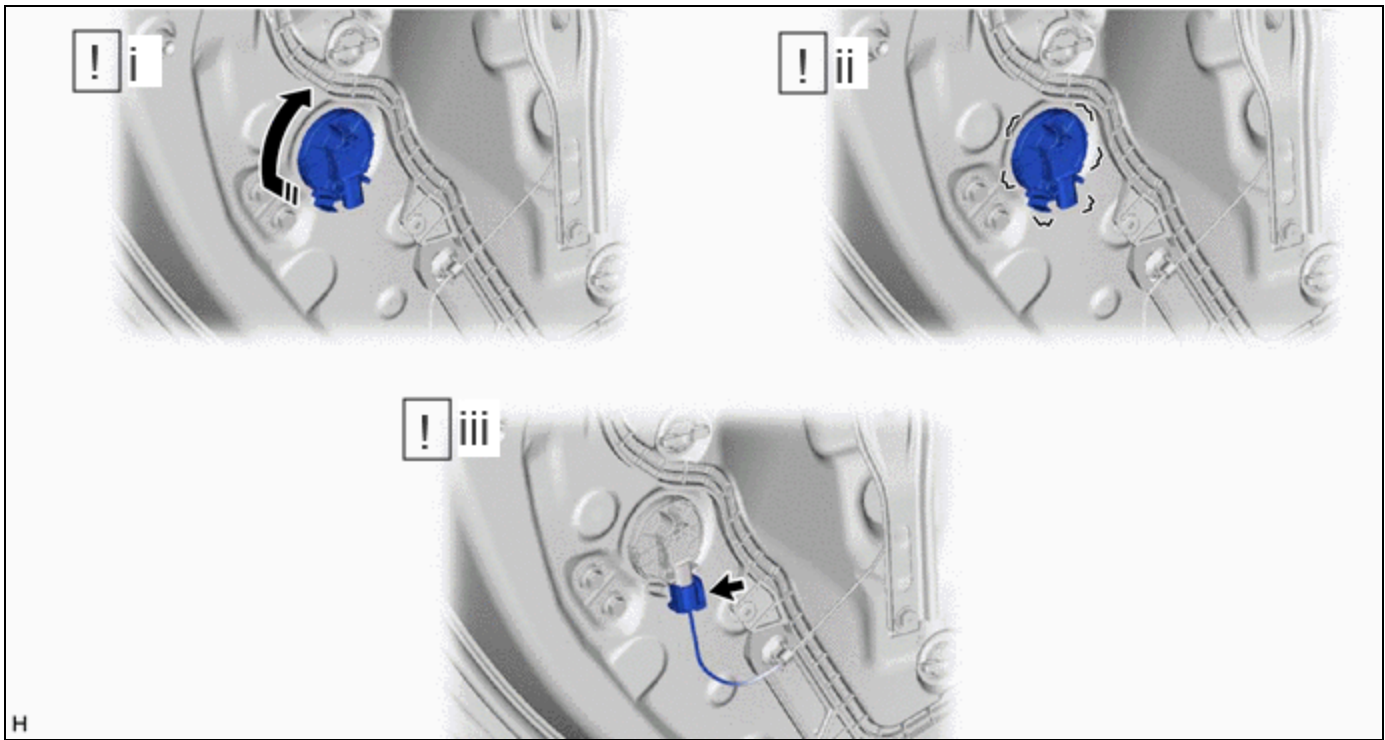

	Install in this Direction	-	-
---	---------------------------	---	---

(1) Install the side airbag pressure sensor to the front door panel as shown in the illustration.

**NOTICE:**

- If the side airbag pressure sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
- When installing the side airbag pressure sensor, make sure that the SRS wiring does not interfere with or is not pinched between other parts.

(2) Check that there is no looseness in the installed parts of the side airbag pressure sensor.

(3) Connect the connector to the side airbag pressure sensor.

**NOTICE:**

When connecting any airbag connector, take care not to damage the airbag wire harness.

**HINT:**

Refer to How to Connect or Disconnect Airbag Connector.

Click here [INFO](#)

**2. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY**

**3. INSTALL MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY WITH FRONT DOOR UPPER ARMREST BASE PANEL (for Driver Side)**

**4. INSTALL POWER WINDOW REGULATOR SWITCH ASSEMBLY WITH FRONT DOOR UPPER ARMREST BASE PANEL (for Front Passenger Side)**

**5. INSTALL FRONT DOOR TRIM UPPER COVER**

**6. CONNECT CABLE TO NEGATIVE AUXILIARY BATTERY TERMINAL**

- for M20A-FXS:

Click here [INFO](#)

- for 2ZR-FXE:

Click here [INFO](#)

## 7. INSPECT SRS WARNING LIGHT

Click here [INFO](#)

## 8. INITIALIZATION AFTER RECONNECTING AUXILIARY BATTERY TERMINAL

### HINT:

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

Click here [INFO](#)

## 9. INSPECT POWER WINDOW OPERATION

Click here [INFO](#)

