


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000000290DY
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: THEFT DETERRENT / KEYLESS ENTRY: CERTIFICATION ECU: INSTALLATION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

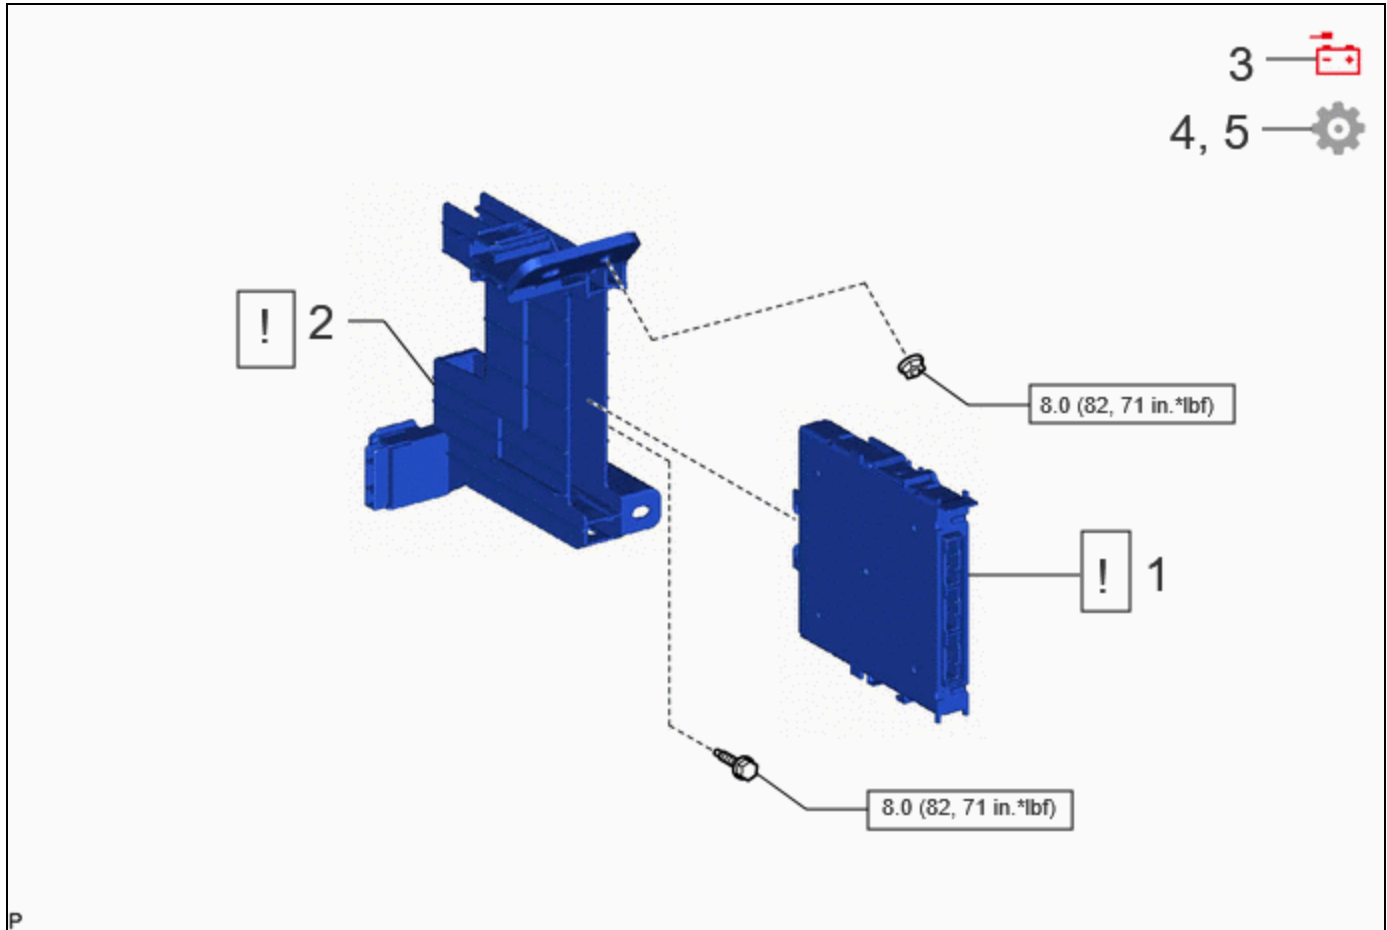


INSTALLATION


CAUTION / NOTICE / HINT

COMPONENTS (INSTALLATION)




	PROCEDURE	PART NAME CODE			
1	CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)	89990A	INFO	-	-
2	JUNCTION BLOCK BRACKET	82673A	INFO	-	-
3	CONNECT CABLE TO NEGATIVE AUXILIARY BATTERY TERMINAL	-	-	-	-
4	PERFORM CODE REGISTRATION	-	-	-	INFO

PROCEDURE	PART NAME CODE			
5 INITIALIZATION AFTER RECONNECTING AUXILIARY BATTERY TERMINAL	-	-	-	INFO

	N*m (kgf*cm, ft.*lbf): Specified torque	-	-
---	---	---	---

PROCEDURE

1. INSTALL CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

	<p>NOTICE:</p> <ul style="list-style-type: none"> • Make sure that the certification ECU (smart key ECU assembly) is securely installed. • If the junction block bracket is deformed or damaged, replace it. • Do not bend the 2 claws more than necessary.
---	---

2. INSTALL JUNCTION BLOCK BRACKET

	Click here INFO
---	---------------------------------

Torque:

8.0 N·m {82 kgf·cm, 71 in·lbf}

3. CONNECT CABLE TO NEGATIVE AUXILIARY BATTERY TERMINAL

(a) for M20A-FXS:

Click here [INFO](#)

(b) for 2ZR-FXE:

Click here [INFO](#)

4. PERFORM CODE REGISTRATION

Click here [INFO](#)

5. INITIALIZATION AFTER RECONNECTING AUXILIARY BATTERY TERMINAL

HINT:

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

Click here [INFO](#)

