


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000000290Z7
Model Year Start: 2023	Model: Prius	Prod Date Range: [12/2022 -]
Title: HEATING / AIR CONDITIONING: AIR CONDITIONING SYSTEM (for HEV Model): INITIALIZATION; 2023 - 2024 MY Prius [12/2022 -]		

INITIALIZATION

SERVO MOTOR INITIALIZATION

- (a) Press the A/C OFF switch.
- (b) According to the GTS display, perform servo motor initialization.

Body Electrical > Air Conditioner > Utility

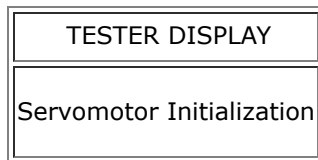

HINT:

- When initialization is started, the AUTO switch indicator will illuminate and then will turn off when initialization has completed.
 - Initialization is also performed when the ignition switch is turned to ON (IG) for the first time after disconnecting and reconnecting the cable to the (-) auxiliary battery terminal.
- (c) Select Exit to complete initialization.

