

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BEM4
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> HEATING / AIR CONDITIONING: AIR CONDITIONING SYSTEM (for PHEV Model): B140287; Lost Communication with Front Air Outlet Damper Control Servo Motor LIN Missing Message; 2023 - 2024 MY Prius Prime [03/2023 - ]		

<b>DTC</b>	<b>B140287</b>	<b>Lost Communication with Front Air Outlet Damper Control Servo Motor LIN Missing Message</b>
------------	----------------	--

## DESCRIPTION

The air conditioning harness assembly connects the air conditioning amplifier assembly and No. 1 air conditioning radiator damper servo sub-assembly.

The No. 1 air conditioning radiator damper servo sub-assembly sends damper position information to the air conditioning amplifier assembly.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	MEMORY	DTC OUTPUT FROM	PRIORITY	NOTE
B140287	Lost Communication with Front Air Outlet Damper Control Servo Motor LIN Missing Message	Diagnosis Condition:  Ignition switch ON  Malfunction:  Error or open in communication line between air conditioning amplifier assembly and No. 1 air conditioning radiator damper servo sub-assembly  Detection Time:  Continuously for 10 seconds or more	No. 1 air conditioning radiator damper servo sub-assembly	Does not come on	Memorized	Air Conditioner	B	-

### DTC Detection Condition Combination Table


		VEHICLE CONDITION	
		PATTERN 1	PATTERN 2
Diagnosis Condition	Ignition switch ON	○	○

		VEHICLE CONDITION	
		PATTERN 1	PATTERN 2
Malfunction	Error in communication line between air conditioning amplifier assembly and No. 1 air conditioning radiator damper servo sub-assembly	○	-
	Open in communication line between air conditioning amplifier assembly and No. 1 air conditioning radiator damper servo sub-assembly	-	○
Detection Time		Continuously for 10 seconds or more	Continuously for 10 seconds or more
Trip Count		1 trip	1 trip

**HINT:**

If the conditions of either of these patterns are detected, a DTC will be stored.

**WIRING DIAGRAM**

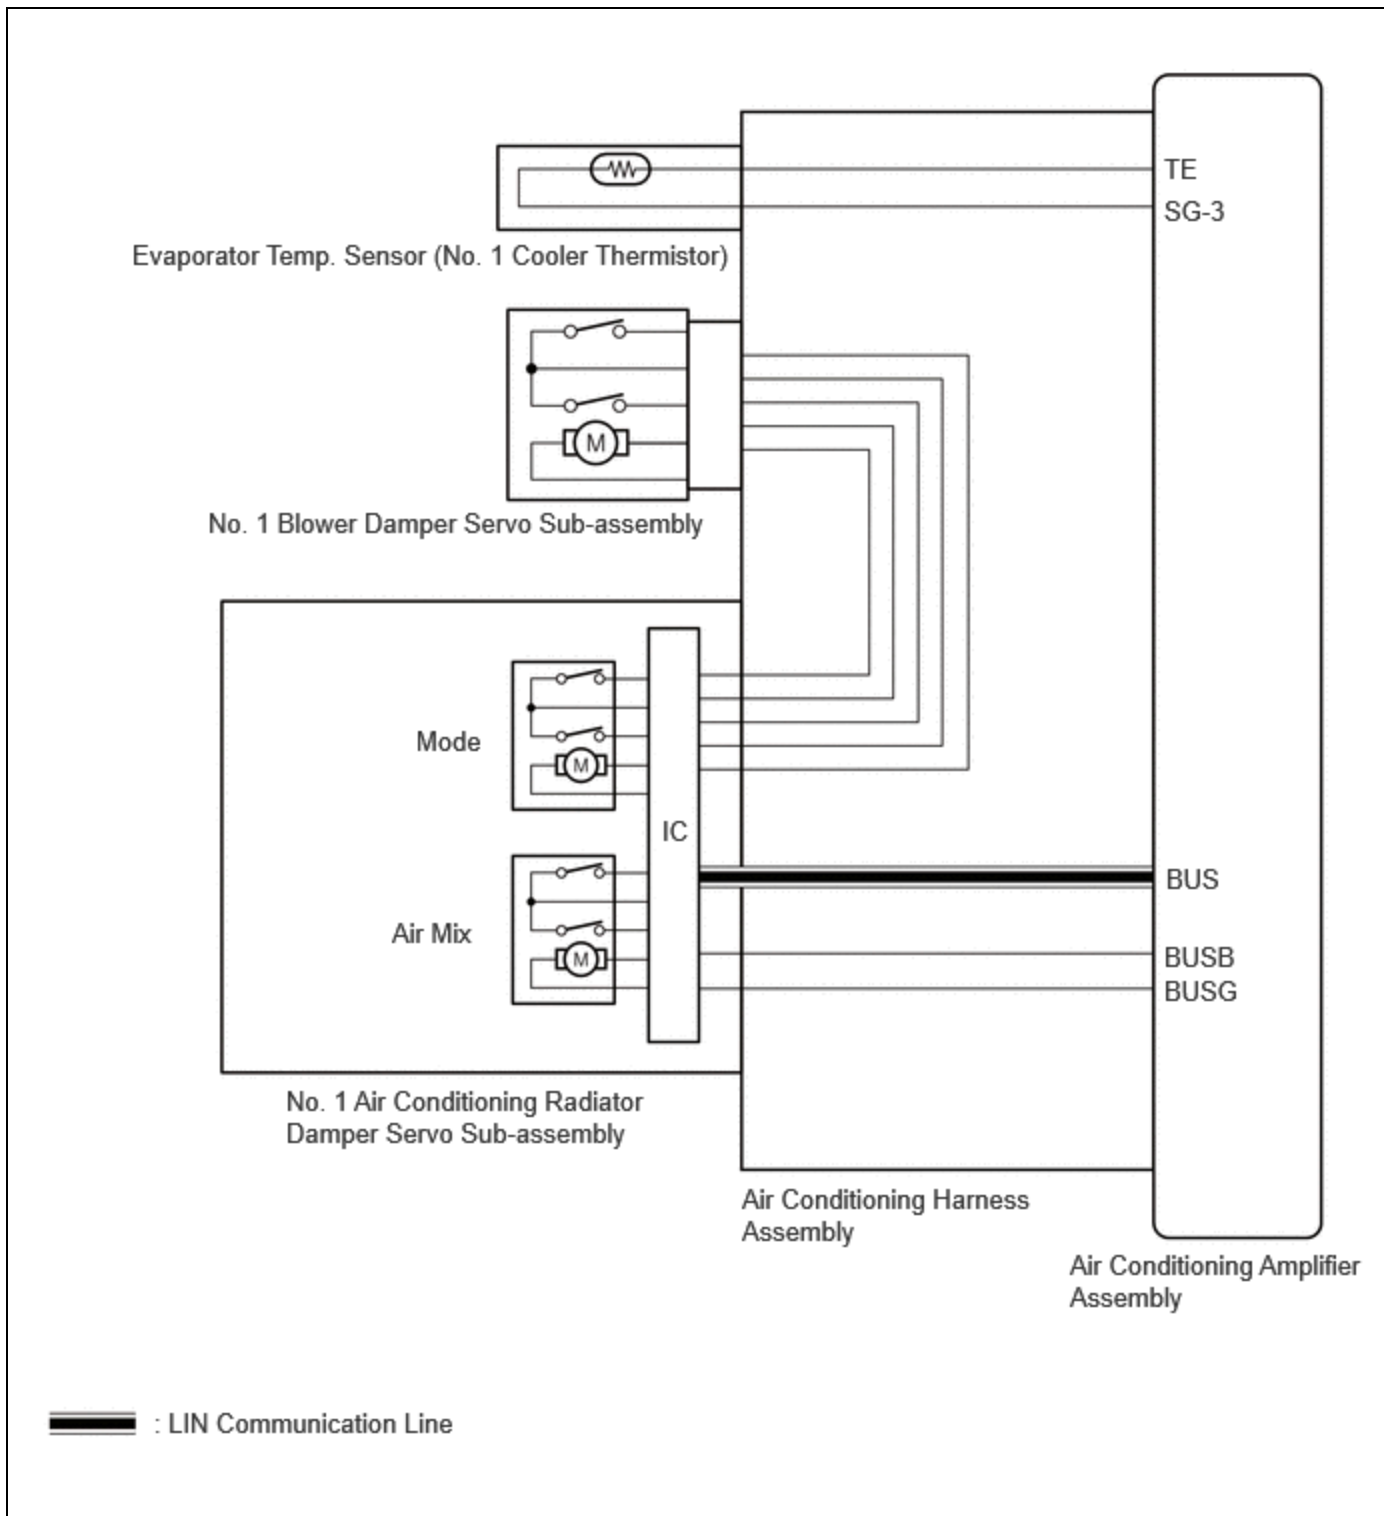

## PROCEDURE

<b>1.</b>	<b>CHECK FOR DTC</b>
-----------	----------------------

(a) Check for DTCs.

**Body Electrical > Air Conditioner > Trouble Codes**

RESULT	PROCEED TO
B142A88 is output	A
B142A88 is not output	B

**A** ► **GO TO DTC B142A88**

**B** ► **REPLACE NO. 1 AIR CONDITIONING RADIATOR  
DAMPER SERVO SUB-ASSEMBLY**

