

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002AQO5
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: HEATING / AIR CONDITIONING: AIR CONDITIONING SYSTEM (for PHEV Model): INITIALIZATION; 2023 - 2024 MY Prius Prime [03/2023 -]		

INITIALIZATION

PERFORM SERVO MOTOR INITIALIZATION AND EXPANSION VALVE INITIALIZATION

- Press the A/C OFF switch.
- According to the GTS display, perform servo motor initialization.

Body Electrical > Air Conditioner > Utility

TESTER DISPLAY
Servomotor Initialization

HINT:

- When initialization is started, the AUTO switch indicator will illuminate and then will turn off when initialization has completed.
- Check the Data List for the initialization status of the electric expansion valve.

Click here [INFO](#)

- Initialization is also performed when the ignition switch is turned to ON (IG) for the first time after disconnecting and reconnecting the cable to the (-) auxiliary battery terminal.

- Select Exit to complete initialization.

