


| | | |
|--|---------------------------|--------------------------------------|
| Last Modified: 12-04-2024 | 6.11:8.1.0 | Doc ID: RM10000002B0S7 |
| Model Year Start: 2023 | Model: Prius Prime | Prod Date Range: [03/2023 -] |
| Title: HEATING / AIR CONDITIONING: FRONT EVAPORATOR FRONT SOLENOID VALVE: INSPECTION; 2023 - 2024 MY Prius Prius Prime [03/2023 -] | | |

INSPECTION

PROCEDURE

1. INSPECT NO. 1 MAGNET VALVE ASSEMBLY

- (a) Apply auxiliary battery voltage to the terminals of the connector, and check the No. 1 magnet valve assembly operates.

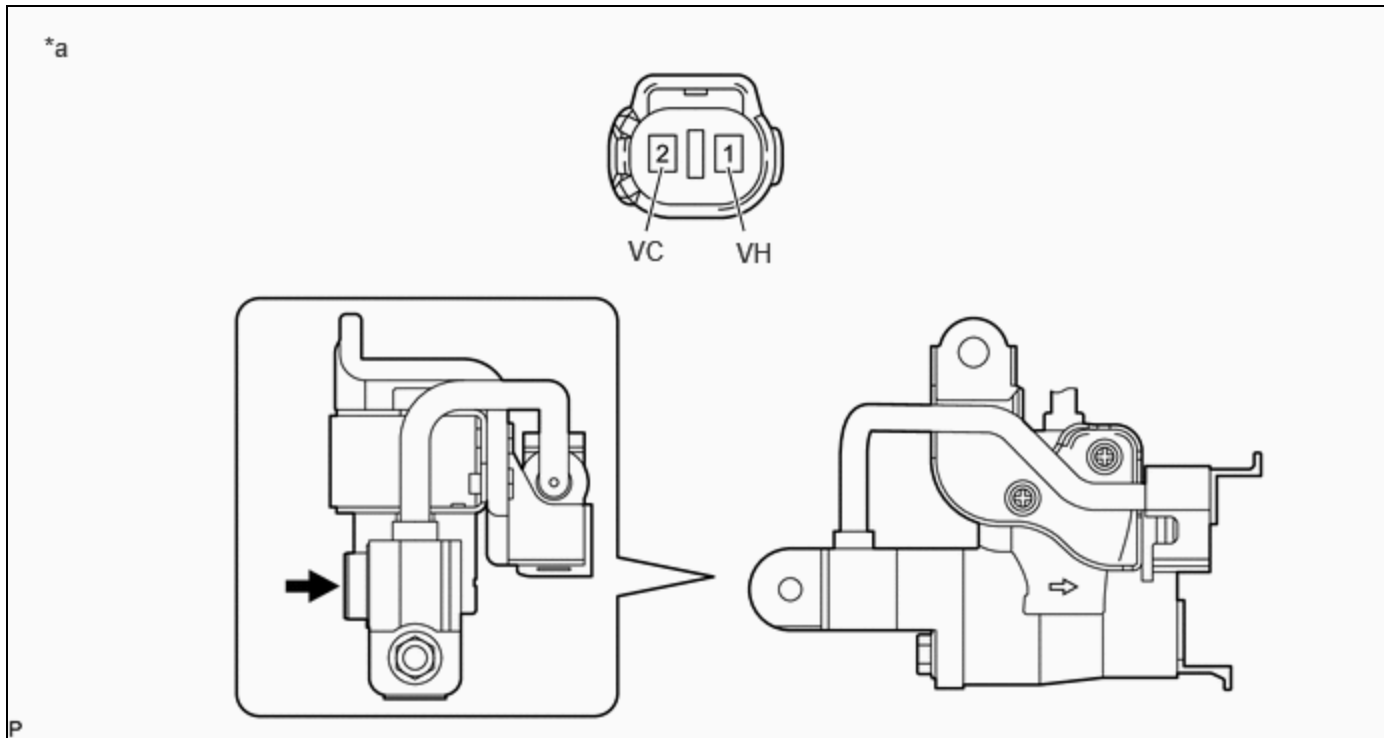

| | | | |
|----|--|---|---|
| *a | Component without harness connected (No. 1 Magnet Valve Assembly) | - | - |
|----|--|---|---|

OK:

| TESTER CONNECTION | SPECIFIED CONDITION |
|--|---|
| Auxiliary battery positive (+) → 2 (VC) Auxiliary battery negative (-) → 1 (VH) | Apply compressed air to the air inlet and check that air not comes out from the air outlet. |

If the result is not as specified, replace the No. 1 magnet valve assembly.

