

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002AXER
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: HEATING / AIR CONDITIONING: LOW PRESSURE MAGNETIC VALVE: INSPECTION; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

INSPECTION

PROCEDURE


1. INSPECT NO. 3 MAGNET VALVE ASSEMBLY

(a) Apply auxiliary battery voltage to the terminals of the connector, and check the No. 3 magnet valve assembly operates.

OK:

AUXILIARY BATTERY CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) → 2 (VB) Auxiliary battery negative (-) → 1 (HPMV)	Apply compressed air to the air inlet and check that air not comes out from the air outlet.

If the result is not as specified, replace the No. 3 magnet valve assembly.

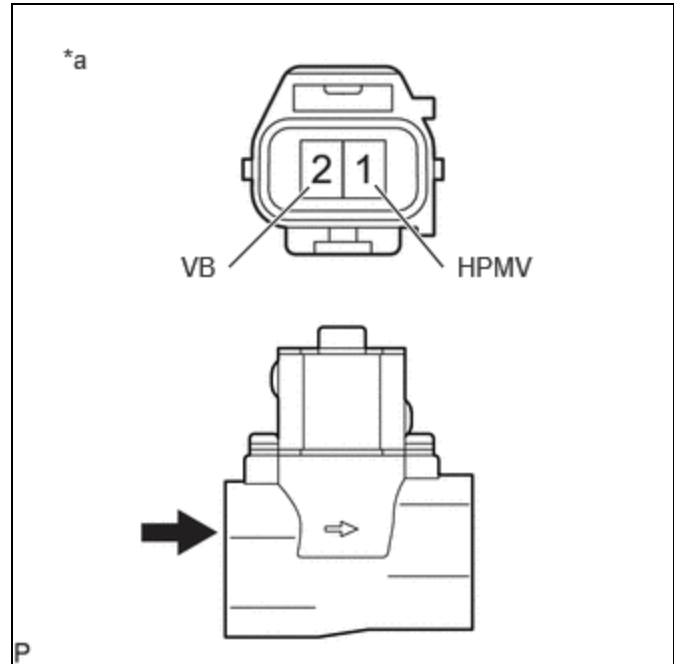

*a	Component without harness connected (No. 3 Magnet Valve Assembly)
----	---

