 


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002B1EL
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: INTERIOR PANELS / TRIM: FLOOR CARPET: INSTALLATION; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

INSTALLATION

 
CAUTION / NOTICE / HINT

COMPONENTS (INSTALLATION)

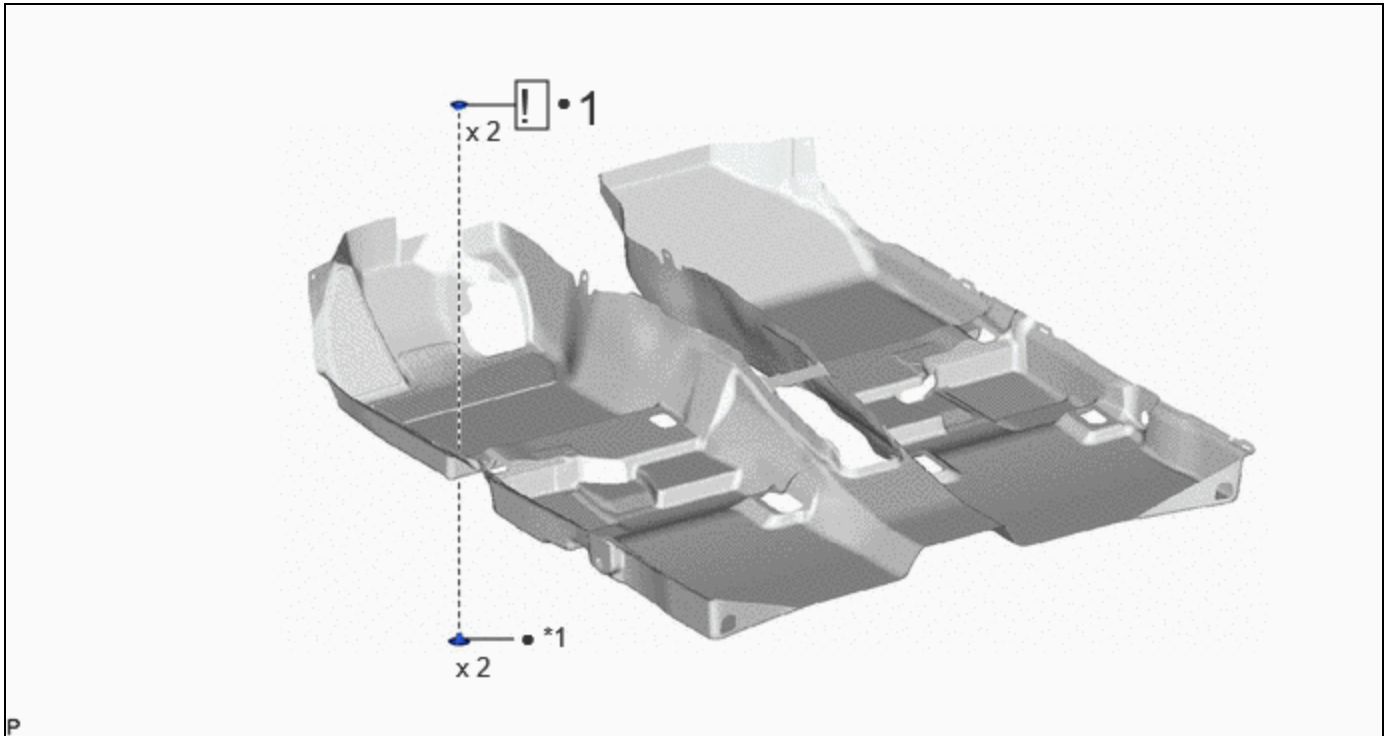 





	PROCEDURE	PART NAME CODE			
1	MAT SET UPPER PLATE	58694B	INFO	-	-

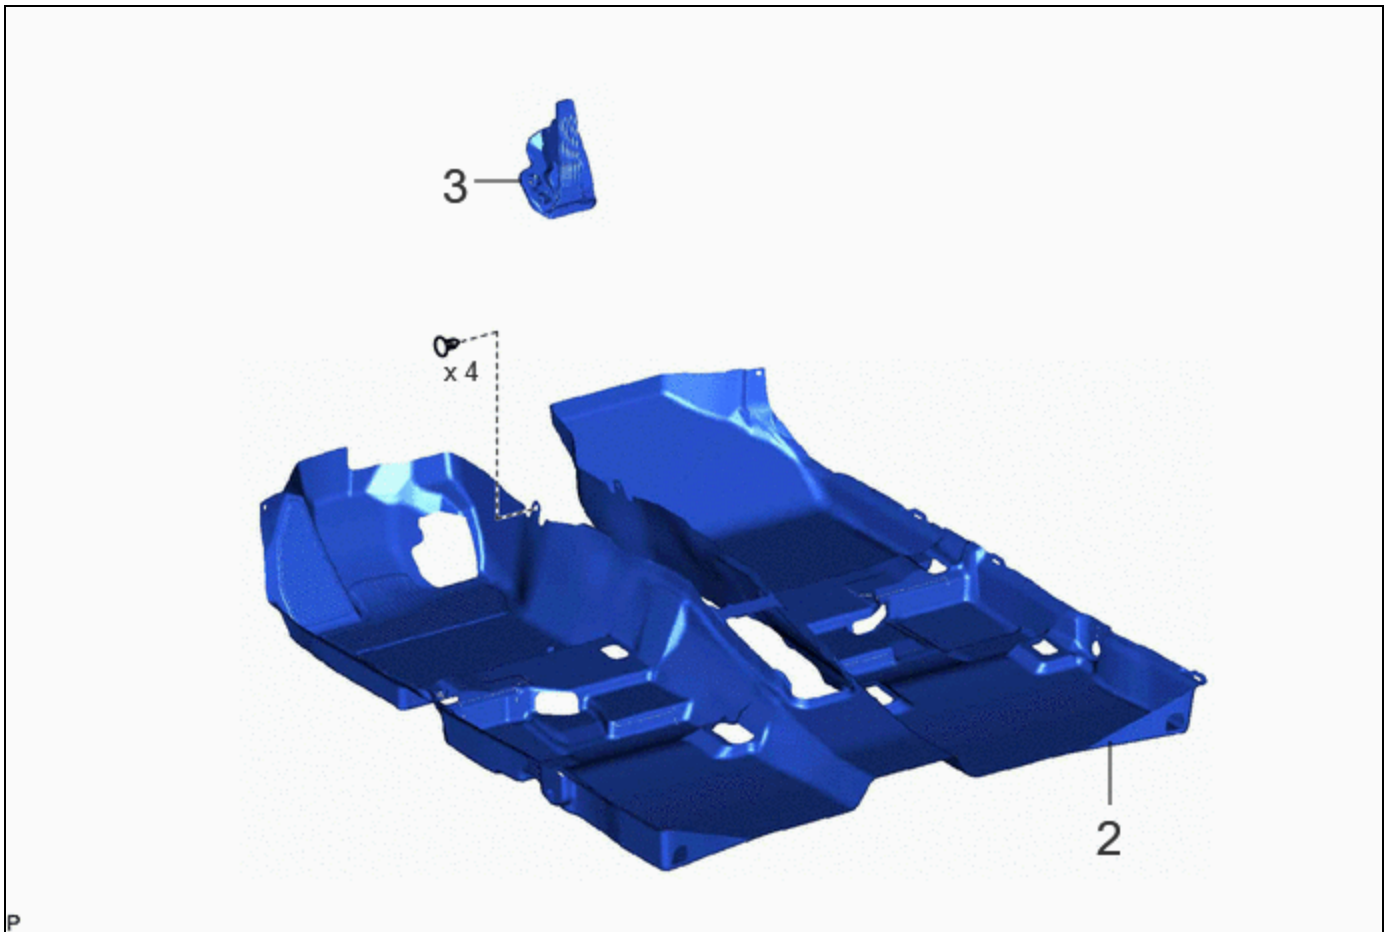
*1	MAT SET LOWER PLATE	-	-
•	Non-reusable part	-	-

 


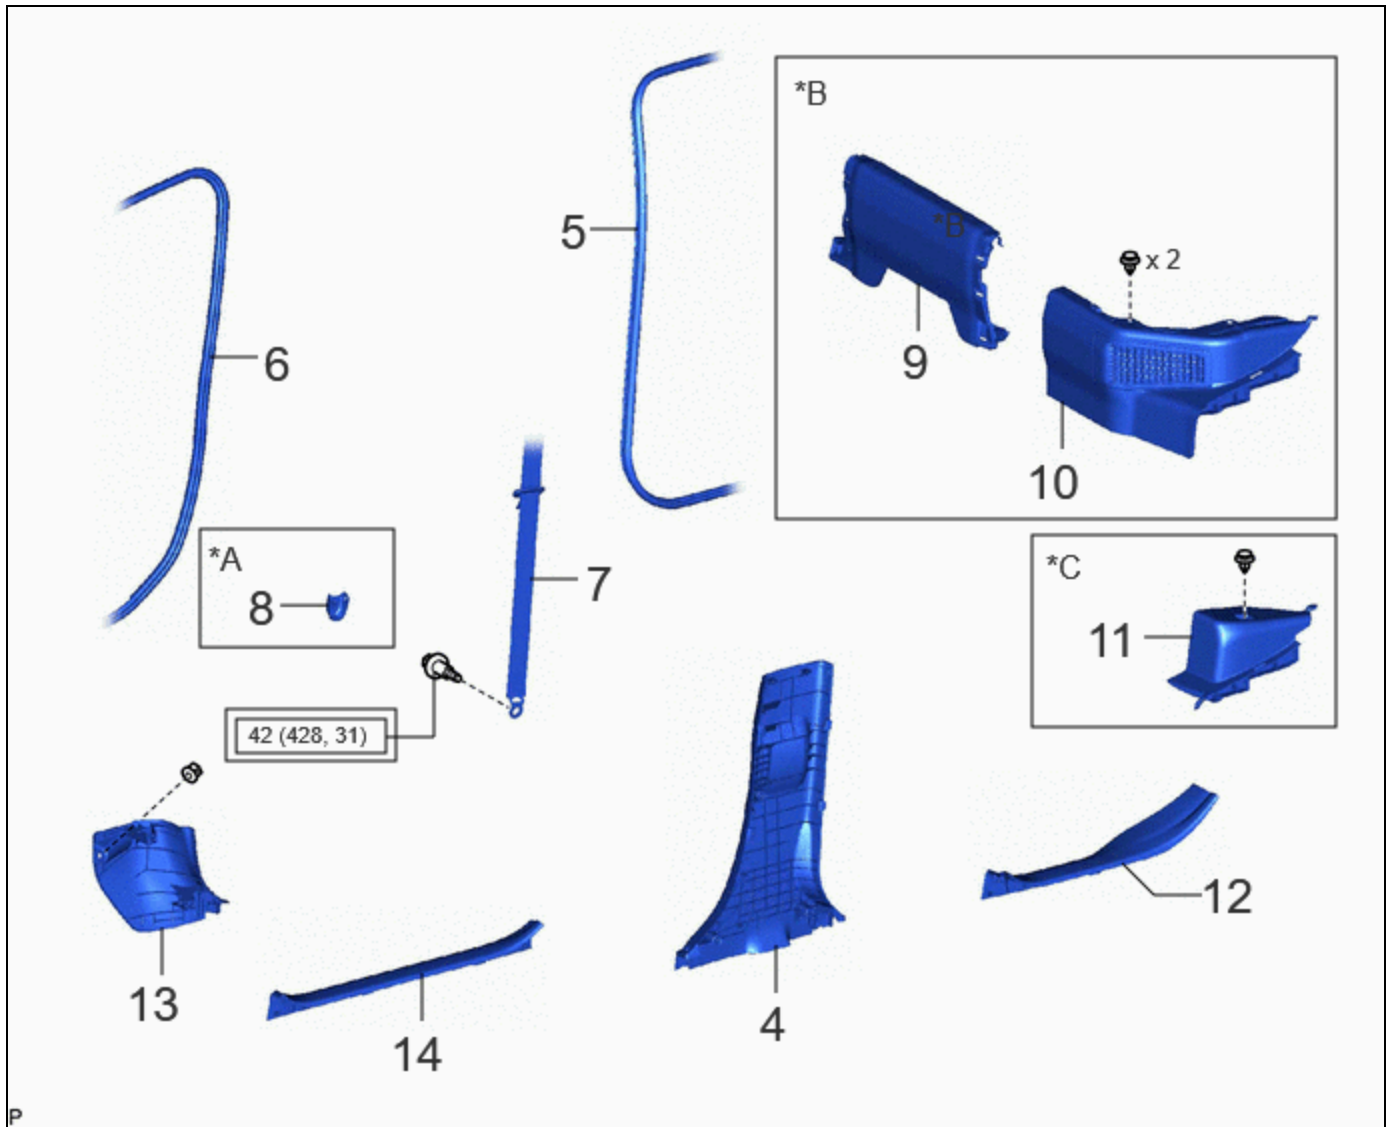


PROCEDURE	PART NAME CODE	!	✍️	⚙️
2 FRONT FLOOR CARPET ASSEMBLY	58510D	-	-	-
3 ACCELERATOR PEDAL (WITH SENSOR) ROD ASSEMBLY	78110k	-	-	-





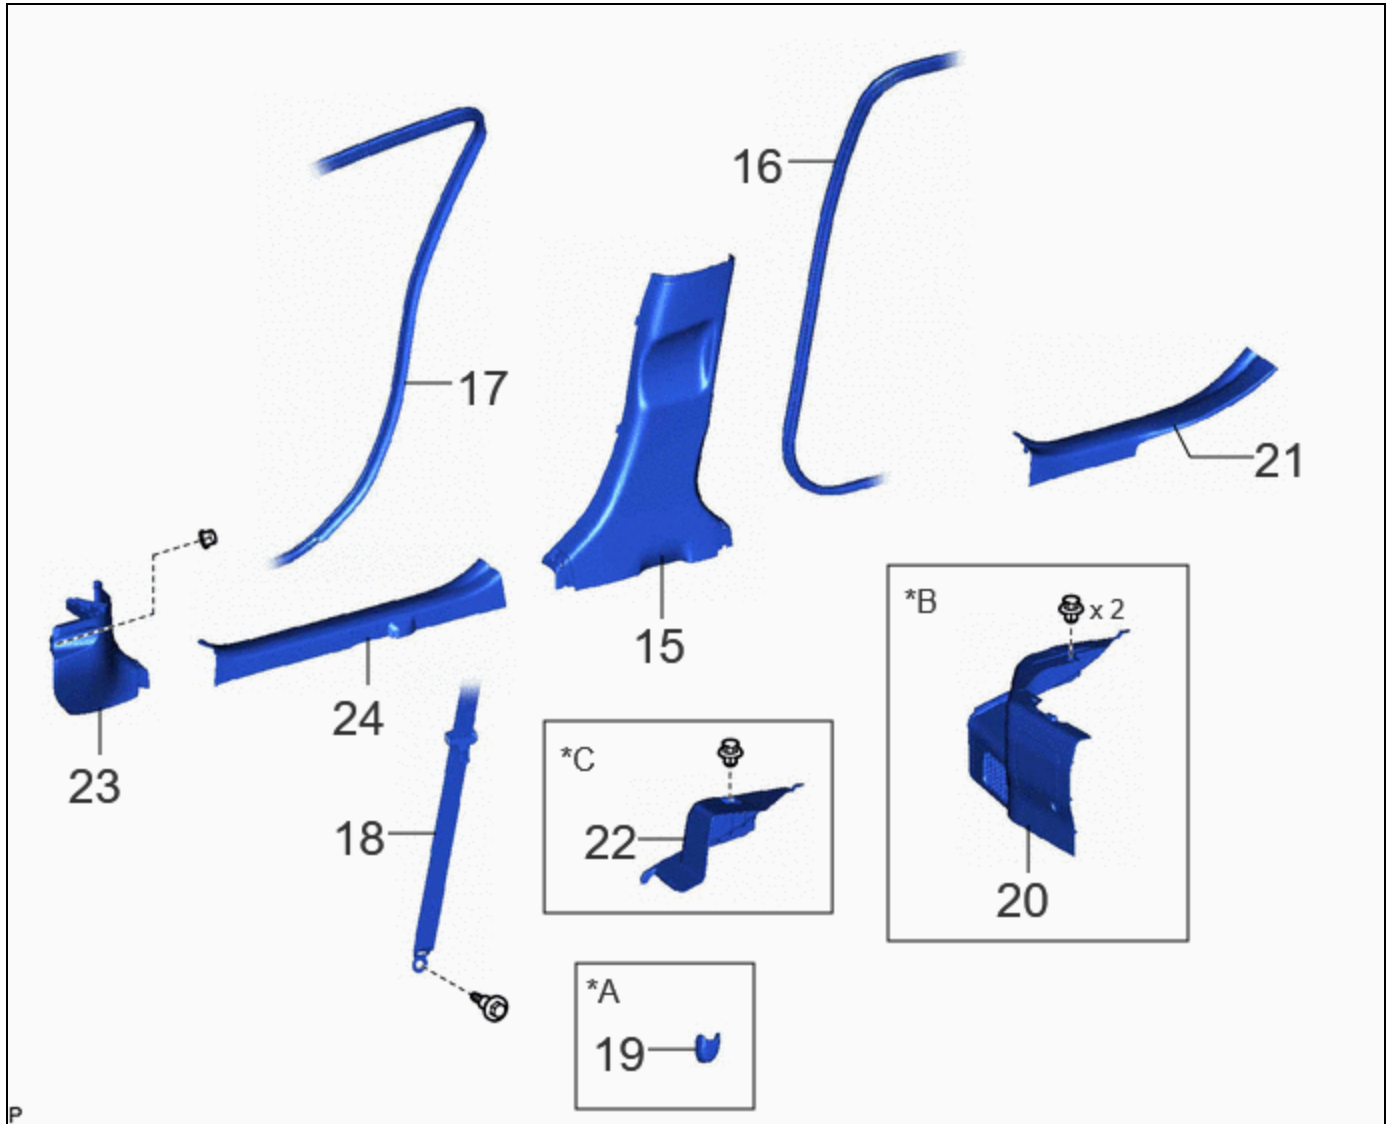

PROCEDURE		PART NAME CODE			
4	CENTER PILLAR LOWER GARNISH LH	62414A	-	-	-
5	REAR DOOR OPENING TRIM WEATHERSTRIP LH	62332A	-	-	-
6	FRONT DOOR OPENING TRIM WEATHERSTRIP LH	62312B	-	-	-
7	FRONT SEAT OUTER BELT ASSEMBLY LH	73220	-	-	-
8	LAP BELT OUTER ANCHOR COVER	73233	-	-	-
9	REAR UNDER COVER	76971F	-	-	-
10	REAR UNDER SIDE COVER LH	76974E	-	-	-
11	REAR SEAT CUSHION COVER LH	72998	-	-	-
12	REAR DOOR SCUFF PLATE INSIDE LH	67918F	-	-	-
13	COWL SIDE TRIM BOARD LH	62112	-	-	-
14	FRONT DOOR SCUFF PLATE LH	67914	-	-	-

 
*A	for LH Side	*B	for HEV Model
*C	for PHEV Model	-	-
	Tightening torque for "Major areas involving basic vehicle performance such as moving/turning/stopping": N*m (kgf*cm, ft.*lbf)	-	-






PROCEDURE		PART NAME CODE			
15	CENTER PILLAR LOWER GARNISH RH	62413A	-	-	-
16	REAR DOOR OPENING TRIM WEATHERSTRIP RH	62331A	-	-	-
17	FRONT DOOR OPENING TRIM WEATHERSTRIP RH	62311B	-	-	-
18	FRONT SEAT OUTER BELT ASSEMBLY RH	73210	-	-	-
19	LAP BELT OUTER ANCHOR COVER	73233	-	-	-

PROCEDURE		PART NAME CODE			
20	REAR UNDER SIDE COVER RH	76973E	-	-	-
21	REAR DOOR SCUFF PLATE INSIDE RH	67917F	-	-	-
22	REAR SEAT CUSHION COVER RH	72995	-	-	-
23	COWL SIDE TRIM BOARD RH	62111C	-	-	-
24	FRONT DOOR SCUFF PLATE RH	67913	-	-	-

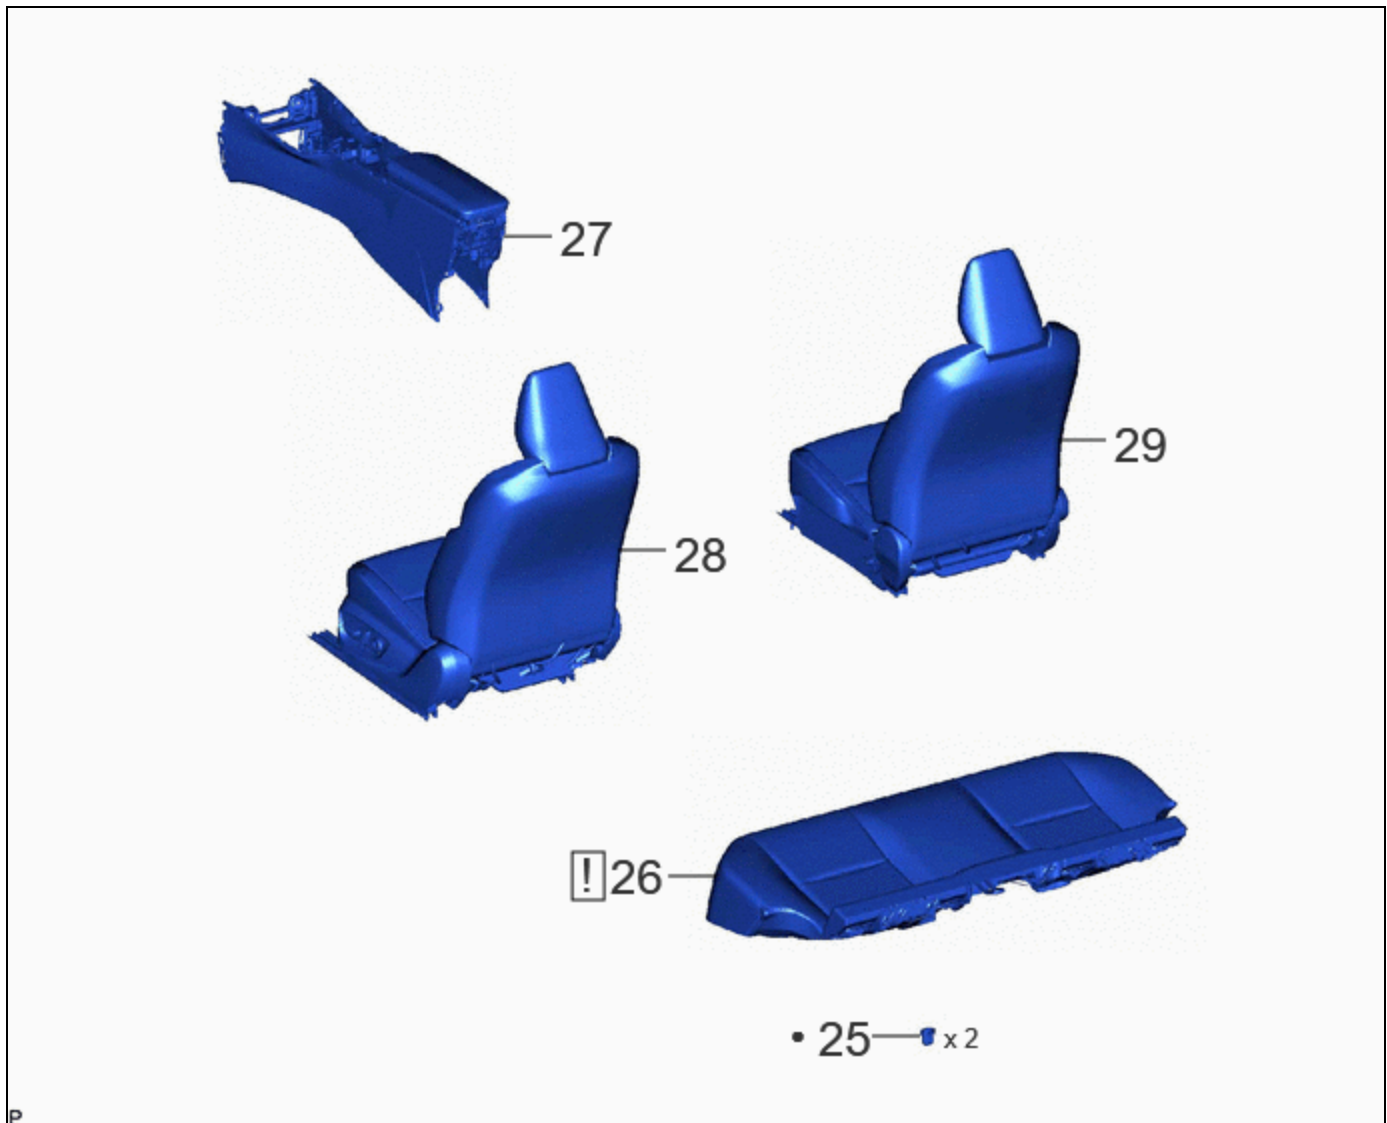*A	for RH Side	*B	for HEV Model
*C	for PHEV Model	-	-
	Tightening torque for "Major areas involving basic vehicle performance such as moving/turning/stopping": N*m (kgf*cm, ft.*lbf)	-	-




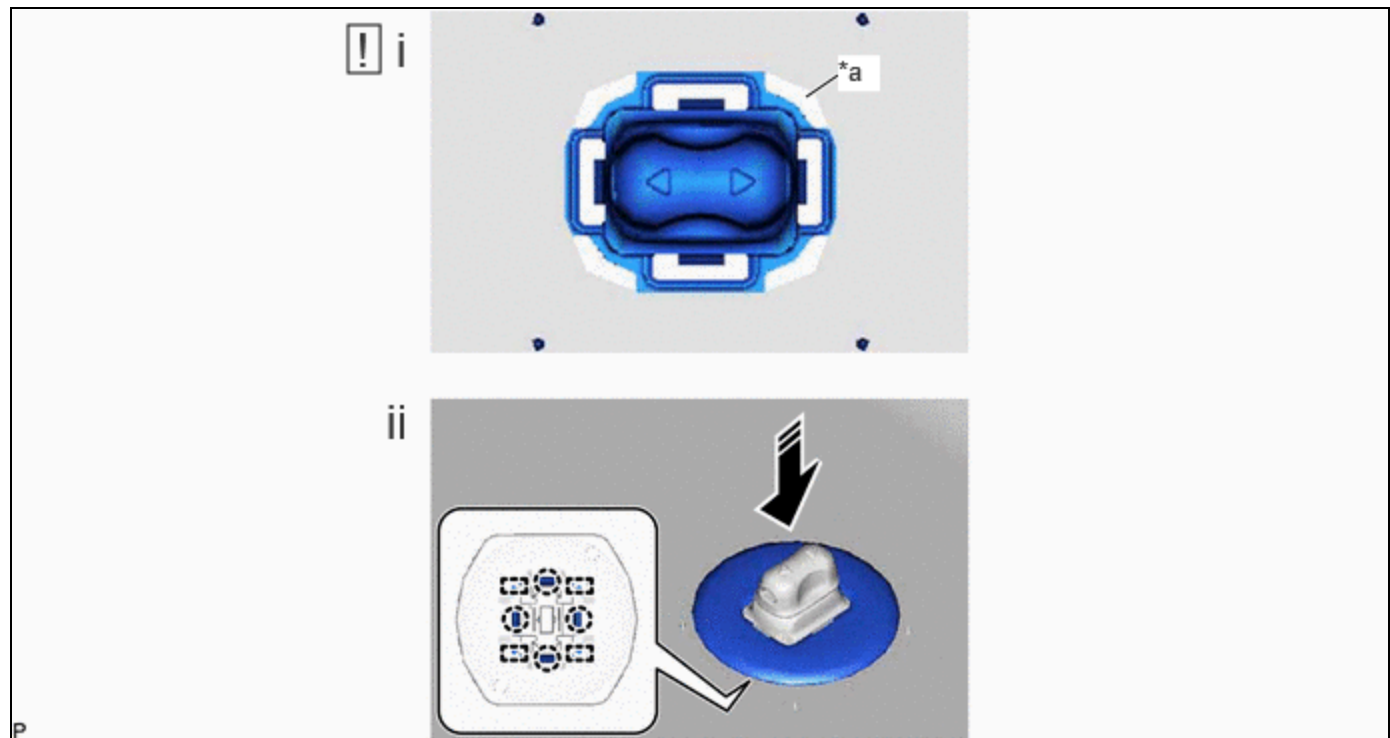 
PROCEDURE		PART NAME CODE			
25	REAR SEAT CUSHION LOCK HOOK	72693	-	-	-
26	REAR SEAT CUSHION ASSEMBLY	-	INFO	-	-
27	REAR CONSOLE BOX ASSEMBLY	-	-	-	-
28	FRONT SEAT ASSEMBLY LH	-	-	-	-
29	FRONT SEAT ASSEMBLY RH	-	-	-	-

•	Non-reusable part	-	-
---	-------------------	---	---

 
PROCEDURE

1. INSTALL MAT SET UPPER PLATE

	<p>NOTICE:</p> <ul style="list-style-type: none"> • If the mat set plate mounting holes of the front floor carpet assembly are damaged or deformed, replace the front floor carpet assembly. • Do not remove the reinforcements on the back of the mat set plate mounting holes of the front floor carpet assembly. <p>HINT:</p> <p>Perform this procedure only when replacement of the mat set plate is necessary.</p>
---	---



*a	Mounting Hole	-	-
----	---------------	---	---

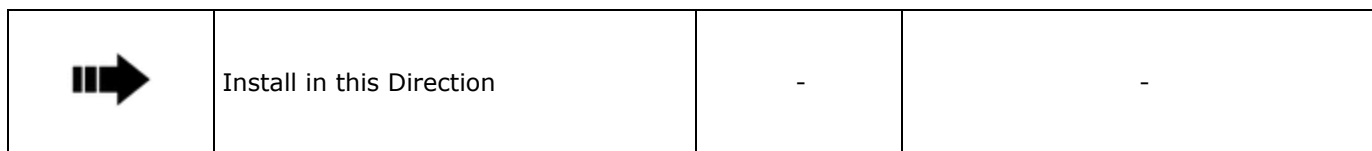

(1) Temporarily install the new mat set lower plate to the front floor carpet assembly.

NOTICE:

Align the new mat set lower plate to the mat set plate mounting holes of the front floor carpet assembly.

(2) Engage the 4 guides and 4 claws to install the new mat set upper plate to the new mat set lower plate and front floor carpet assembly as shown in the illustration.

(b) Use the same procedure for the opposite side.

2. INSTALL FRONT FLOOR CARPET ASSEMBLY

3. INSTALL ACCELERATOR PEDAL (WITH SENSOR) ROD ASSEMBLY

Click here [INFO](#)

4. INSTALL CENTER PILLAR LOWER GARNISH LH

5. CONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH

6. CONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP LH

7. CONNECT FRONT SEAT OUTER BELT ASSEMBLY LH

Click here [INFO](#)

8. INSTALL LAP BELT OUTER ANCHOR COVER (for LH Side)

9. INSTALL REAR UNDER COVER (for HEV Model)

10. INSTALL REAR UNDER SIDE COVER LH (for HEV Model)

11. INSTALL REAR SEAT CUSHION COVER LH (for PHEV Model)

12. INSTALL REAR DOOR SCUFF PLATE INSIDE LH

13. INSTALL COWL SIDE TRIM BOARD LH

14. INSTALL FRONT DOOR SCUFF PLATE LH

15. INSTALL CENTER PILLAR LOWER GARNISH RH

16. CONNECT REAR DOOR OPENING TRIM WEATHERSTRIP RH

17. CONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP RH

18. CONNECT FRONT SEAT OUTER BELT ASSEMBLY RH

(a) Use the same procedure as for the LH side.

19. INSTALL LAP BELT OUTER ANCHOR COVER (for RH Side)

20. INSTALL REAR UNDER SIDE COVER RH (for HEV Model)

21. INSTALL REAR SEAT CUSHION COVER RH (for PHEV Model)

22. INSTALL REAR DOOR SCUFF PLATE INSIDE RH

23. INSTALL COWL SIDE TRIM BOARD RH**24. INSTALL FRONT DOOR SCUFF PLATE RH****25. INSTALL REAR SEAT CUSHION LOCK HOOK****26. INSTALL REAR SEAT CUSHION ASSEMBLY**Click here [INFO](#)**27. INSTALL REAR CONSOLE BOX ASSEMBLY**Click here [INFO](#)**28. INSTALL FRONT SEAT ASSEMBLY LH**

(a) for Manual Seat:

Click here [INFO](#)

(b) for Power Seat:

Click here [INFO](#)**29. INSTALL FRONT SEAT ASSEMBLY RH**

(a) Use the same procedure as for the LH side.

