

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029ZPS
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> LIGHTING (INT): AMBIENT LIGHT (for Driver Side): INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

### PROCEDURE

#### 1. INSPECT NO. 1 INSTRUMENT PANEL LIGHT ASSEMBLY (NO. 1 INSTRUMENT PANEL GARNISH SUB-ASSEMBLY)


- (a) Apply auxiliary battery voltage to the No. 1 instrument panel light assembly (No. 1 instrument panel garnish sub-assembly) and check that the light illuminates.

OK:



[Click Location & Routing\(K52\)](#)

[Click Connector\(K52\)](#)

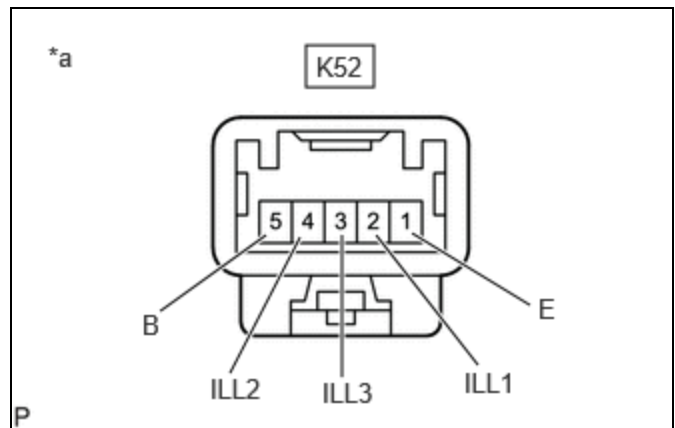

*a	Component without harness connected (No. 1 Instrument Panel Light Assembly (No. 1 Instrument Panel Garnish Sub-assembly))
----	---

TESTER CONNECTION	SPECIFIED CONDITION
K52-5 (B) → Auxiliary battery positive(+) K52-2 (ILL1), 3 (ILL3), 4 (ILL2) and 1 (E) → Auxiliary battery negative (-)	Ambient light illuminates

If the result is not as specified, replace the No. 1 instrument panel light assembly (No. 1 instrument panel garnish sub-assembly).

