

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029ZPQ
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> LIGHTING (INT): FOOTWELL LIGHT: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

### PROCEDURE

#### 1. INSPECT NO. 2 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Driver Side)

(a) Apply auxiliary battery voltage to the No. 2 interior illumination light assembly and check that the light illuminates.

OK:




[Click Location & Routing\(K28\)](#)

[Click Connector\(K28\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
K28-2 (B) - Auxiliary battery positive (+)	Front footwell light illuminates
K28-1 (L) - Auxiliary battery negative (-)	

If the result is not as specified, replace the No. 2 interior illumination light assembly.

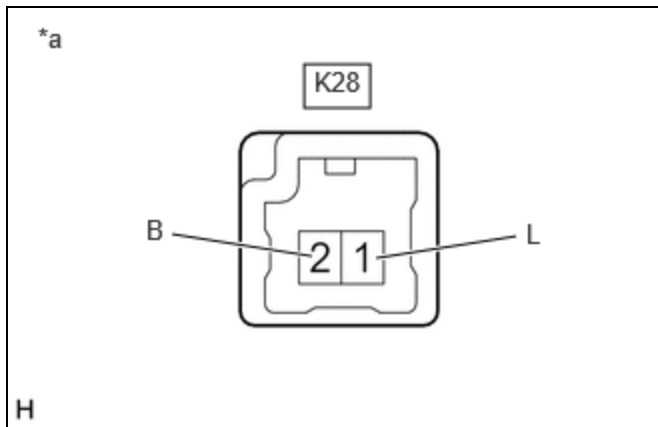

*a	Component without harness connected (No. 2 Interior Illumination Light Assembly)
----	--

#### 2. INSPECT NO. 2 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Front Passenger Side)

(a) Apply auxiliary battery voltage to the No. 2 interior illumination light assembly and check that the light illuminates.

OK:




[Click Location & Routing\(K27\)](#)

[Click Connector\(K27\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
K27-1 (B) - Auxiliary battery positive (+)	Front footwell light illuminates
K27-1 (L) - Auxiliary battery negative (-)	

If the result is not as specified, replace the No. 2 interior illumination light assembly.

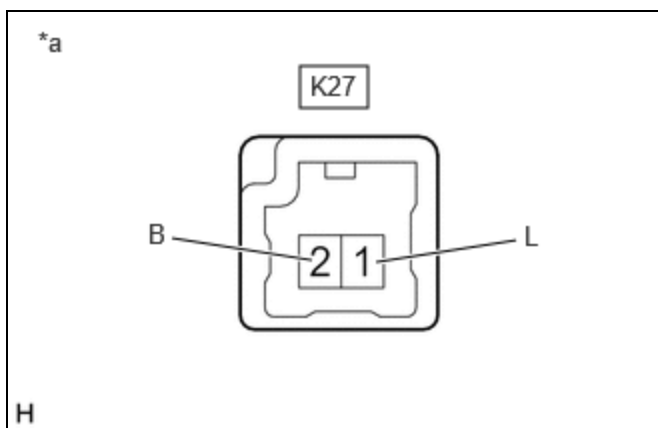

*a	Component without harness connected (No. 2 Interior Illumination Light Assembly)
----	--

